



DeviceEdge\_Orin Nano/NX Series

**AIE-CO21/CO31**

**AIE-CN31/CN41**

---

USER MANUAL

## Document Change History

Version	Date	Description
V1.0	2023/06/15	Initial Release.

## Disclaimer

The information presented in this document is for informational purposes only and may contain technical inaccuracies, omissions and typographical errors.

The information contained herein is subject to change and may be rendered inaccurate for many reasons, including but not limited to product and roadmap changes, component and motherboard version changes, new model and/or product releases, product differences between differing manufacturers, software changes, BIOS flashes, firmware upgrades, or the like. Aetina assumes no obligation to update or otherwise correct or revise this information. However, Aetina reserves the right to revise this information and to make changes from time to time to the content hereof without obligation of Aetina to notify any person of such revisions or changes.

Aetina makes no representations or warranties with respect to the contents hereof and assumes no responsibility for any inaccuracies, errors or omissions that may appear in this information. Aetina specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. in no event will Aetina be liable to any person for any direct, indirect, special or other consequential damages arising from the use of any information contained herein, even if nvidia is expressly advised of the possibility of such damages.

## Copyright Notice

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, Aetina assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

Aetina reserves the right to make changes in the product design without notice to its users.

Version 1.0

Copyright©2022 by Aetina, Inc. All rights reserved.

## Acknowledgements

All other products' name or trademarks are properties of their respective owners.

- NVIDIA®, the NVIDIA logo, Jetson™ and Jetson Xavier™ are trademarks of the NVIDIA Corporation
- Intel®, Core™ are trademarks of Intel®, Corporation.
- Microsoft Windows® is a registered trademark of Microsoft Corp
- IBM and VGA are trademarks of International Business Machines Corporation.
- Ubuntu is a registered trademark of Canonical
- ESS is a trademark of ESS Technology, Inc.

All other product names or trademarks are properties of their respective owners. No ownership is implied or assumed for products, names or trademarks not herein listed by the publisher of this document. For more information about this and other Aetina products, please visit our web-site at: <http://www.Aetina.com/>

## Customer Support Overview

Contact your distributor, sales representative, or Aetina's customer service center for technical support if you need additional assistance. Please have the following information ready before you call:

- Product name and serial number
- Description of your peripheral attachments
- Description of your software (operating system, version, application software, etc.)
- A complete description of the problem
- The exact wording of any error messages

Visit the Aetina website at <https://www.Aetina.com/support-warranty-policy.php> where you can find the latest information about the product.

## Contact Information

Aetina Corporation | Headquarters

2F-1, No.237, Sec.1, Datong Rd., Xizhi Dist., New Taipei City 221, TAIWAN

Phone +886-2-7709 2568

Fax +886-2-7746 1102

Mail [sales@Aetina.com](mailto:sales@Aetina.com)

## Worldwide Technical Support

Mail [Tech\\_support@aetina.com](mailto:Tech_support@aetina.com)

## Product Warranty (2 years)

Aetina warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Aetina, or which have been subject to misuse, abuse, accident or improper installation. Aetina assumes no liability under the terms of this warranty as a consequence of such events.

Because of Aetina's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If an Aetina product is defective, it will be repaired or replaced at no charge during the warranty period. For out of warranty repairs, you will be billed according to the cost of replacement materials, service time and freight. Please consult your dealer for more details.

If you think you have a defective product, follow these steps:

1. Collect all the information about the problem encountered. (For example, CPU speed, Aetina products used other hardware and software used, etc.) Note anything abnormal and list any onscreen messages you get when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information readily available.
3. If your product is diagnosed as defective, obtain an RMA (return merchandise authorization) number from your dealer. This allows us to process your return more quickly.
4. Carefully pack the defective product, a fully-completed Repair and Replacement Order Card and a photocopy of the proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

## ESD Warning

This product, like all electronic products, uses the product that can be damaged by electrostatic discharge (ESD). When handling, care must be taken so that the devices are not damaged. Damage due to inappropriate handling is not covered by the warranty. The following precautions must be taken:

- Do not open the protective conductive packaging until you have read the following and are at an approved anti-static workstation.
- If working on a prototyping board, use a soldering iron or station that is marked as ESD-safe.
- Always disconnect the product from the prototyping board when it is being worked on.
- Always discharge yourself by touching a grounded bare metal surface or approved anti-static mat before picking up an ESD - sensitive electronic component.
- Use an approved anti-static mat to cover your work surface.

## Safety Precautions

Please read the following safety instructions carefully. It is advised that you keep this manual for future references:

1. All cautions and warnings on the equipment should be noted.
2. Make sure the power source matches the power rating of the device.
3. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
6. Always completely disconnect the power before working on the system's hardware.
7. Keep this equipment away from humidity.
8. Put this equipment on a reliable surface during installation. Dropping it or letting it fall may cause damage.
9. The openings on the enclosure are for air convection. Protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
10. Be sure that the room in which you choose to operate your system has adequate air circulation. Ensure that the chassis cover is secure.
11. The chassis design allows cooling air to circulate effectively. An open chassis permits air leaks, which may interrupt and redirect the flow of cooling air from internal components.
12. Never pour any liquid into an opening. This may cause fire or electrical shock.
13. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
14. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
15. If any of the following situations arises, please contact our service personnel:
  - Damaged power cord or plug
  - Liquid intrusion to the device
  - Exposure to moisture
  - Device is not working as expected or in a manner as described in this manual
  - The device is dropped or damaged
  - vi. Any obvious signs of damage displayed on the device

# Contents

<b>1. Introduction</b>	<b>7</b>
1.1 Features	7
1.2 Specification	8
<b>2. Hardware Information</b>	<b>10</b>
2.1 I/O Interface	10
2.2 External Connector Summary	10
2.3 External I/O Interface	11
2.4 Power Consumption	14
2.5 Mechanical Dimensions	15
<b>3. Software Installation</b>	<b>16</b>
<b>4. Recovery Mode</b>	<b>16</b>
<b>5. Initial Setup</b>	<b>17</b>
5.1 Prepare the materials	17
5.2 Hardware connection	17
5.3 Setup details	17
<b>6. EdgeEye</b>	<b>18</b>
6.1 Aetina 360 Edge Administration Platform	18
6.2 Feature	19
6.3 System Requirements	19

# 1. Introduction

DeviceEdge Orin Nano/NX series – AIE-CO21/AIE-CO31/AIE-CN31/AIE-CN41 is a standard system, supporting for NVIDIA Jetson Orin Nano/NX. The system is with smart button for one-key recovery function to address critical system failure and real-time monitoring for status of device through the AIM (Aetina Intelligent Management).



## 1.1 Features

- Supports NVIDIA Jetson Orin Nano/NX Series
- 1 x M.2 E-Key/M-Key (128GB built-in)
- 1 x RJ-45 GbE Port
- Wide Power Input Range 12 to 24 VDC
- Operating Temperature  $-25^{\circ}\text{C} \sim +55^{\circ}\text{C}$
- Fanless Design



## 1.2 Specification

### ■ System configuration

Specification	AIE-CO21 / AIE-CO31	AIE-CN31 / AIE-CN41
Module Compatibility	Nvidia Jetson Orin Nano 4/8G	Nvidia Jetson Orin NX 8/16G
AI Performance	20/40 TOPS	70/100 TOPS
GPU	512 Core NVIDIA Ampere, with 16 Tensor Cores 1024 Core NVIDIA Ampere, with 32 Tensor Cores	1024 Core NVIDIA Ampere, with 32 Tensor Cores
CPU	6-core Arm® Cortex®-A78AE v8.2 64-bit 1.5MB L2 + 4MB L3	6-core Arm® Cortex®-A78AE v8.2 64-bit 1.5MB L2 + 4MB L3 8-core Arm® Cortex®-A78AE v8.2 64-bit 2MB L2 + 4MB L3
Memory	4GB 64-bit LPDDR5 34 GB/s 8GB 128-bit LPDDR5 68 GB/s	8GB 128-bit LPDDR5 102.4 GB/s 16GB 128-bit LPDDR5 102.4 GB/s
Storage	1 x M.2 M-Key 2242 (128GB built-in)	
Display	1 x HDMI 2.0 Type A	
RTC	With super capacitor, battery (optional)	
LAN	1 x RJ-45 GbE Port	
USB	2 x USB 3.2 Gen2 Type A 1 x OTG Type-C	
I/O Interfaces	5 x GPIO, 1 x I <sup>2</sup> C, 1 x UART, 1 x CAN (Isolation)	
Expansion	1 x M.2 E-Key 2230 (support PCIe x1 Gen3, USB 2.0) 1 x M.2 M-Key 2242 (128GB built-in, support NVMe, PCIe x4 Gen3)	1 x M.2 E-Key 2230 (support PCIe x1 Gen4, USB 2.0) 1 x M.2 M-Key 2242 (128GB built-in, support NVMe, PCIe x4 Gen4)
MISC. Function	1 x Power Button, 1 x Recovery Button, 1 x Reset Button	
Power Input / Connector	DC-in 12-24VDC / 2-Pin Terminal Block	
Power Consumption	Idle: 4.85W Full Loading: 23.6W	Idle: 3.95W Full Loading: 33.25W

---

Idle: Connect with Keyboard, Mouse and HDMI Display

Full loading: Connect with keyboard, mouse, HDMI display and LAN with CPU and GPU 100% loading

---

Dimension (W x D x H)	130 x 90.2 x 72 mm (5.11 x 3.55 x 2.83 in)
Mounting	Wall Mount / Din Rail (optional)
Net Weight	0.927 kg (2.044 lb)
Vibration	1 Grms, IEC 60068-2-64, random, 5 ~ 500 Hz, 1 hr/axis
Shock	10 G, IEC 60068-2-27, half sine, 11 ms duration
Temperature	Operating Temperature: -25°C ~ +55°C (-13°F ~ +131°F) Storage Temperature: -40°C ~ +85°C (-40°F ~ +185°F)
Humidity	95% @ 40°C (104°F) (non-condensing)

---

## 2. Hardware Information

### 2.1 I/O Interface

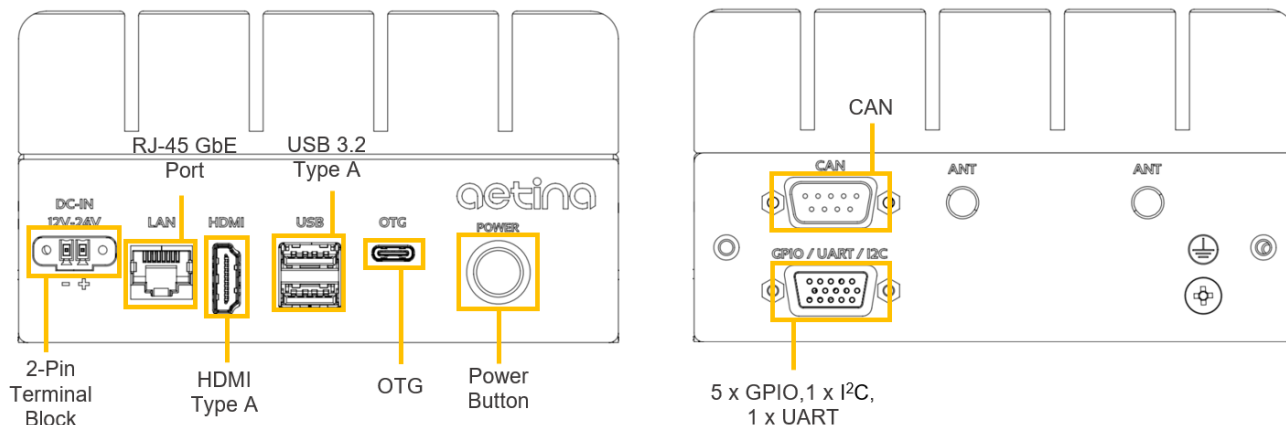


Figure 2.1 AIE-CO21/AIE-CO31/AIE-CN31/AIE-CN41 I/O Interface


### 2.2 External Connector Summary

Location	External Connector	Description
Front	Power	Power pushbutton
	DC-IN	2-Pin Terminal block
	LAN	RJ-45 GbE Port
	HDMI	HDMI 2.0 Type A Port
	USB 1	USB3.2 Gen 2 Type-A Connector
	USB 2	USB3.2 Gen 2 Type-A Connector
	OTG	OTG Type-C
Rear	GPIO / UART / I <sup>2</sup> C	DB15 female Port
	CAN	DB9 Port
	ANT	Antenna Hole
Side	Recovery	Recovery pushbutton
	Reset	Reset pushbutton

## 2.3 External I/O Interface


### ■ Power

Item	Description
Location	Front
Type	Pushbutton

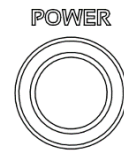


### ■ Power input connector

Item	Description
Location	Front
Type	DC-in 12-24 VDC / 2-Pin Terminal Block

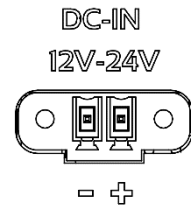

### ■ LAN

Item	Description
Location	Front
Type	RJ-45 Connector
Notes	LED Static ON: LAN Link is active. LED Blinking: Data is being transmitted. LED Static OFF: LAN Link is inactive.

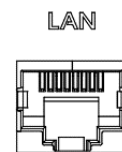

### ■ HDMI

Item	Description
Location	Front
Type	HDMI Type-A female connector



### ■ Dual USB3.2 Gen1 Type-A connector

Item	Description
Location	Front
Type	Type-A USB connector



### ■ OTG Type-C connector

Item	Description
Location	Front
Type	Type-C USB connector
Notes	support OTG function only

 
OTG



### ■ DB15 female Port

Item	Description
Location	Rear
Type	GPIO/UART/I <sup>2</sup> C


GPIO / UART / I2C



Pin #	Definition	Notes	Pin #	Definition	Notes
1	GPIO1 (GPIO01 / PQ.05 453)	IN/OUT	2	GPIO2 (GPIO11 / PQ.06 454)	IN/OUT
3	GPIO3 (GPIO12 / PN.01 433)	IN/OUT	4	GPIO4 (GPIO13 / PH.00 391)	IN/OUT
5	GPIO5 (GPIO05 / PZ.07 485)	IN/OUT	6	I2C_CLK	
7	I2C_DAT		8	UART_TX	
9	UART_RX		10	3.3V	VDD OUT
11	UATR_CTS		12	UATR_RTS	
13	5V	VDD OUT	14	GND	
15	GND				

### ■ CAN DB9 Port

Item	Description
Location	Rear
Type	CAN
Notes	5.7kVrms Isolation

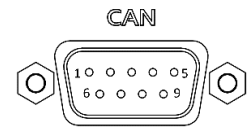

Pin #	Definition	Pin #	Definition
1	NC	2	CAN_L
3	GND	4	NC
5	NC	6	NC
7	CAN_H	8	NC
9	NC		

### ■ Reset & Recovery Button

Item	Description
Location	Side
Type	Pushbutton



## 2.4 Power Consumption

The power consumption shown as below is the theoretical value for AIE-CO21/AIE-CO31

Type	Theoretical Maximum System power
Idle	3.4 W (Connect with keyboard, mouse, and HDMI display)
Full loading	25.08 W (Connect with keyboard, mouse, HDMI display and LAN with CPU and GPU 100% loading)

The power consumption shown as below is the theoretical value for AIE-CN31/AIE-CN41.


Type	Theoretical Maximum System power
Idle	3.7 W (Connect with keyboard, mouse, and HDMI display)
Full loading	35.5 W (Connect with keyboard, mouse, HDMI display and LAN with CPU and GPU 100% loading)

Please refer to the following power consumption of individual I/O interface according to your use case.

Type	Theoretical Maximum System power
USB 3.2 Type A (1 port)	4.5 W
HDMI	0.25 W
M.2 E Key	2 W
M.2 M Key	7 W
CAN Bus	1 W
GbE LAN port	0.83 W

## 2.5 Mechanical Dimensions

### ■ System & Mounting Dimensions

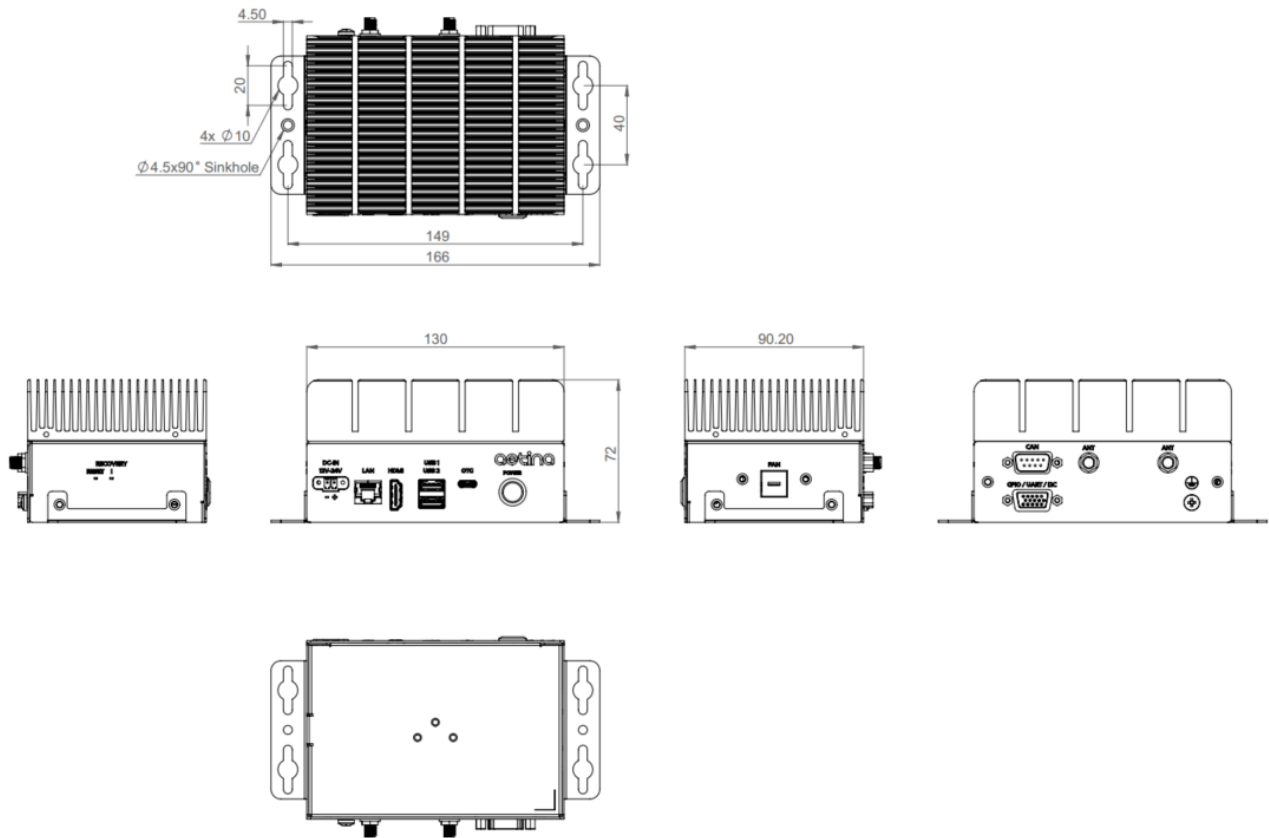



## 3. Software Installation

Aetina NVIDIA Jetson products have built-in BSP so the users don't have to install it after getting the products. Since we develop our own BSP, the users may need to follow the BSP installation SOP to re-install/upgrade/downgrade the BSP. Please visit the Aetina website or contact with Aetina FAE at [Tech\\_support@aetina.com](mailto:Tech_support@aetina.com) for installation guides, BSPs and technical tips.

## 4. Recovery Mode

The OTG Type-C port of AIE-CO21/31 and AIE-CN31/41 can be connected to another host device (Linux PC running NVIDIA Jetpack™) to run recovery process for re-flashing BSP.

Note: Please backup user personal files before flashing process

Step 1: Connect the OTG Type-C port to another host device which supplying updated BSP file.

Step 2: Press and hold the Reset button, then press and hold the Recovery button continually.

Step 3: After one second (1 sec.) release the Reset button first, then release the Recovery button.

Step 4: The Orin Nano or NX will show up as a new NVIDIA device on USB list (Terminal console) at the host device.

Step 5: Running re-flashing BSP process can be executed by the host device now.

## 5. Initial Setup

Before using AIE-CO21/AIE-CO31 & AIE-CN31/AIE-CN41 series, please follow the steps below to have initial setup.


### 5.1 Prepare the materials

Please prepare the materials list below.

- A monitor with HDMI and respective cables
- USB keyboard and mouse
- Ethernet cable

### 5.2 Hardware connection

Here is the AIE-KO21/AIE-KO31/AIE-KN31/AIE-KN41 below and for the initial setup, users will need to connect LAN port, keyboard and mouse via USB interface, HDMI interface, and power connector.

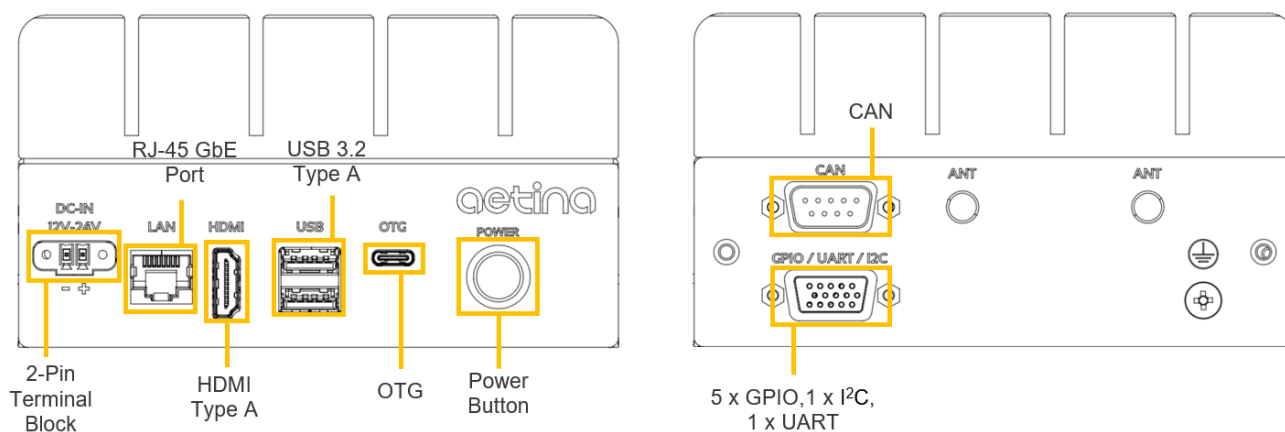

### 5.3 Setup details

Step 1: Connect to the monitor while powering off

Step 2: Power on and automatically enter the OS

Step 3: Log in to the Ubuntu OS via credentials below

- Username: nvidia
- Password: nvidia


For more information on how to use Ubuntu and NVIDIA Jetson modules, please visit Ubuntu and NVIDIA website.

## 6. EdgeEye

### 6.1 Aetina 360 Edge Administration Platform

#### Introduction

To help clients efficiently and systematically manage edge devices deployed in different locations, Aetina offers several cloud management platforms. For example, EdgeEye, an Aetina browser-accessed management platform, allows clients to conveniently manage edge devices via intranet-connected cell phones, tablets, or laptops, no matter where the devices are deployed. It shows diversified status of devices with user-friendly interfaces to help clients check if user-defined values are in the normal range, including CPU/GPU loading and temperature, memory loading, storage status, deployment sites, and unsolved events setting. In addition, EdgeEye supports functions of reboot, shutdown, backup, and recovery via out-of-band management modules, especially when clients are intuitively aware of abnormal charts on the dashboard.

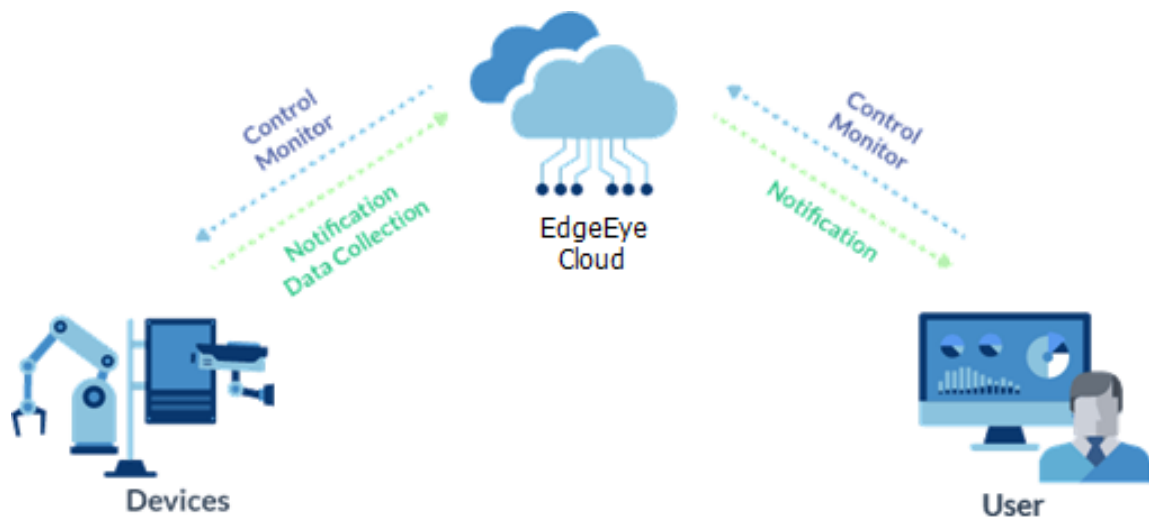

## 6.2 Feature

### Edge Device Management

Monitor edge devices' hardware status, such as CPU, GPU, Memory' s utilization and capacity.

### Alert Notification

Customized alert threshold and when getting abnormal data from edge devices, send warning notification immediately.

### Remote Controlling

Reboot and shut down edge device through the operating system's command from server when needs.

### User-Friendly Operation Interface

User can set and arrange monitoring data format by their needs.

Group devices control and Scheduler

## 6.3 System Requirements

### Web Service

Web browsers support HTML5, CSS3, JavaScript:

Microsoft Edge 103.0+

Google Chrome:9.0+

Firefox:15.0+

Safari:5.1+

### Server

Hardware Minimum Requirements:

Intel® Core™ i5 2.3 Ghz CPU or above

32 GB RAM

200 GB root partition for the system

Operating System:

Linux Ubuntu 18.04+

Browser

Google Chrome 9.0+

### Client

Support all Aetina products



**Aetina Corporation | Headquarters**

2F-1, No.237, Sec.1, Datong Rd., Xizhi Dist., New Taipei City 221, TAIWAN

Phone: +886-2-7709 2568

Fax : +886-2-7746 1102

Mail : [sales@Aetina.com](mailto:sales@Aetina.com)

[www.Aetina.com](http://www.Aetina.com)