

TECHNICAL MANUAL

Of

Intel Q370 Express Chipset

Based Mini-ITX M/B

NO. G03-NF796-F

Revision: 2.0

Release date: January 15, 2019

Trademark:

- * Specifications and Information contained in this documentation are furnished for information use only, and are subject to change at any time without notice, and should not be construed as a commitment by manufacturer.

Environmental Protection Announcement

Do not dispose this electronic device into the trash while discarding. To minimize pollution and ensure environment protection of mother earth, please recycle.



TABLE OF CONTENT

ENVIRONMENTAL SAFETY INSTRUCTION	iii
USER'S NOTICE	iv
MANUAL REVISION INFORMATION	iv
ITEM CHECKLIST	iv
CHAPTER 1 INTRODUCTION OF THE MOTHERBOARD	
1-1 FEATURE OF MOTHERBOARD.....	1
1-2 SPECIFICATION.....	2
1-3 LAYOUT DIAGRAM.....	3
CHAPTER 2 HARDWARE INSTALLATION	
2-1 JUMPER SETTING	9
2-2 CONNECTORS AND HEADERS	14
2-2-1 CONNECTORS	14
2-2-2 HEADERS	18
CHAPTER 3 INTRODUCING BIOS	
3-1 ENTERING SETUP	24
3-2 BIOS MENU SCREEN	25
3-3 FUNCTION KEYS	25
3-4 GETTING HELP.....	26
3-5 MENU BARS	26
3-6 MAIN MENU	27
3-7 ADVANCED MENU.....	28
3-8 CHIPSET MENU	42
3-9 SECURITY MENU.....	46
3-10 BOOT MENU	49
3-11 SAVE & EXIT MENU.....	50



Environmental Safety Instruction

- I Avoid the dusty, humidity and temperature extremes. Do not place the product in any area where it may become wet.
- I 0 to 40 centigrade is the suitable temperature. (The temperature comes from the request of the chassis and thermal solution)
- I Generally speaking, dramatic changes in temperature may lead to contact malfunction and crackles due to constant thermal expansion and contraction from the welding spots' that connect components and PCB. Computer should go through an adaptive phase before it boots when it is moved from a cold environment to a warmer one to avoid condensation phenomenon. These water drops attached on PCB or the surface of the components can bring about phenomena as minor as computer instability resulted from corrosion and oxidation from components and PCB or as major as short circuit that can burn the components. Suggest starting the computer until the temperature goes up.
- I The increasing temperature of the capacitor may decrease the life of computer. Using the close case may decrease the life of other device because the higher temperature in the inner of the case.
- I Attention to the heat sink when you over-clocking. The higher temperature may decrease the life of the device and burned the capacitor.

USER'S NOTICE

COPYRIGHT OF THIS MANUAL BELONGS TO THE MANUFACTURER. NO PART OF THIS MANUAL, INCLUDING THE PRODUCTS AND SOFTWARE DESCRIBED IN IT MAY BE REPRODUCED, TRANSMITTED OR TRANSLATED INTO ANY LANGUAGE IN ANY FORM OR BY ANY MEANS WITHOUT WRITTEN PERMISSION OF THE MANUFACTURER.

THIS MANUAL CONTAINS ALL INFORMATION REQUIRED TO USE THIS MOTHER-BOARD SERIES AND WE DO ASSURE THIS MANUAL MEETS USER'S REQUIREMENT BUT WILL CHANGE, CORRECT ANY TIME WITHOUT NOTICE. MANUFACTURER PROVIDES THIS MANUAL "AS IS" WITHOUT WARRANTY OF ANY KIND, AND WILL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFIT, LOSS OF BUSINESS, LOSS OF USE OF DATA, INTERRUPTION OF BUSINESS AND THE LIKE).

PRODUCTS AND CORPORATE NAMES APPEARING IN THIS MANUAL MAY OR MAY NOT BE REGISTERED TRADEMARKS OR COPYRIGHTS OF THEIR RESPECTIVE COMPANIES, AND THEY ARE USED ONLY FOR IDENTIFICATION OR EXPLANATION AND TO THE OWNER'S BENEFIT, WITHOUT INTENT TO INFRINGE.

Manual Revision Information

Reversion	Revision History	Date
2.0	Second Edition	January 15, 2019

Item Checklist

- R** Motherboard
- R** DVD for motherboard utilities
- R** User's Manual
- R** Cable(s)

Chapter 1

Introduction of the Motherboard

1-1 Feature of Motherboard

- I Intel® Q370 express chipset
- I Support LGA 1151 CPU socket for the 8th Intel® Coffee Lake processors (TDP ≤65W)
- I Support 2* DDR4 2400/2666MHz SO-DIMM up to 32GB and dual channel function
- I Integrated with 1*Intel i211AT & 1* i219-LM Gigabit Ethernet LAN chip
- I Support up to 4 * USB 3.1 Gen.2 port, 6 * USB 3.1 Gen.1 port & 2 * USB 2.0 port
- I Support up to 6 * COM port (COM1/2 support RS232/422/485)
- I Support 5 * SATAIII (6Gb/s) Devices with RAID 0, 1, 5, 10 mode & 1 * Mini-SATA slot (full-size, share with Mini-PCle)
- I Support 1* PCIE 3.0 x16 slot, 1* full-size Mini-PCIE slot (full-size, share with Mini-SATA) and 1* half-size Mini-PCIE slot
- I Support HDMI port, DP port, VGA port & 24-bit dual channel LVDS with support for 3 independent displays
- I Support Smart FAN function
- I Supports ACPI S3 Function
- I Compliance with ErP Standard
- I Support Watchdog Timer Technology
- I Solution for Digital Signage, Industrial PCs, Factory Automation, Public Sector, Digital Security and Surveillance applications


1-2 Specification

Spec	Description
Design	I Mini-ITX form factor; PCB size:17.0x17.0cm
Chipset	I Intel Q370 Express Chipset
CPU Socket	I Intel® LGA 1151 Socket for Coffee Lake series processors <i>* for detailed CPU support information please visit our website</i>
Memory Slot	I 2*DDR4 SO-DIMM slot I Support DDR4 2400/2666MHz non-ECC SDRAM I Maximum capacity: up to 32GB I Support dual channel function <i>*Memory frequency range also depend on CPU support</i>
Expansion Slot	I 1* PCIE x16 slot (PCIEX16) I 1* full-size Mini-PCIE/MSATA share slot (MPEST) I 1* half-size Mini-PCIE slot (MPE) I 1* SIM card slot (SIMCARD)
Storage	I 5* SATAIII 6G/s ports with support for RAID 0/1/5/10 mode I 1* full-size Mini-SATA/ Mini-PCIE share slot (MPEST)
Gigabit LAN Chip	I Integrated with 1* Intel i211AT Gigabit Ethernet LAN chip & 1* Intel i219-LM Gigabit PHY LAN chip I Support Fast Ethernet LAN function of providing 10/100/1000Mbps Ethernet data transfer rate
Audio Chip	I Realtek ALC662-VD 6-channel Audio Codec integrated I Audio driver and utility included
BIOS	I AMI Flash ROM
Multi I/O	Rear Panel I/O: I 2* RS232/422/485 COM port I 1* HDMI port & 1* VGA port & 1* DP port I 2* USB 3.1 (Gen.1) port I 4* USB 3.1 (Gen.2) port I 2* RJ-45 LAN port I 1* 3-jack audio connector (Line-in, Line-out, MIC)


	Internal I/O Connectors & Headers: <ul style="list-style-type: none"> 1 *24-pin main power connector 1 *4-pin 12V power connector 1* CPUFAN connector & 1* SYSFAN connector 1* Front panel header 1* 9-Pin USB 2.0 header for 2* USB 2.0 ports 2* 19-Pin USB 3.1 (Gen.1) header for 4* USB 3.1 (Gen.1) ports 1* Front panel audio header 1 * PS2 Keyboard & Mouse header 1* LAN Status LED header 4* RS232 serial port header 1* GPIO header 1* SMBUS header 1*LVDS header 1*Inverter header
--	---

1-3 Layout Diagram


Rear IO Diagram

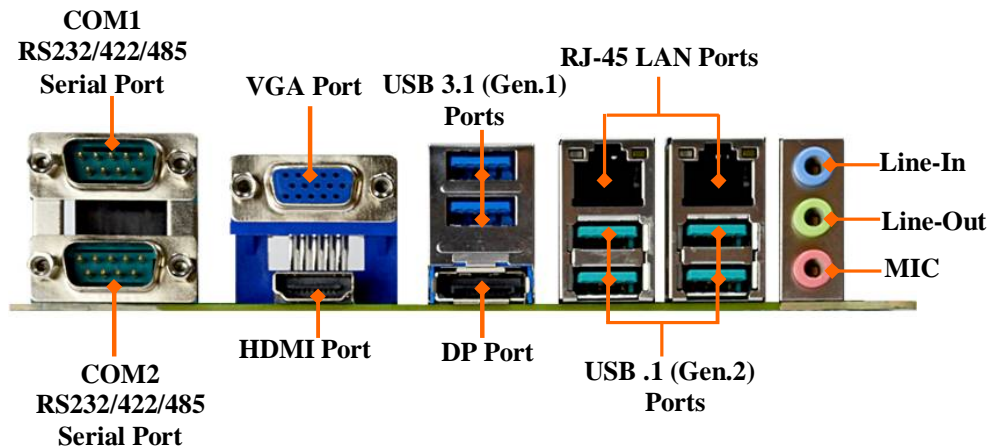

Motherboard Internal Diagram-Front

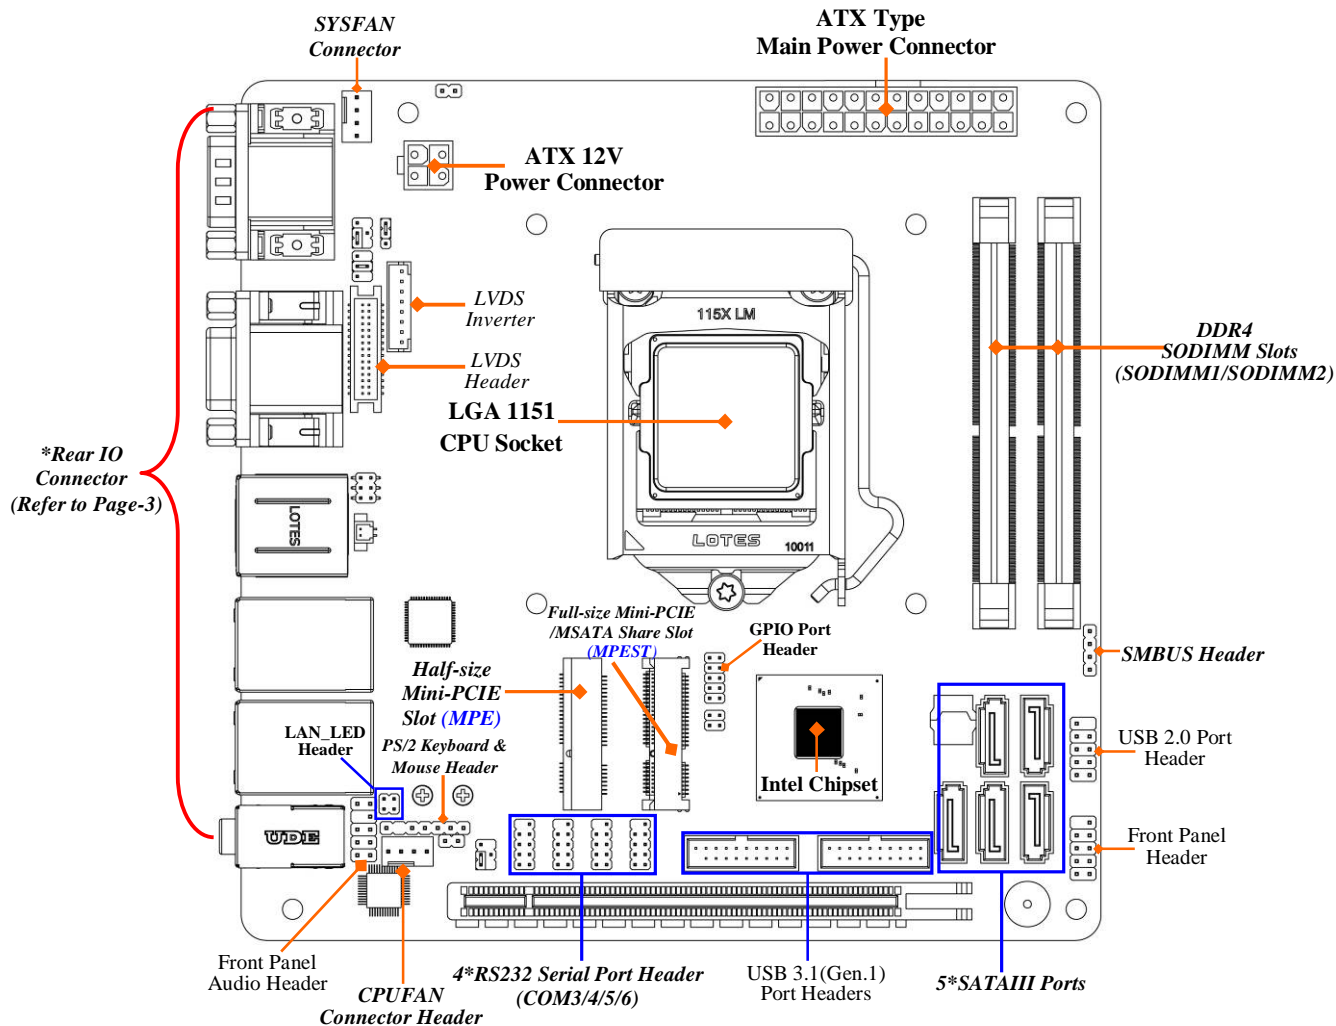


Internal Diagram-Back Side:

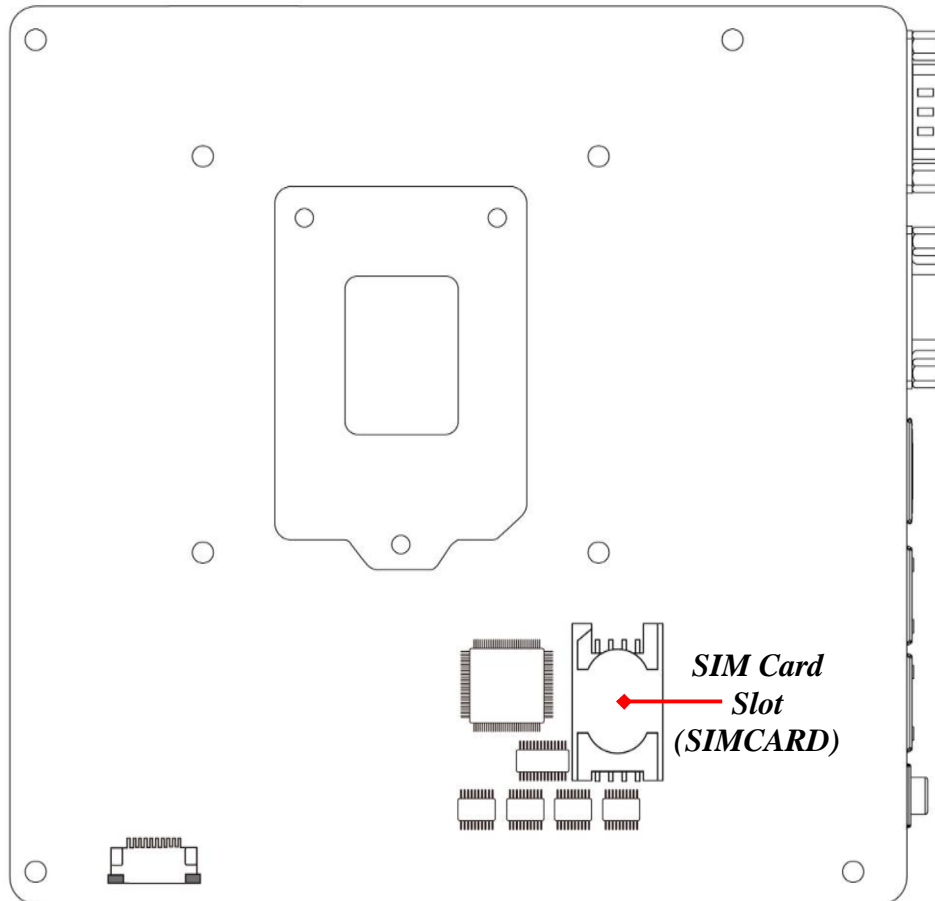

***Note:** **SIM card slot (SIMCARD)** only works **when** compatible SIM card installed & communication card installed in the full-size Mini-PCIE/MSATA share slot (**MPEST**); in this case you will not be able to use the MSATA function at the same time.

Motherboard Jumper Positions:

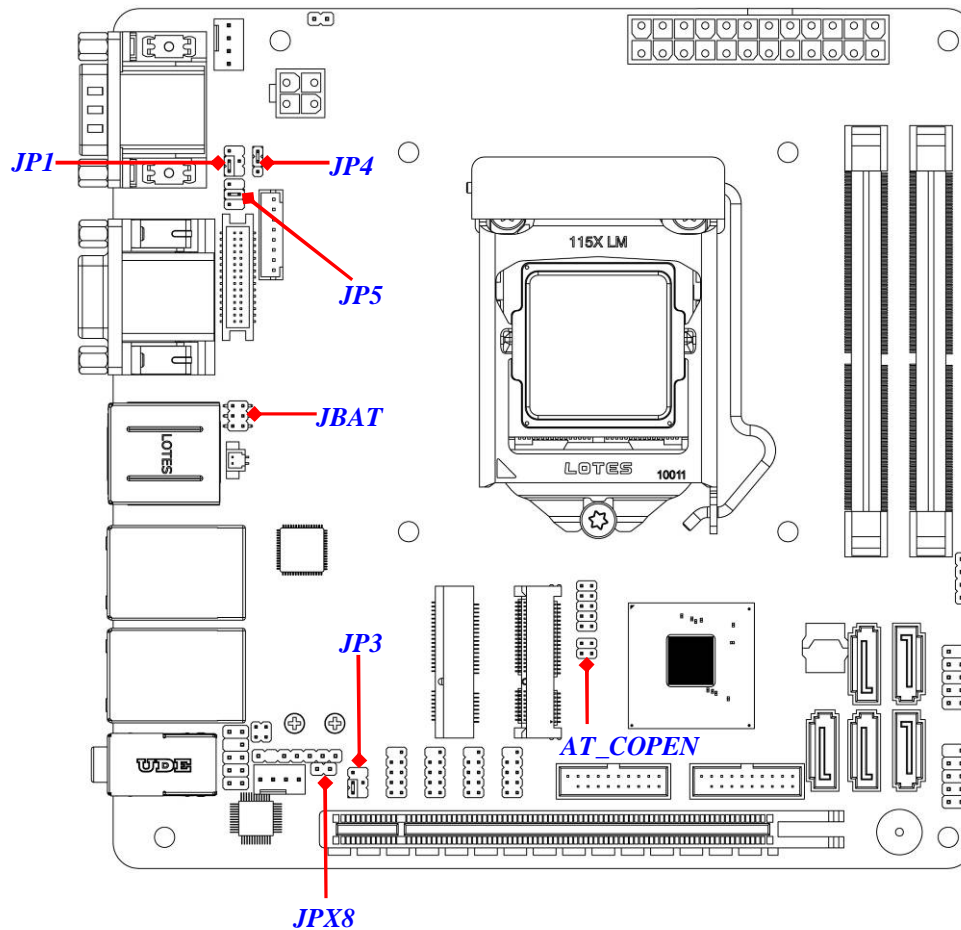

Jumper

P/N	Name	Description
JBAT	<i>Pin (1-2):</i> Clear CMOS RAM Settings <i>Pin (3-4):</i> Flash Descriptor Override <i>Pin (5-6):</i> PWROK Override	6-pin Block
JP1	COM1 Port Pin9 Function Select	4-pin Block
JP3	COM3 Header Pin9 Function Select	4-pin Block
JP4	LVDS Backlight VCC Select	3-pin Block
JP5	LVDS Panel VCC Select	4-pin Block
AT_COPEN	<i>Pin (1-2):</i> ATX Mode / AT Mode Select <i>Pin (3-4):</i> Case Open Display Select	4-pin Block
JPX8	<i>PCIEX16</i> Normal/bifurcation Select	2-pin Block

Connectors

P/N	Name
COM12	RS232/422/485 Serial COM Port Connector X2
VGA	VGA Port Connector
HDMI	HDMI Port Connector
DP	Display Port Connector
USB3	USB 3.1 (Gen.1) Port Connector X2
UL2/UL1	Top: RJ-45 LAN Connector X2 Middle & Bottom: USB 3.1 (Gen.2) Port Connector X4
AUDIO	Top: Line-in Connector Middle: Line-out Connector Bottom: MIC Connector
ATXPWR	ATX Type Main Power Connector
ATX12V	12V Power Connector
SATA1/2/3/4/5	SATAIII Port Connector
CPUFAN	CPU FAN Connector
SYSFAN	System FAN Connector

Headers


P/N	Name	Description
JW_FP	Front Panel Header(PWR LED/ HD LED/Power Button /Reset)	9-pin Block
FP_USB20	USB 2.0 Port Header	9-pin Block
FP_USB31 /FP_USB30	USB 3.1 (Gen.1) Port Header	19-pin Block
FP_AUDIO	Front Panel Audio Header	9-pin Block
PS2KBMS	PS2 Keyboard & Mouse Header	6-pin Block
LAN_LED	LAN Status LED Header	4-pin Block
COM3/4/5/6	RS232 Serial Port Header	9-pin Block
GPIO	GPIO Port Header	10-pin Block
SMBUS	SMBUS Header	4-pin Block
LVDS	LVDS Header	30-pin Block
INVERTER	LVDS Inverter Header	8-pin Block

Chapter 2


Hardware Installation

2-1 Jumper Setting


Pin 1&2 of JBAT (6-pin): Clear CMOS RAM Setting

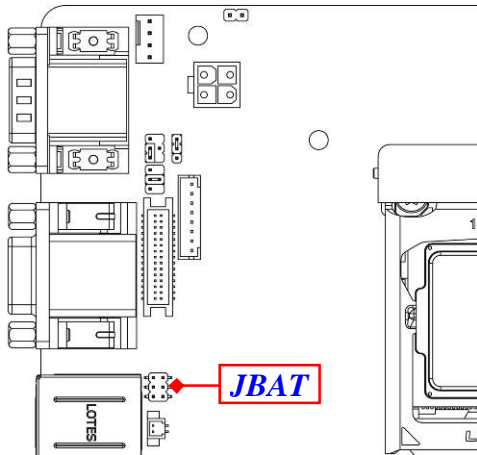

Pin 1&2 of JBAT→Clear CMOS




1-2 Open: Normal(Default);




1-2 Closed: Clear CMOS(One Touch).


Pin 3&4 of JBAT (6-pin): Flash Descriptor Override Select

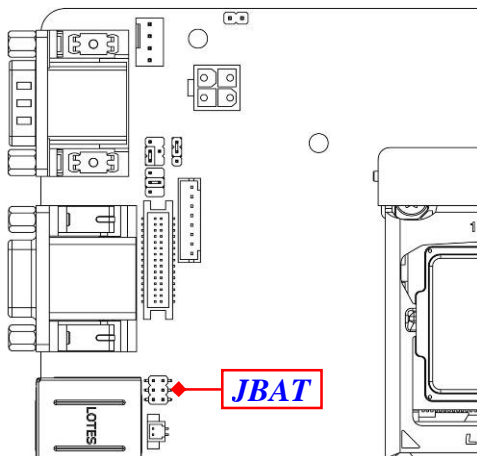

**Pin 3&4 of JBAT→
Flash Descriptor Override**




3-4 Open: Normal(Default);




**3-4 Closed: Disable Flash
Descriptor Security (override).**


Pin 5&6 of JBAT (6-pin): PWROK Override Select

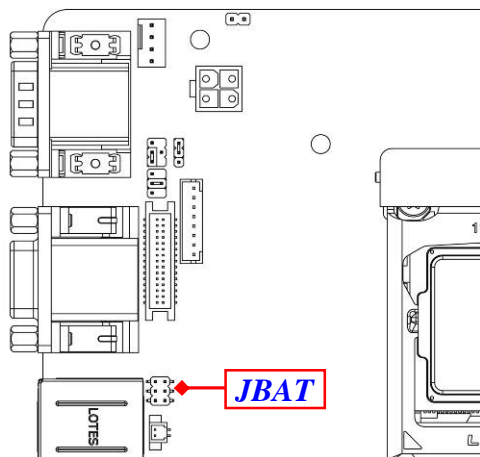

Pin 5&6 of JBAT → PWROK Override




5-6 Open: Normal(Default);




5-6 Closed: PWROK Override.

*** Note : PWROK override is for manufacturing test only.**


JP1 (4-pin): COM1 Port Pin9 Function Select

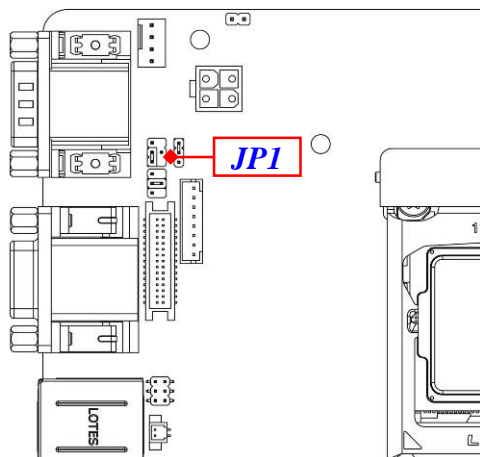


JP1 → COM1 Port Pin9 Function Select



**2-4 Closed:
Pin9=RING(Default);**




**3-4 Closed:
Pin9 = 5V;**




**6-4 Closed:
Pin9 = 12V.**


JP3 (4-pin): COM3 Header Pin9 Function Select

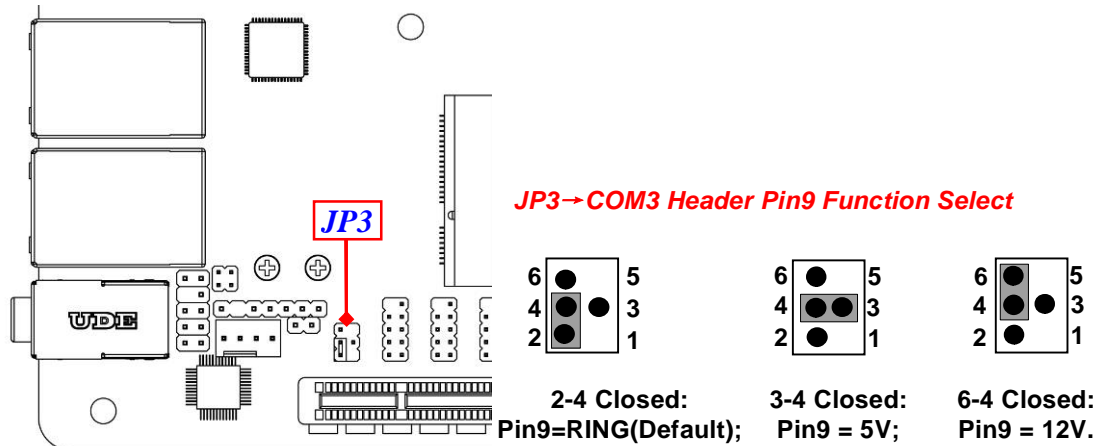


JP4 (3-pin): LVDS Inverter Backlight VCC Select

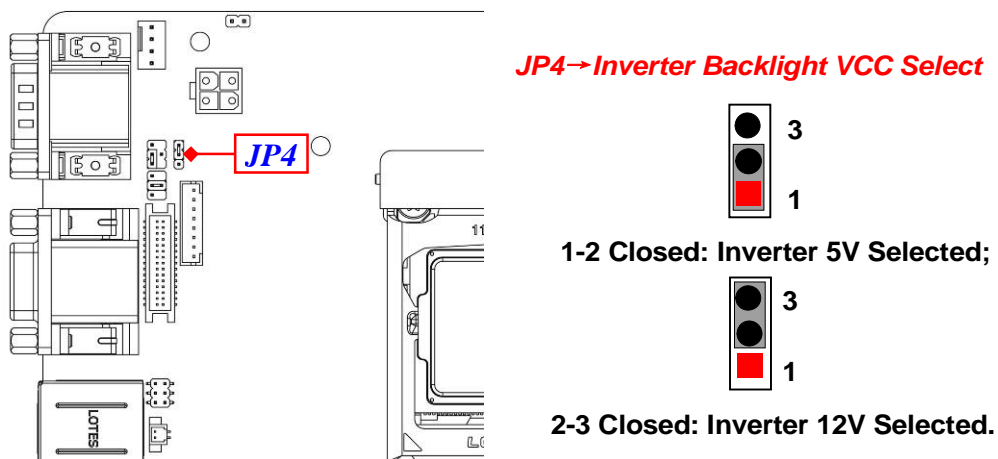


JP5 (4-pin): LVDS LCD Panel VCC Select

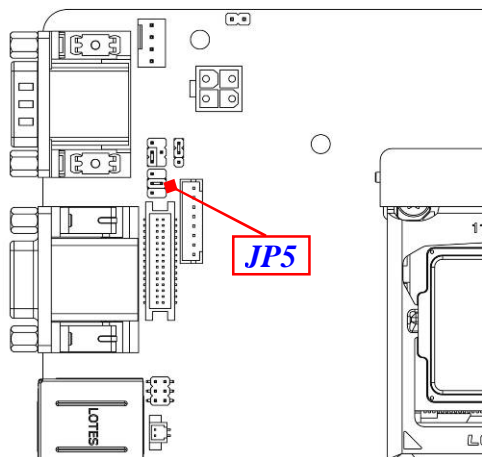


JP5→LVDS LCD Panel VCC Select



2-4 Closed:
VCC=3.3V;




3-4 Closed:
VCC = 5V;




6-4 Closed:
VCC = 12V.


Pin 1&2 of AT_COPEN (4-pin): ATX Mode/AT Mode Select

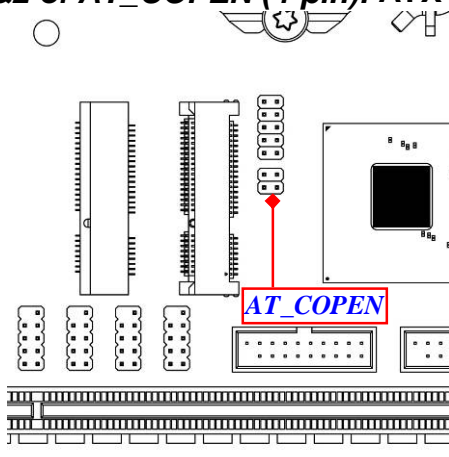

Pin 1&2 of AT_COPEN→ ATX/AT Mode Select




1-2 Open: ATX Mode Selected(Default);




1-2 Closed: AT Mode Selected.

***ATX Mode Selected:** Press power button to power on after power input ready;
AT Mode Selected: Directly power on as power input ready.

Pin 3&4 of AT_COPEN (4-pin): Case Open Message Display Function Select

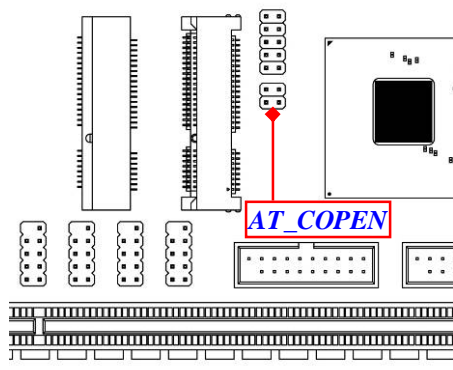


Pin 3&4 of AT_COPEN → Case Open Detection

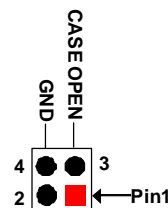


Pin (3&4) Closed: When Case open function pin short to GND, the Case open function was detected. When used, needs to enter BIOS and enable 'Case Open Detect' function. In this case if your case is removed, next time when you restart your computer, a message will be displayed on screen to inform you of this.


JPX8 (2-pin): PCIEX16 Slot Normal/bifurcation Select

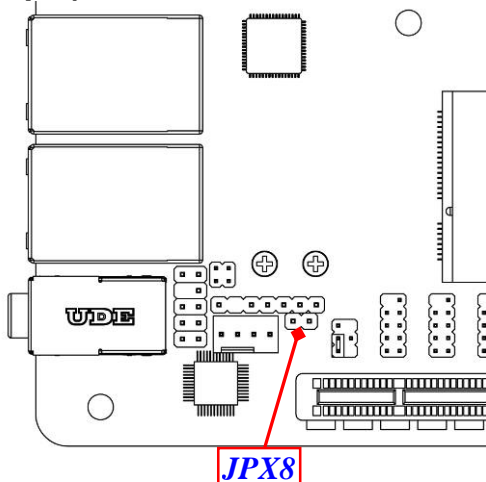

JPX8 → PCIEX16 Slot Function Select



1-2 Open: PCIEX16 (Normal);



1-2 Closed: PCIEX16 bifurcation to 2X8 Slot.

***Pin(1-2) Open:** Normal function as PCIEx16 slot;









Pin(1-2)Closed: PCIEX16 slot bifurcate to 2*PCIEx8 slot; in this case user can install riser card to install 2* PCIEx8 expansion card.

2-2 Connectors and Headers

2-2-1 Connectors


Rear Panel Connectors

**Refer to Page-3 Rear IO Diagram*


Icon	Name	Function
	RS232/422/485 Serial Port	Mainly for user to connect external MODEM or other devices that supports Serial Communications Interface.
	VGA Port	To connect display device that support VGA specification.
	HDMI Port	To connect display device that support HDMI specification.
	Display Port	To the system to corresponding display device with compatible DP cable.
	RJ-45 LAN Port	This connector is standard RJ-45 LAN jack for Network connection.
	USB 3.1 (Gen.1) Port	To connect USB keyboard, mouse or other devices compatible with USB 3.1 (Gen.1) specification. Ports support up to 5Gbps data transfer rate.
	USB 3.1 (Gen.2) Port	To connect USB keyboard, mouse or other devices compatible with USB 3.1 (Gen.2) specification. Ports support up to 10Gbps data transfer rate.
	Audio Connectors	Blue: Line-in Connector Green: Line-out Connector Pink : MIC Connector

(1) COM12: RS232/422/485 Ports

COM1/COM2 port can function as RS232/422/485 port. In normal settings COM1/COM2 functions as RS232 port. With compatible COM cable COM1/COM2 can function as RS422 or RS 485 port. User also needs to go to BIOS to set **'Transmission Mode Select'** for COM1/COM2 at first, before using specialized cable to connect different pins of this port.


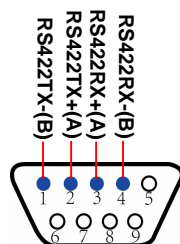


For RS422 Mode

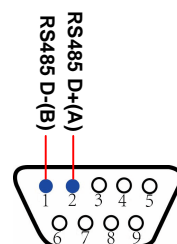



For RS485 Mode

(2) ATXPWR(24-pin block): Main Power Connector

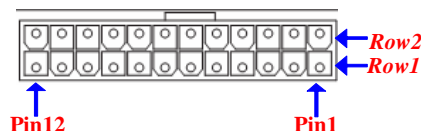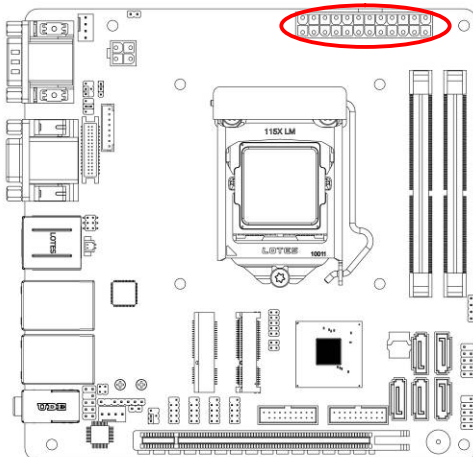

PIN	ROW1	ROW2
1	+3.3V	+3.3V
2	+3.3V	-12V
3	GND	GND
4	+5V	Soft Power on
5	GND	GND
6	+5V	GND
7	GND	GND
8	Power OK	-5V
9	+5V Stand by	+5V
10	+12V	+5V
11	+12V	+5V
12	+3.3V	GND


(3) ATX12V (4-pin block): ATX-Type 12V Power Connector

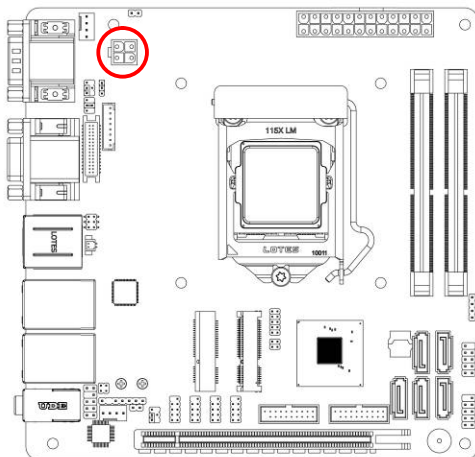

Pin No.	Definition
1	GND
2	GND
3	+12V
4	+12V


(4) SATA1/2/3/4/5 (7-pin): SATAIII Port connector

These are high-speed SATAIII port that supports 6GB/s transfer rate.

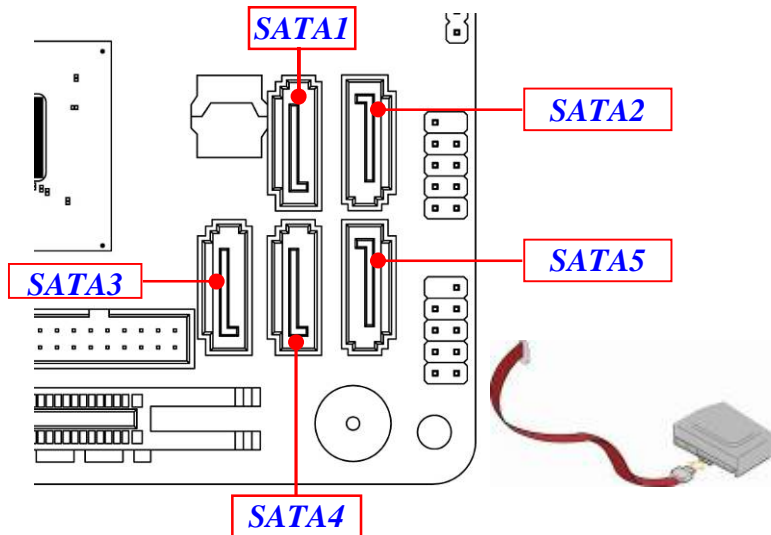


Pin No.	Definition
1	GND
2	TXP
3	TXN
4	GND
5	RXN
6	RXP
7	GND

(5) CPUFAN (4-pin): CPU Fan Connector

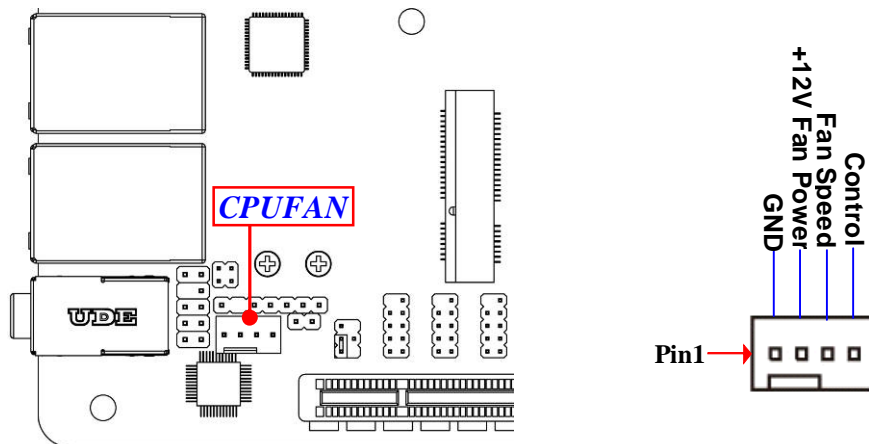


(6) SYSFAN(4-pin): System Fan Connector

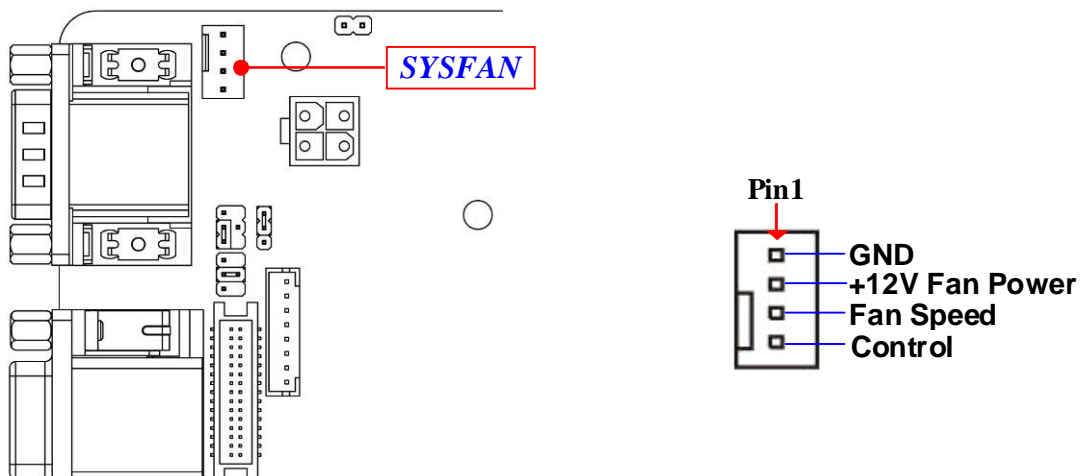


2-2-2 Headers


(1) JW_FP (9-pin): Front Panel Header

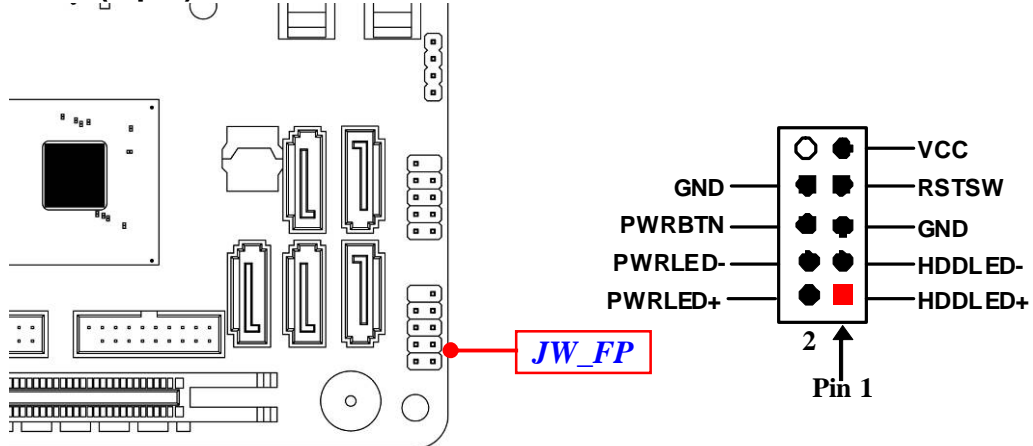

(2) FP_USB20 (9-pin): USB 2.0 Port Header

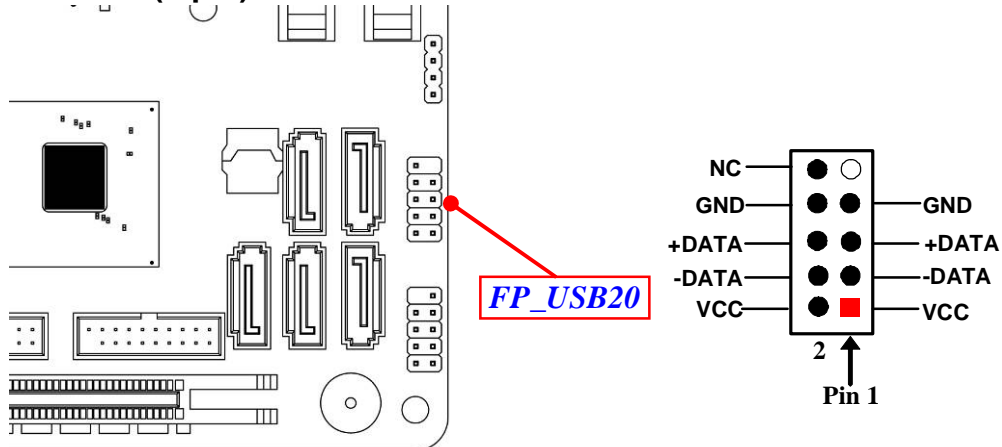


(3) FP_USB30/ FP_USB31(19-pin): USB 3.1(Gen.1) Port Header

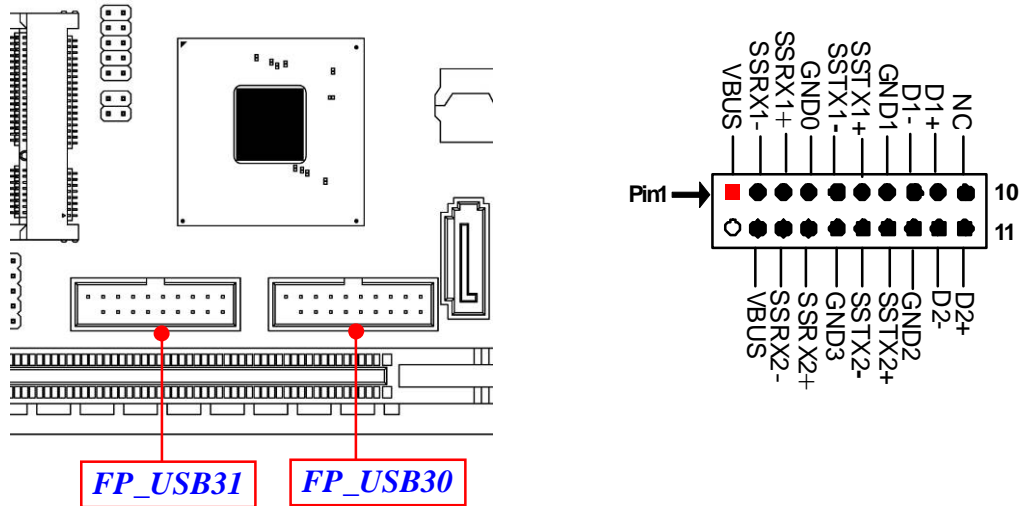


(4) FP_AUDIO (9-pin): Line-Out, MIC-In Header


This header connects to Front Panel Line-out, MIC-In connector with cable.

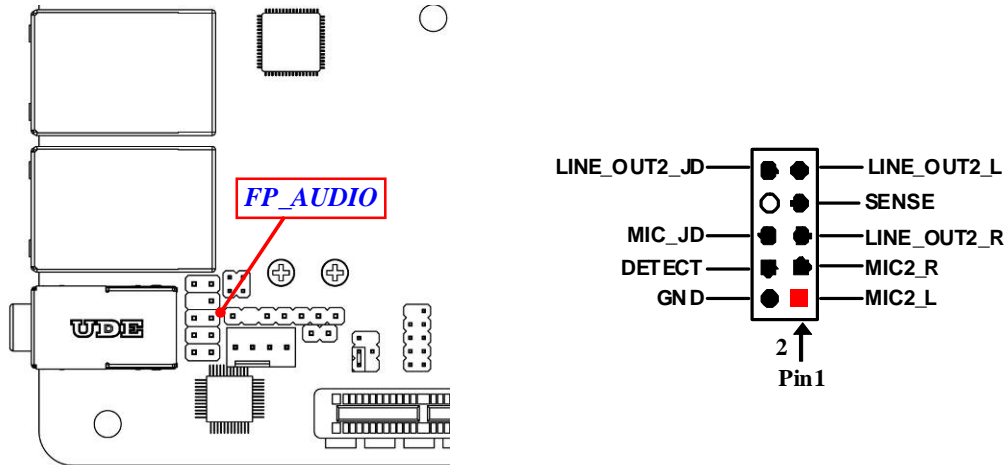


(5) PS2KBMS (6-pin): PS/2 Keyboard & Mouse Header

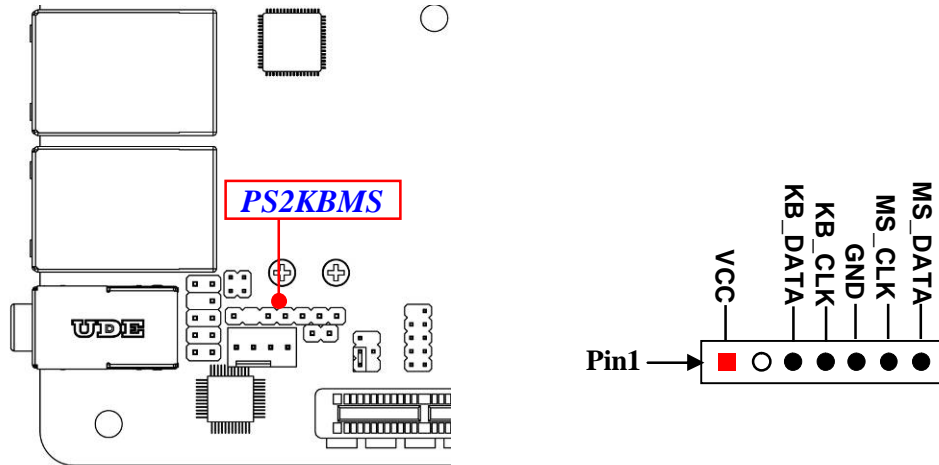


(6) LAN_LED(4-pin): LAN Status LED Header

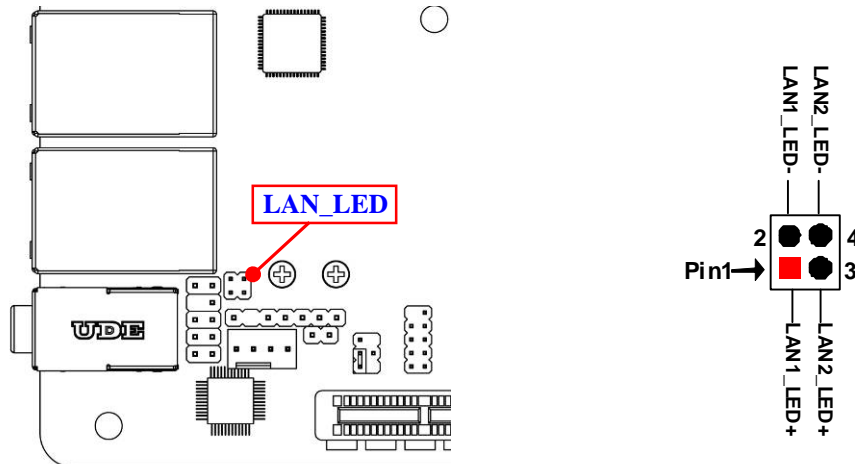


(7) COM3/4/5/6 (9-pin): RS232 Serial Port Header

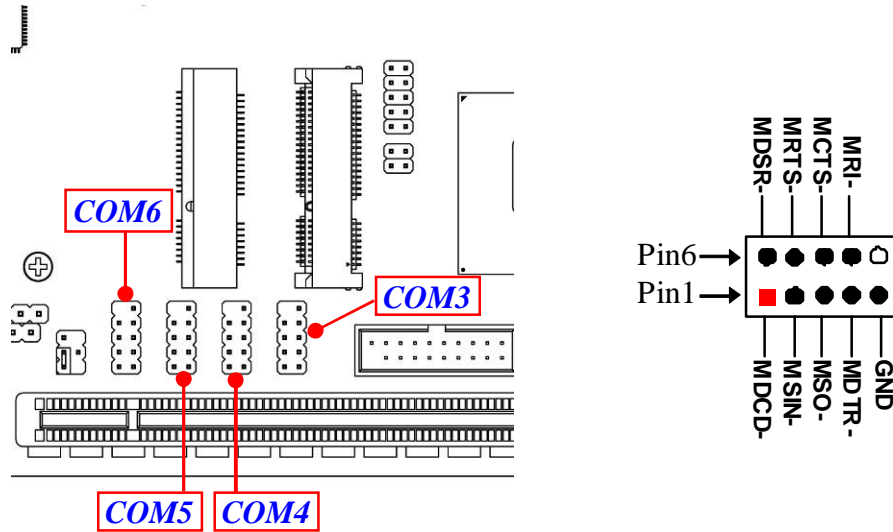


(8) GPIO (10-pin): GPIO Port Header

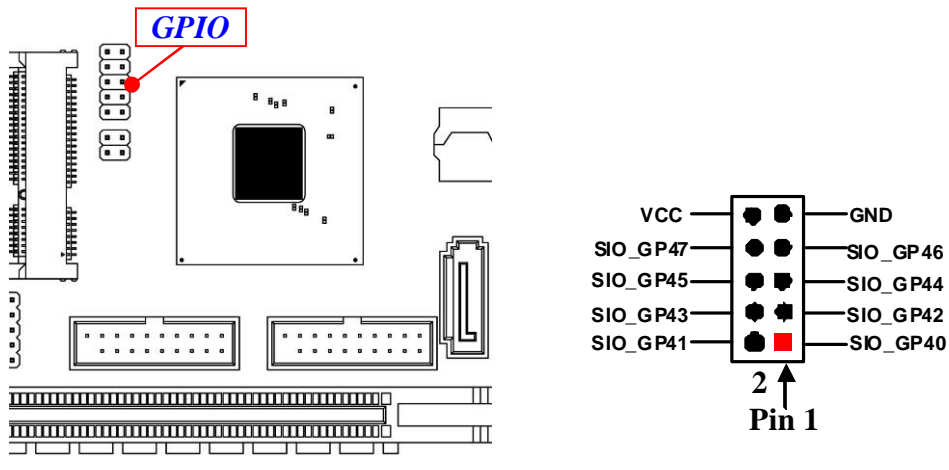

(9) SMBUS (4-pin): SMBUS Header

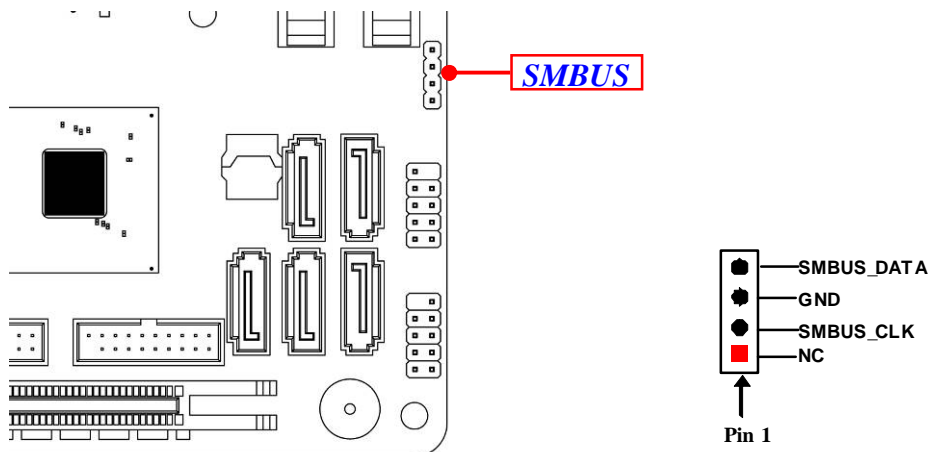


(10) INVERTER (8-pin): LVDS Inverter Connector

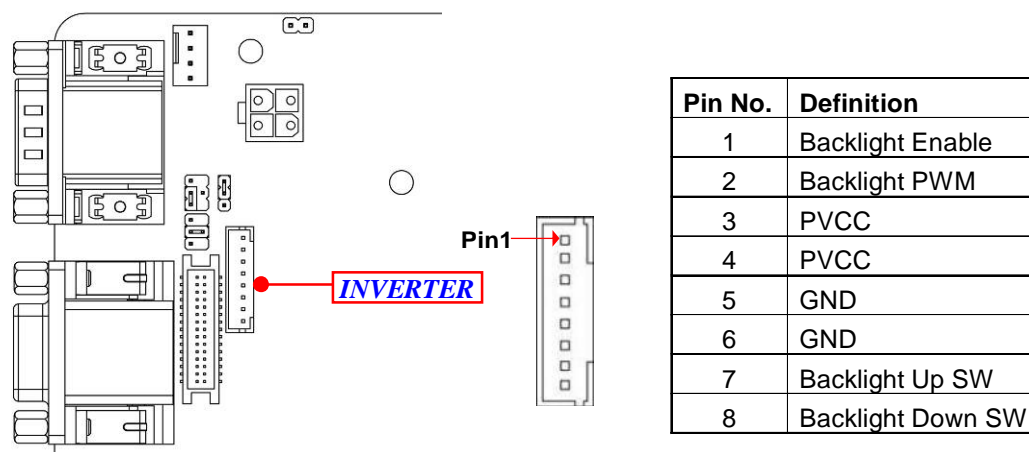

Warning! Find Pin-1 location of the inverter and make sure that the installation direction is correct! Otherwise serious harm will occur to the board/display panel!!

(11) LVDS (30-Pin): 24-bit dual channel LVDS Header

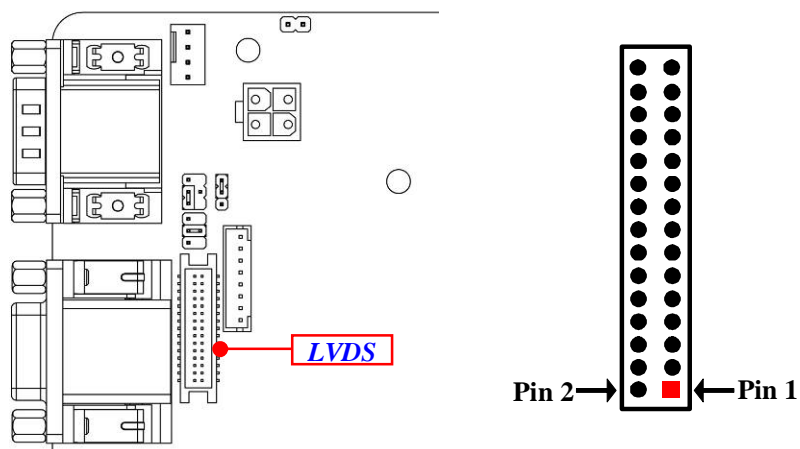

Pin NO.	Pin Define	Pin NO.	Pin Define
Pin 1	LVDSB_DATAN3	Pin 2	LVDSB_DATAP3
Pin 3	LVDS_CLKBN	Pin 4	LVDS_CLKBP
Pin 5	LVDSB_DATAN2	Pin 6	LVDSB_DATAP2
Pin 7	LVDSB_DATAN1	Pin 8	LVDSB_DATAP1
Pin 9	LVDSB_DATAN0	Pin 10	LVDSB_DATAP0
Pin 11	NC/DDC_DATA	Pin 12	NC/DDC_CLK
Pin 13	GND	Pin 14	GND
Pin 15	GND	Pin 16	GND
Pin 17	LVDSA_DATAP3	Pin 18	LVDSA_DATAN3
Pin 19	LVDS_CLKAP	Pin 20	LVDS_CLKAN
Pin 21	LVDSA_DATAP2	Pin 22	LVDSA_DATAN2
Pin 23	LVDSA_DATAP1	Pin 24	LVDSA_DATAN1
Pin 25	LVDSA_DATAP0	Pin 26	LVDSA_DATAN0
Pin 27	PVCC	Pin 28	PVCC
Pin 29	PVCC	Pin 30	PVCC

Chapter 3

Introducing BIOS

Notice! The BIOS options in this manual are for reference only. Different configurations may lead to difference in BIOS screen and BIOS screens in manuals are usually the first BIOS version when the board is released and may be different from your purchased motherboard. Users are welcome to download the latest BIOS version from our official website.

The BIOS is a program located on a Flash Memory on the motherboard. This program is a bridge between motherboard and operating system. When you start the computer, the BIOS program will gain control. The BIOS first operates an auto-diagnostic test called POST (power on self test) for all the necessary hardware, it detects the entire hardware device and configures the parameters of the hardware synchronization. Only when these tasks are completed done it gives up control of the computer to operating system (OS). Since the BIOS is the only channel for hardware and software to communicate, it is the key factor for system stability, and in ensuring that your system performance as its best.


3-1 Entering Setup

Power on the computer and by pressing immediately allows you to enter Setup. If the message disappears before your respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the “RESET” button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt> and <Delete> keys. If you do not press the keys at the correct time and the system does not boot, an error message will be displayed and you will again be asked to

Press **** to enter Setup.

3-2 BIOS Menu Screen

The following diagram show a general BIOS menu screen:

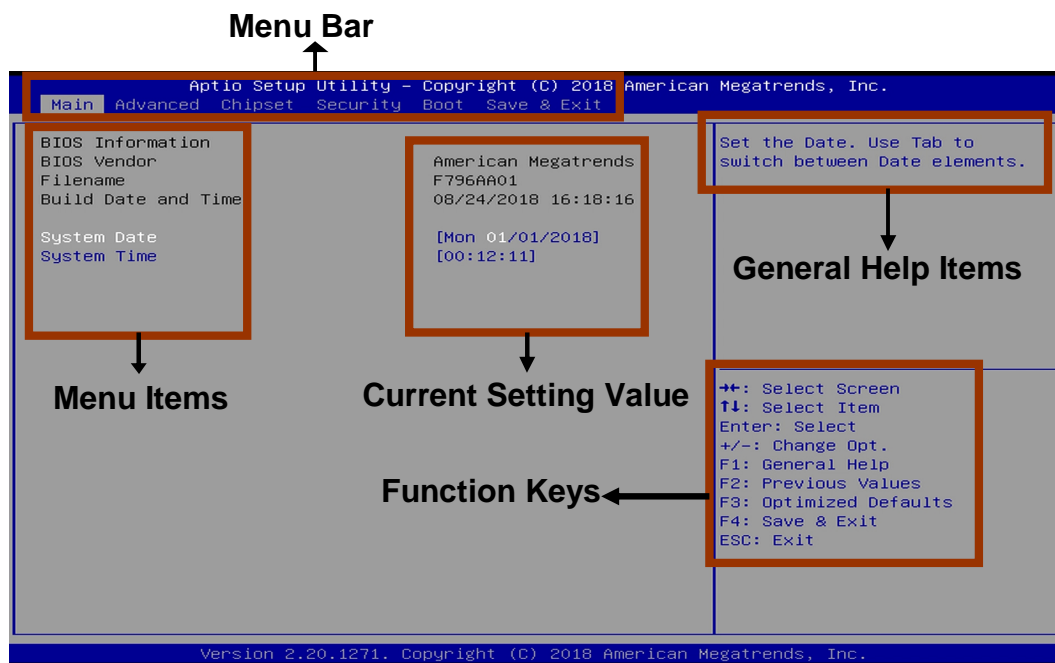

BIOS Menu Screen

3-3 Function Keys

In the above BIOS Setup main menu of, you can see several options. We will explain these options step by step in the following pages of this chapter, but let us first see a short description of the function keys you may use here:

- I Press → (left, right) to select screen;
- I Press ↑ (up, down) to choose, in the main menu, the option you want to confirm or to modify.
- I Press <Enter> to select.

-
- I Press <+>/<-> keys when you want to modify the BIOS parameters for the active option.
 - I [F1]: General help.
 - I [F2]: Previous values.
 - I [F3]: Optimized defaults.
 - I [F4]: Save & Exit.
 - I Press <Esc> to exit from BIOS Setup.

3-4 Getting Help

Main Menu

The on-line description of the highlighted setup function is displayed at the top right corner the screen.

Status Page Setup Menu/Option Page Setup Menu

Press **【F1】** to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window, press **<Esc>**.

3-5 Menu Bars


There are six menu bars on top of BIOS screen:

Main	To change system basic configuration
Advanced	To change system advanced configuration
Chipset	To change chipset configuration
Security	Password settings
Boot	To change boot settings
Save & Exit	Save setting, loading and exit options.

User can press the right or left arrow key on the keyboard to switch from menu bar. The selected one is highlighted.

3-6 Main Menu

Main menu screen includes some basic system information. Highlight the item and then use the <+> or <-> and numerical keyboard keys to select the value you want in each item.

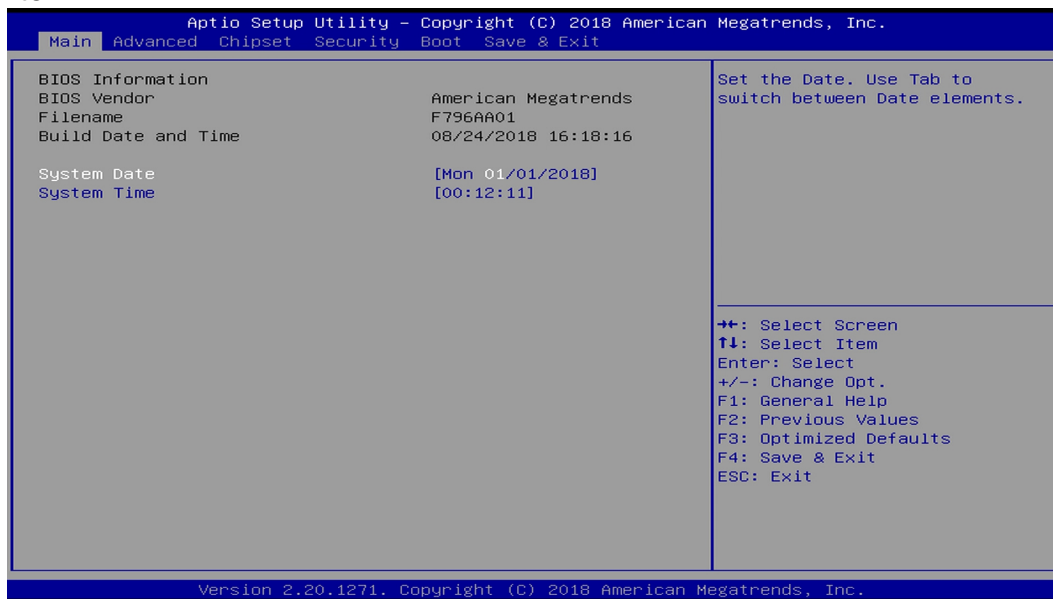


System Date

Set the date. Please use [Tab] to switch between date elements.

System Time

Set the time. Please use [Tab] to switch between time elements.

3-7 Advanced Menu

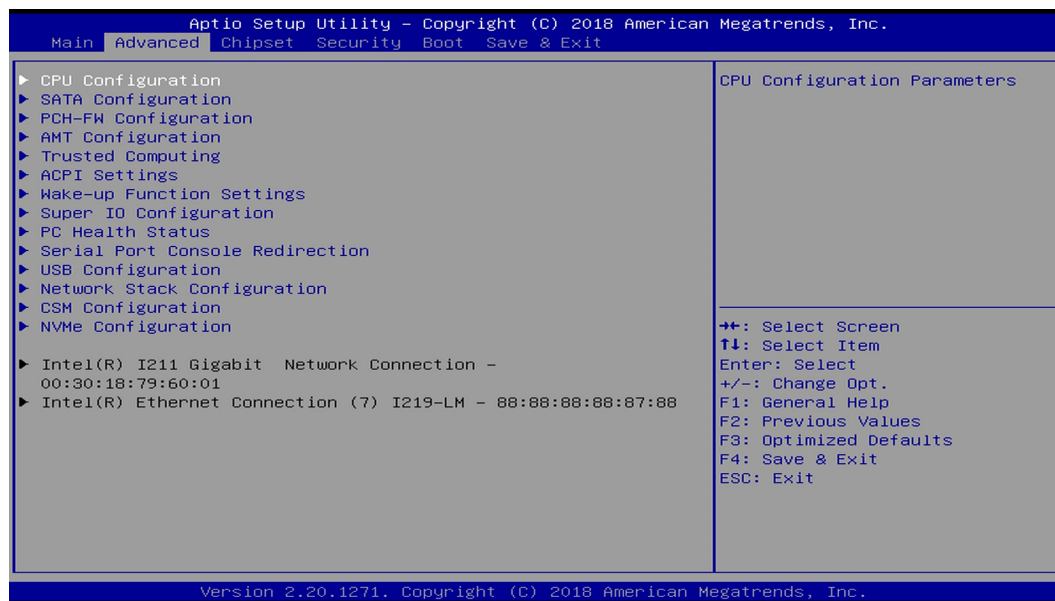

4 CPU Configuration

Press [Enter] to view current CPU configuration and make settings for the following sub-items:

Intel (VMX) Virtualization Technology

The optional settings are: [Enabled]; [Disabled].

When set as [Enabled], a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

Intel(R) SpeedStep(tm)

This item allows more than two frequency ranges to be supported.

The optional settings are: [Disabled]; [Enabled].

C States

The optional settings are: [Disabled]; [Enabled].

Use this item to enable or disable CPU Power Management.

When set as [Enabled], it allows CPU to go to C states when it's not 100% utilized.

4 **SATA Configuration**

Press [Enter] to make settings for the following sub-items:

SATA Controller(s)

Use this item to enable or disable SATA device.

The optional settings are: [Enabled]; [Disabled].

When set as [Enabled], the following items shall appear:

SATA Mode Selection

This item controls how SATA controller(s) operate.

The optional settings are: [AHCI]; [RAID].

mSATA

Port

Use this item to enable or disable device connected to mSATA port.

The optional settings are: [Disabled]; [Enabled].

SATA1/SATA2/SATA3/SATA4/SATA5

Port

The optional settings are: [Disabled]; [Enabled].

Use this item to enable or disable SATA port.

Hot Plug

Use this item to designate this port as Hot Pluggable.

The optional settings are: [Disabled]; [Enabled].

4 **PCH-FW Configuration**

Press [Enter] to view Management Engine technology parameters and make settings in the following sub-item:

4 Firmware Update Configuration

Press [Enter] to make settings for 'ME FW Image RE-Flash'.

ME FW Image Re-Flash

Use this item to enable or disable ME FW Image Re-Flash function.

The optional settings are: [Disabled]; [Enabled].

** In the case that user needs to update ME firmware, user should set 'ME FW Image Re-Flash' as [Enabled], save the settings and exit. The system will turn off and reboot after 4 seconds. If the user goes to BIOS screen again will find this item is set again as [Disabled], but user can still re-flash to update firmware next time.*

4 **AMT Configuration**

Use this item to configure Active Management Technology parameters.
Press [Enter] to make settings for the following sub-items:

ASF Support

Use this item to enable or disable Alert Specification Format support.
The optional settings are: [Disabled]; [Enabled].

When set as [Enabled], user can make further settings in 'ASF Configuration**' & '**Secure Erase Configuration**'.*

USB Provisioning of AMT

Use this item to enable or disable AMT USB provisioning.
The optional settings are: [Disabled]; [Enabled].

4 **CIRA Configuration**

This item is for user to configure Remote Assistance Process parameters.
Press [Enter] to make settings for in the following sub-item:

Activate Remote Assistance Process

Use this item to trigger CIRA boot.

****Note:** Network Access must be activated first from MEBx Setup.*

The optional settings are: [Disabled]; [Enabled].

When set as [Enabled], user can make further settings in 'CIRA Timeout**'.*

CIRA Timeout

OEM defined timeout for MPS connection to be established.

The setting range is from [0] to [255].

[0]: use the default timeout value of 60 seconds;

[255]: MEBx waits until the connection succeeds.

4 **ASF Configuration**

This item is for user to configure Alert Standard Format parameters.
Press [Enter] to make settings for in the following sub-items:

PET Progress

Use this item to enable or disable PET Events Progress to receive PET Events.
The optional settings are: [Disabled]; [Enabled].

WatchDog

Use this item to enable or disable WatchDog Timer. When set as [Enabled], the

following sub-items shall appear:

OS Timer

Use this item to set OS watch dog timer.

BIOS Timer

Use this item to set BIOS watch dog timer.

ASF Sensors Table

Use this item to add ASF Sensor Table into ASF ! ACPI Table.

The optional settings are: [Disabled]; [Enabled].

4 Secure Erase Configuration

Press [Enter] to make settings for in the following sub-items:

Secure Erase Mode

Use this item to change Secure Erase module behavior:

The optional settings are: [Simulated]; [Real].

[Simulated]: Performs SE flow without erasing SSD;

[Real]: Erase SSD.

Force Secure Erase

This item is for user to force Secure Erase on next boot.

The optional settings are: [Disabled]; [Enabled].

4 OEM Flags Settings

Use this item to configure OEM flags.

Press [Enter] to make settings for in the following sub-items:

Hide Unconfigure ME Confirmation Prompt

Use this function to enable or disable Hide Unconfigure ME Configuration Prompt when attempting ME unconfiguration.

The optional settings are: [Disabled]; [Enabled].

MEBx OEM Debug Menu Enable

Use this function to enable or disable MEBx Debug menu in MEBx.

The optional settings are: [Disabled]; [Enabled].

Unconfigure ME

Use this function to enable or disable Unconfigure ME with resetting MEBx password to default.

The optional settings are: [Disabled]; [Enabled].

4 MEBx Resolution Settings

Use this item to configure resolution settings for MEBx display modes.

Press [Enter] to make settings for in the following sub-items:

Non-UI Mode Resolution

Use this item to set resolution for non-UI text mode.

The optional settings are: [Auto]; [80x25]; [100x31].

UI Mode Resolution

Use this item to set resolution for UI text mode.

The optional settings are: [Auto]; [80x25]; [100x31].

Graphics Mode Resolution

Use this item to set resolution for graphics mode.

The optional settings are: [Auto]; [640x480]; [800x600]; [1024x768].

4 Trusted Computing

Press [Enter] to view current status information, or make further settings in the following sub-items:

Security Device Support

Use this item to enable or disable BIOS support for security device. O.S. will not show security device. TGG EFI protocol and INT1A interface will not be available.

The optional settings are: [Disabled]; [Enabled].

When set as **[Enabled], user can make further settings in the following items:*

Pending Operation

Use this item to schedule an operation for the security device. Your computer will reboot during restart to change state of device.

The optional settings are: [None]; [TPM Clear].

TPM2.0 UEFI Spec Version

Use this item to select the TCG2 Spec Version Support.

The optional settings are: [TCG_1_2]; [TCG_2].

4 ACPI Settings

Press [Enter] to make settings for the following sub-items:

ACPI Settings

ACPI Sleep State

Use this item to select the highest ACPI sleep state the system will enter when the

suspend button is pressed.

The optional settings are: [Suspend Disabled]; [S3 (Suspend to RAM)].

4 **Wake-up Function Settings**

Press [Enter] to make settings for the following sub-items:

Wake-up System with Fixed Time

Use this item to enable or disable system wake on alarm event.

The optional settings are: [Disabled]; [Enabled].

When set as [Enabled], system will wake on the hour/min/sec specified.

Wake-up System with Dynamic Time

Use this item to enable or disable system wake on alarm event.

System will wake on the current time + Increase minutes.

The optional settings are: [Disabled]; [Enabled].

When set as [Enabled], system will wake on the current time + increased minute(s).

PS2 KB/MS Wake-up

The optional settings are: [Enabled]; [Disabled].

Use this item to enable or disable PS2 KB/MS wake-up from S3/S4/S5.

**This function is supported when 'ERP Support' is set as [Disabled].*

USB S3/S4 Wake-up

The optional settings are: [Enabled]; [Disabled].

Use this item to enable or disable USB wake-up from S3/S4 state.

**This function is supported when 'ERP Support' is set as [Disabled].*

USB S5 Power

Use this item to enable or disable USB power after power shutdown.

**This function is supported when 'ERP Support' is set as [Disabled].*

Internal USB Port S5 Power

Use this item to enable or disable USB power after power shutdown.

**This function is supported when 'ERP Support' is set as [Disabled].*

4 **Super IO Configuration**

Press [Enter] to make settings for the following sub-items:

Super IO Configuration

ERP Support

The optional settings are: [Disabled]; [Auto].

This item should be set as **[Disabled] if you wish to have all active wake-up functions.*

► **Serial Port 1 Configuration**

Press [Enter] to make settings for the following items:

Serial Port

Use this item to enable or disable serial port (COM).

The optional settings are: [Disabled]; [Enabled].

When set as **[Enabled], user can make further settings in the following items:*

Change Settings

Use this item to select an optimal setting for super IO device. Changing setting may conflict with system resources.

Transmission Mode Select

The optional settings are: [RS422]; [RS232]; [RS485].

► **Serial Port 2 Configuration**

Press [Enter] to make settings for the following items:

Serial Port

Use this item to enable or disable serial port (COM).

The optional settings are: [Disabled]; [Enabled].

When set as **[Enabled], user can make further settings in the following items:*

Change Settings

Use this item to select an optimal setting for super IO device. Changing setting may conflict with system resources.

Transmission Mode Select

The optional settings are: [RS422]; [RS232]; [RS485].

COM1/COM2 Mode Speed Select

The optional settings are: [RS232/RS422/RS485=250kbps]; [RS232=1Mbps, RS422/RS485=10Mbps].

► **Serial Port 3 Configuration/ Serial Port 4 Configuration/ Serial Port 5 Configuration/ Serial Port 6 Configuration**

Press [Enter] to make settings for the following items:

Serial Port

Use this item to enable or disable serial port (COM).

The optional settings are: [Disabled]; [Enabled].

When set as **[Enabled], user can make further settings in the following items:*

Change Settings

Use this item to select an optimal setting for super IO device. Changing setting may conflict with system resources.

WatchDog Reset Timer

Use this item to enable or disable WDT reset function.

When set as **[Enabled], the following sub-items shall appear:*

WatchDog Reset Timer Value

User can set a value in the range of [4] to [255].

WatchDog Reset Timer Unit

The optional settings are: [Sec.]; [Min.].

ATX Power Emulate AT Power

This item support Emulate AT power function, MB power On/Off control by power supply. Use needs to select 'AT or ATX Mode' on MB jumper at first (refer to **Page 12**, Pin 1&2 of AT_COPEN jumper for ATX Mode & AT Mode Select).

Case Open Detect

Use this item to detect case has already open or not, show message in POST.

The optional settings are: [Disabled]; [Enabled].

When set as [Enabled], system will detect if COPEN has been short or not (refer to **Page 13**, Pin 3&4 of AT_COPEN jumper for Case Open Detection); if Pin 3&4 of AT_COPEN is short, system will show Case Open Message during POST.

4 PC Health Status

Press [Enter] to view current hardware health status, make further settings in 'SmartFAN Configuration' and set value in 'Shutdown Temperature'.

► SmartFAN Configuration

Press [Enter] to make settings for 'SmartFan Configuration':

SmartFAN Configuration

CPUFAN / SYSFAN Smart Mode

The optional settings are: [Disabled]; [Enabled].

When set as [Enabled], the following sub-items shall appear:

CPUFAN / SYSFAN Full-Speed Temperature

Use this item to set CPUFAN /SYSFAN full speed temperature. Fan will run at full speed when above this pre-set temperature.

CPUFAN / SYSFAN Full-Speed Duty

Use this item to set CPUFAN/SYSFAN full-speed duty. Fan will run at full speed when above this pre-set duty.

CPUFAN / SYSFAN Idle-Speed Temperature

Use this item to set CPUFAN/SYSFAN idle speed temperature. Fan will run at idle speed when below this pre-set temperature.

CPUFAN / SYSFAN Idle-Speed Duty

Use this item to set CPUFAN/SYSFAN idle speed duty. Fan will run at idle speed when below this pre-set duty.

Shutdown Temperature

Use this item to select system shutdown temperature.

The optional settings are: [Disabled]; [70°C/158°F]; [75°C/167°F]; [80°C/176°F]; [85°C/185°F]; [90°C/194°F].

4 Serial Port Console Redirection

COM1

Console Redirection

The optional settings are: [Disabled]; [Enabled]. When set as [Enabled], the following sub-items shall appear:

4 Console Redirection Settings

The settings specify how the host computer and the remote computer (which the user is using) will exchange data. Both computers should have the same or compatible settings.

Press [Enter] to make settings for the following items:

COM1

Console Redirection Settings

Terminal Type

The optional settings are: [VT100]; [VT100+]; [VT-UTF8]; [ANSI].

Emulation: [ANSI]: Extended ASCII char set; [VT100]: ASCII char set; [VT100+]:

Extends VT100 to support color,function keys, etc.; [VT-UTF8]: Uses UTF8

encoding to map Unicode chars onto 1 or more bytes.

Bits per second

Use this item to select serial port transmission speed. The speed must be matched on the other side. Long or noisy lines may require lower speeds.

The optional settings are: [9600]; [19200]; [38400]; [57600]; [115200].

Data Bits

The optional settings are: [7]; [8].

Parity

A parity bit can be sent with the data bits to detect some transmission errors.

The optional settings are: [None]; [Even]; [Odd]; [Mark]; [Space].

[Even]: parity bit is 0 if the num of 1's in the data bits is even; [Odd]: parity bit is 0 if num of 1's in the data bits is odd; [Mark]: parity bit is always 1; [Space]: Parity bit is always 0; [Mark] and [Space] Parity do not allow for error detection.

Stop Bits

Stop bits indicate the end of a serial data packet. (A start bit indicates the beginning). The standard setting is 1 stop bit. Communication with slow devices may require more than 1 stop bit.

The optional settings are: [1]; [2].

Flow Control

Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a "stop" signal can be sent to stop the data flow. Once the buffers are empty, a "start" signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals.

The optional settings are: [None]; [Hardware RTS/CTS].

VT-UTF8 Combo Key Support

Use this item to enable VT-UTF8 Combination Key Support for ANSI/VT100 terminals.

The optional settings are: [Disabled]; [Enabled].

Recorder Mode

With this mode enable only text will be sent. This is to capture Terminal data.

The optional settings are: [Disabled]; [Enabled].

Resolution 100x31

Use this item to enable or disable extended terminal resolution.

The optional settings: [Disabled]; [Enabled].

Putty KeyPad

Use this item to select FunctionKey and KeyPad on Putty.

The optional settings are:: [VT100]; [Linux]; [XTERM6]; [SCO]; [ESCN]; [VT400].

Legacy Console Redirection

4 Legacy Console Redirection Settings

Press [Enter] to make settings for the following item:

Legacy Console Redirection Settings

Legacy Serial Redirection Port

For user to select a COM port to display redirection of legacy OS and Legacy OPRom messages.

The optional settings are: [COM1]; [COM1(Pci Bus0, Dev0, Func0) (Disabled)].

Resolution

This item is for user to select the number of Rows and Columns supported redirection.

The optional settings are: [80x24]; [80x25].

Redirect After POST

The optional settings are: [Always Enable]; [Bootloader].

When [**Bootloader**] is selected, then Legacy Console Redirection is disabled before booting to legacy OS. When [**Always Enabled**] is selected, then Legacy Console Redirection is enabled for legacy OS. Default setting for this option is set to [**Always Enabled**].

Serial Port for Out-of-Band Management/

Windows Emergency Management Services (EMS)

Console Redirection

The optional settings: [Disabled]; [Enabled]. When set as [Enabled], the following sub-items shall appear:

4 Console Redirection Settings

The settings specify how the host computer and the remote computer (which the user is using) will exchange data. Both computers should have the same or

compatible settings.

Press [Enter] to make settings for the following items:

Out-of-Band Mgmt Port

Microsoft Windows Emergency Management Services (EMS) allows for remote management of a Windows Server OS through a serial port.

The optional settings: [COM1]; [COM1(Pci Bus0, Dev0, Func0)(Disabled)].

Terminal Type

The optional settings: [VT100]; [VT100+]; [VT-UTF8]; [ANSI].

[VT-UTF8] is the preferred terminal type for out-of-band management. The next best choice is [VT100+] and then [VT100]. See above, in Console Redirection Settings page, for more help with Terminal Type/Emulation.

Bits per second

Use this item to select serial port transmission speed. The speed must be matched on the other side. Long or noisy lines may require lower speeds.

The optional settings: [9600]; [19200]; [57600]; [115200].

Flow Control

Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a “stop” signal can be sent to stop the data flow. Once the buffers are empty, a “start” signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals.

The optional settings: [None]; [Hardware RTS/CTS]; [Software Xon/Xoff].

Data Bits

The default setting is: [8].

**This item may or may not show up, depending on different configuration.*

Parity

The default setting is: [None].

**This item may or may not show up, depending on different configuration.*

Stop Bits

The default setting is: [1].

**This item may or may not show up, depending on different configuration.*

4 USB Configuration

Press [Enter] to make settings for the following sub-items:

USB Configuration

Legacy USB Support

The optional settings are: [Enabled]; [Disabled]; [Auto].

[Enabled]: To enable legacy USB support.

[Disabled]: to keep USB devices available only for EFI specification,

[Auto]: To disable legacy support if no USB devices are connected.

XHCI Hand-off

This is a workaround for OSeS without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.

The optional settings are: [Enabled]; [Disabled].

USB Mass Storage Driver Support

Use this item to enable or disable USB mass storage driver support.

The optional settings are: [Disabled]; [Enabled].

USB hardware delays and time-outs

USB Transfer time-out

Use this item to set the time-out value for control, bulk, and interrupt transfers.

The optional settings are: [1 sec]; [5 sec]; [10 sec]; [20 sec].

Device reset time-out

Use this item to set USB mass storage device start unit command time-out.

The optional settings are: [10 sec]; [20 sec]; [30 sec]; [40 sec].

Device power-up delay

Use this item to set maximum time the device will take before it properly reports itself to the host controller. 'Auto' uses default value: for a root port it is 100 ms, for a hub port the delay is taken from hub descriptor.

The optional settings: [Auto]; [Manual].

Select [Manual] you can set value for the following sub-item: '**Device Power-up delay in seconds**', the delay range in from 1 to 40 seconds, in one second increments.

4 Network Stack Configuration

Press [Enter] to go to '**Network Stack**' screen to make further settings.

Network Stack

Use this item to enable or disable UEFI Network Stack.

The optional settings are: [Disabled]; [Enabled].

When set as [Enabled], the following sub-items shall appear:

Ipv4 PXE Support

The optional settings are: [Disabled]; [Enabled].

Use this item to enable IPv4 PXE boot support. When set as [Disabled], IPv4 boot support will not be available.

Ipv6 PXE Support

The optional settings are: [Disabled]; [Enabled].

Use this item to enable IPv6 PXE boot support. When set as [Disabled], IPv6 boot support will not be available.

PXE boot wait time

Use this item to set wait time to press [ESC] key to abort the PXE boot.

Use either [+] / [-] or numeric keys to set the value.

Media Detect Count

Use this item to set number of times presence of media will be checked.

Use either [+] / [-] or numeric keys to set the value.

4 **CSM Configuration**

Press [Enter] to make settings for the following sub-items:

Compatibility Support Module Configuration

CSM Support

Use this item enable or disable CSM support.

The optional settings are: [Disabled]; [Enabled].

Option ROM execution

Network

This option controls the execution of Legacy PXE OpROM.

The optional settings are: [Do not launch]; [Legacy].

Storage

This option controls the execution of UEFI and Legacy Storage OpROM.

The optional settings are: [Do not launch]; [UEFI]; [Legacy].

Other PCI devices

This item is for system to determine OpROM execution policy for devices other than Network, storage or video.

The optional settings are: [Do not launch]; [UEFI]; [Legacy].

4 NVMe Configuration


Press [Enter] to view current NVMe Configuration.

**Note: options only when NVME device is available.*

4 Intel(R) I211 Gigabit Network Connection- XX:XX:XX:XX:XX:XX / Intel(R) Ethernet Connection (7) I219-LM- XX:XX:XX:XX:XX:XX

This item shows current network brief information.

3-8 Chipset Menu

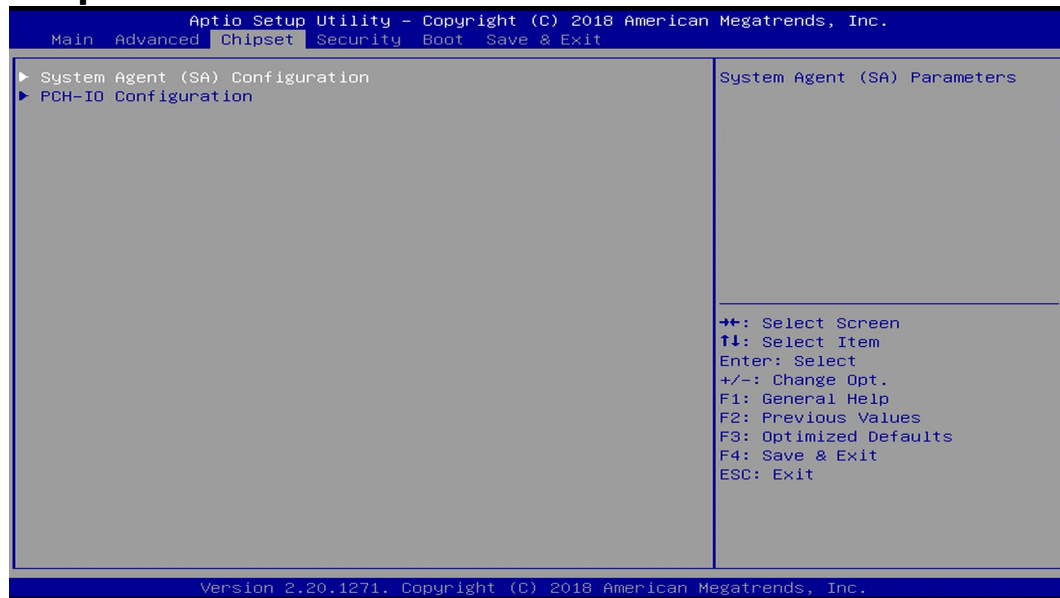

4 System Agent (SA) Configuration

Press [Enter] to make settings for the following sub-items:

VT-d

The optional settings are: [Enabled]; [Disabled].

▶ Memory Configuration

Press [Enter] to view brief information for the working memory module.

▶ Graphics Configuration

Press [Enter] to make further settings for Graphics Configuration.

Graphics Configuration

Primary Display

Use this item to select which of IGFX/PEG/PCI graphics device should be Primary Display.

The optional settings are: [Auto]; [IGFX]; [PEG].

Primary IGFX Boot Display

Use this item to select the video device which will be activated during POST. This has no effect if external graphics present.

The optional settings are: [VBIOS Default]; [VGA]; [DP]; [HDMI]; [LVDS].

***Note:** *In the case that the ‘Primary IGFX Boot Display’ is select as [VGA], [DP], [HDMI] or [LVDS], user can make further settings in ‘Secondary IGFX Boot Display’:*

Secondary IGFX Boot Display

Use this item to select the secondary Display device.

The optional settings are: [Disabled]; [VGA]; [DP]; [HDMI].

Internal Graphics

Use this item to keep IGFX enabled based on the setup options.

The optional settings are: [Auto]; [Disabled]; [Enabled].

Aperture Size

Use this item to select the Aperture Size. Above 4GB MMIO BIOS assignment is automatically enabled when selecting 2048MB aperture. To use this feature, please disable CSM Support.

The optional settings are: [128MB]; [256MB]; [512MB]; [1024MB]; [2048MB].

DVMT Pre-allocated

Use this item to select DVMT 5.0 Pre-Allocated (Fixed) Graphics Memory size used by the Internal Graphics Device.

The optional settings are: [32MB]; [64MB].

DVMT Total Gfx Mem

Use this item to select DVMT 5.0 Total Graphic Memory size used by the Internal Graphics Device.

The optional settings are: [128MB]; [256MB]; [MAX].

***Note:** When '**Primary IGFX Boot Display**' is set as **[LVDS]**, user can make further settings in the following items related to LVDS options:

Backlight Control

Use this item to select backlight control settings.

The optional settings are: [PWM Inverted]; [PWM Normal].

Panel Type

Use this item to select LVDS panel resolution type.

The optional settings are: [800 x 480 18bit Single]; [800 x 600 18bit Single]; [800 x 600 24bit Single]; [1024 x 600 18bit Single]; [1024 x 768 18bit Single]; [1024 x 768 24bit Single]; [1280 x 768 24bit Single]; [1280 x 800 18bit Single]; [1280 x 800 24bit Single]; [1366 x 768 18bit Single]; [1366 x 768 24bit Single]; [1440 x 900 18bit Dual]; ; [1440 x 900 24bit Dual]; [1280 x 1024 24bit Dual]; [1680 x 1050 24bit Dual]; [1920 x 1080 24bit Dual].

LVDS FW Write Protect

Use this item to enable or disable LVDS FW Update/Protect.

The optional settings are: [Disabled]; [Enabled].

► **PEG Port Configuration**

Press [Enter] to make further settings for PEG port options.

PEG Port Configuration

PCIEX16 Slot

Enable Root Port

Use this item to enable or disable the root port.

The optional settings are: [Disabled]; [Enabled]; [Auto].

***Note:** Root Port will automatically be enabled in the case that x8 Bifurcation is applied, despite any pre-selected option as [Enabled], [Disabled], or [Auto].

Max Link Speed

Use this item to select slot max speed.

The optional settings are: [Auto]; [Gen1]; [Gen2]; [Gen3].

Max Link Width

This item is for user to force PEG link to restrain to X1/2/4/8.

The optional settings are: [Auto]; [Force X1]; [Force X2]; [Force X4]; [Force X 8].

PCIEX16 Slot (Bifurcation)

Max Link Speed

Use this item to select slot max speed.

The optional settings are: [Auto]; [Gen1]; [Gen2]; [Gen3].

Max Link Width

This item is for user to force PEG link to restrain to X1/2/4/8.

The optional settings are: [Auto]; [Force X1]; [Force X2]; [Force X4]; [Force X 8].

Detect Non-Compliance Device

This item is for user to detect Non-Compliance PCI Express Device in PEG.

The optional settings are: [Disabled]; [Enabled].

► **PCH-IO Configuration**

Press [Enter] to make settings for the following sub-items:

PCH-IO Configuration

HD Audio

This item controls detection of the HD-Audio device.

The optional settings are: [Disabled]; [Enabled].

[Disabled]: HDA will be unconditionally disabled.

[Enabled]: HAD will be unconditionally enabled.

Onboard Lan1 Controller

Use this item to enable or disable corresponding onboard NIC device or controller.

Wake on LAN Enable

Use this item to enable or disable integrated LAN to wake the system.

Onboard Lan2 Controller

Use this item to enable or disable Lan2 onboard NIC device or controller.

MPEST Slot

Use this item to enable or disable MPEST slot function.

The optional settings are: [Disabled]; [Enabled].

Speed

The optional settings are: [Auto]; [Gen1]; [Gen2]; [Gen3].

MPE Slot

Use this item to enable or disable MPE slot function.

The optional settings are: [Disabled]; [Enabled].

Speed


The optional settings are: [Auto]; [Gen1]; [Gen2]; [Gen3].

System after G3

Use this item to specify what state to go to when power re-applied after a power failure (G3 state).

The optional settings are: [Always On]; [Always Off]; [Former State].

3-9 Security Menu

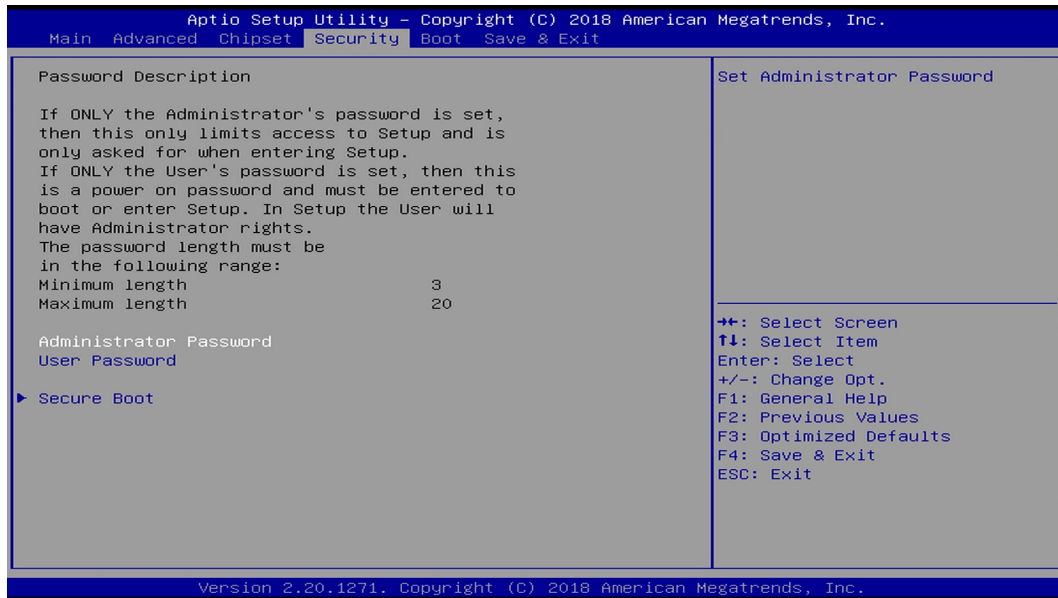

Security menu allow users to change administrator password and user password settings.

Administrator Password

If there is no password present on system, please press [Enter] to create new administrator password. If password is present on system, please press [Enter] to verify old password then to clear/change password. Press again to confirm the new administrator password.

User Password

If there is no password present on system, please press [Enter] to create new administrator password. If password is present on system, please press [Enter] to verify old password then to clear/change password. Press again to confirm the new administrator password.

4 Secure Boot

Press [Enter] to make customized secure settings:

Secure Boot

The optional settings are: [Disabled]; [Enabled].

***Note:**Secure Boot can be enabled if 1. System running in user mode with enrolled Platform Key (PK); 2. CSM function is disabled.

Secure Boot Mode

The optional settings are: [Standard]; [Custom].

Set UEFI Secure Boot Mode to Standard mode or Custom mode. This change is effective after save. After reset, this mode will return to Standard mode.

In Custom mode, Secure Boot Policy variables can be configured by a physically present user without full authentication.

**When set as [Custom], user can make further settings in the following items that show up:*

4 Restore Factory Keys

Use this item to force system to User Mode, to install factory default Secure Boot key databases.

4 Reset To Setup Mode

Use this item to delete all Secure Boot Key databases from NVRAM.

4 Key Management

This item enables experienced users to modify Secure Boot variables, which includes the following items:

Factory Key Provision

This item is for user to install factory default secure boot keys after the platform reset and while the system is in Setup mode.

The optional settings are: [Disabled]; [Enabled].

4 Restore Factory Keys

Use this item to force system into User Mode.

4 Reset to Setup Mode

Use this item to delete all Secure Boot key databases from NVRAM.

4 Export Secure Boot variables

Use this item to copy NVRAM content of Secure Boot variables to files in a root folder on a file system device.

4 Enroll Efi Image

This item allows the image to run in Secure Boot Mode.

Enroll SHA256 Hash certificate of a PE image into Authorized Signature Database (db).

Device Guard Ready

4 Remove 'UEFI CA' from DB

Device Guard ready system must not list 'Microsoft EFI CA' Certificate in Authorized Signature database (db).

4 Restore DB defaults

Use this item to restore DB variable to factory defaults.

Secure Boot Variable/Size/Keys/Key Source

4 Platform Key (PK)/Key Exchange Keys/Authorized Signature/Forbidden Signature/ Authorized TimeStamps/OS Recovery Signatures

Use this item to enroll Factory Defaults or load the keys from a file with:

1. Public Key Certificate in:


- a) EFI_SIGNATURE_LIST
- b) EFI_CERT_X509 (DER encoded)
- c) EFI_CERT_RSA2048 (bin)
- d) EFI_CERT_SHAXXX (bin)

2. Authenticated UEFI Variable

3. EFI PE/COFF Image (SHA256)

Key Source: Factory, External, Mixed.

3-10 Boot Menu

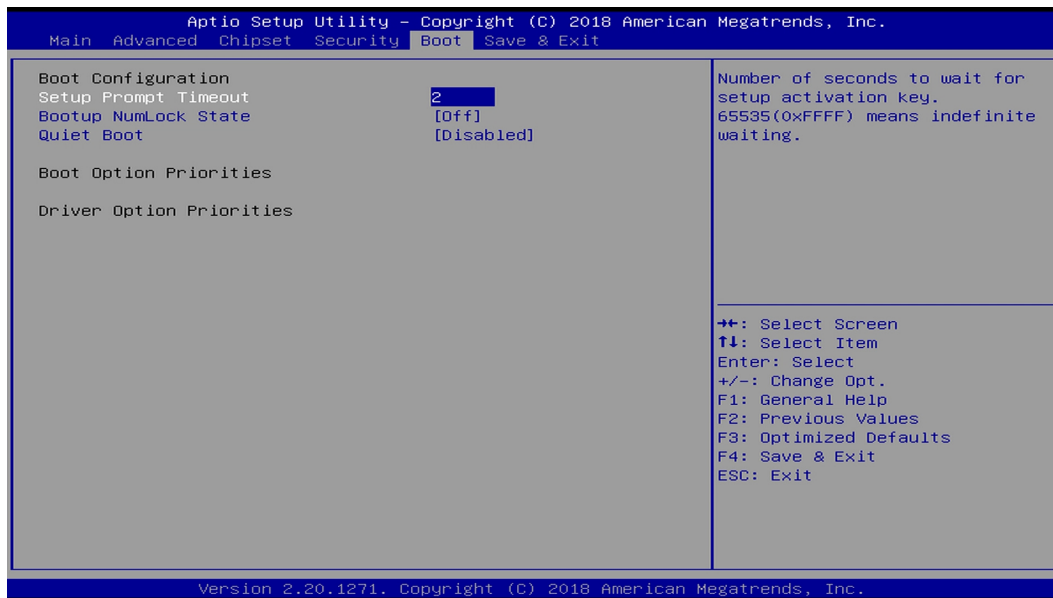

Boot Configuration

Setup Prompt Timeout

Use this item to set number of seconds to wait for setup activation key.

Bootup Numlock State

Use this item to select keyboard numlock state.

The optional settings are: [On]; [Off].

Quiet Boot


The optional settings are: [Disabled]; [Enabled].

Boot Option Priorities

Boot Option #1/ Boot Option #2...

Use this item to decide system boot order from available options.

3-11 Save & Exit Menu

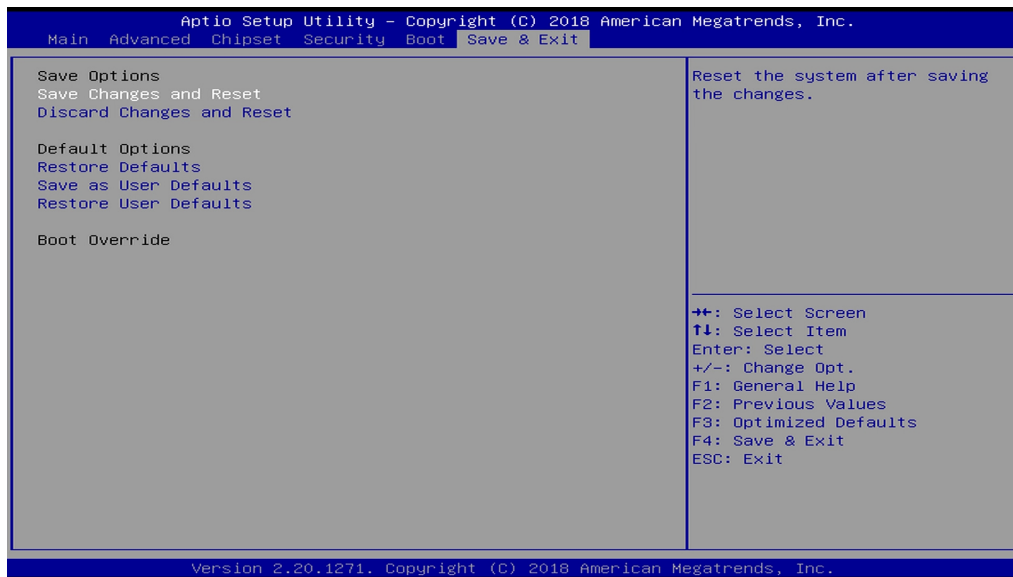

Save Options

Save Changes and Reset

This item allows user to reset the system after saving the changes.

Discard Changes and Reset

This item allows user to reset the system without saving any changes.

Default Options

Restore Defaults

Use this item to restore /load default values for all the setup options.

Save as User Defaults

Use this item to save the changes done so far as user defaults.

Restore User Defaults

Use this item to restore the user defaults to all the setup options.

Boot Override

UEFI: Built-in EFI Shell

Press this item and a dialogue box shall appear to ask if user wish to save configuration and reset.
