

# LE-37D


---

## 3.5 inch Motherboard

### User's Manual

Edition 1.75

2017/07/06

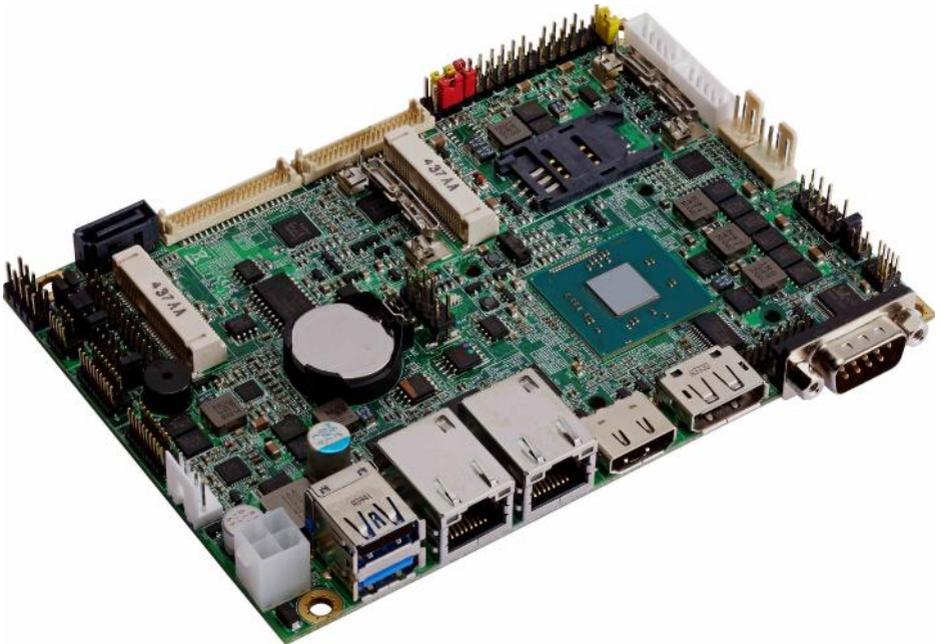

## **Copyright**

Copyright 2014, all rights reserved. This document is copyrighted and all rights are reserved. The information in this document is subject to change without prior notice to make improvements to the products.

This document contains proprietary information and protected by copyright. No part of this document may be reproduced, copied, or translated in any form or any means without prior written permission of the manufacturer.

All trademarks and/or registered trademarks contains in this document are property of their respective owners.

## **Disclaimer**

The company shall not be liable for any incidental or consequential damages resulting from the performance or use of this product.

The company does not issue a warranty of any kind, express or implied, including without limitation implied warranties of merchantability or fitness for a particular purpose.

The company has the right to revise the manual or include changes in the specifications of the product described within it at any time without notice and without obligation to notify any person of such revision or changes.

## **Trademark**

All trademarks are the property of their respective holders.

---

Any questions please visit our website at <http://www.commell.com.tw>

# Packing List:

Please check the package content before you starting using the board.



**LE-37D 3.5 inch Miniboard x 1**



**1 to 3 power output cable x 1  
(OAL4P-2)/ (1040051)**



**DC Power Cable x 1  
(OALDC-A)/ (1040433)**



**PS/2 Keyboard & Mouse Cable x 1  
(OALPS2/KM)/ (1040131)**



**CRT cable without bracket x 1  
(OALVGA-SNB-7)/ (1040557)**



**Cooler x 1  
(OHSF-5) / (2181010016)  
LE-37DJIP, LE-37DJX2,  
LE-37DEIP, LE-37DEX2**



**SATA Cable x 1  
(OALSATA3-L)/(1040529)**




**COM Port Cable x 1  
(OALE5-BKU1NB)/ (1040086)**



**SATA Power Cable x 1  
(OAL4P-S2)/ (1040054)**



**Audio Cable x 1  
(OALPJ-HDUNB)/ (1040123)**

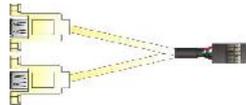

**USB.0 Cable x 1  
(OALUSBA-3)/ (1040173)**



**Heat Sink x 1  
(OHS-7) / (2181110009)  
LE-37DNIP, LE-37DNX2**

## Printed Matters:

Driver CD (Including User's Manual) x 1

# Index

<b>Chapter 1 &lt;Introduction&gt;</b> .....	<b>6</b>
1.1 <Product Overview> .....	6
1.2 <Product Specification> .....	7
1.3 <Mechanical Drawing> .....	8
1.4 <Block Diagram> .....	9
<b>Chapter 2 &lt;Hardware Setup&gt;</b> .....	<b>10</b>
2.1 <Connector Location> .....	10
2.2 <Jumper Location & Reference> .....	10
2.3 <Connector Reference> .....	11
2.3.1 <Internal Connectors> .....	11
2.3.2 <External Connectors> .....	12
2.4 <Memory and CFAST Setup> .....	12
2.4.1 < Memory Setup > .....	12
2.4.2 < CFAST Setup > .....	12
2.5 <CMOS & ATX Setup> .....	13
2.6 <Serial ATA Interface> .....	14
2.7 <Ethernet Interface> .....	14
2.8 <Onboard Display Interface> .....	14
2.8.1 <External Display> .....	14
2.8.2 <Internal Display> .....	14
2.9 <Integrated Audio Interface> .....	18
2.10 <USB Interface> .....	19
2.11 <Serial Port> .....	22
2.12 <PCIe Mini Card and SIM Interface> .....	25
2.12.1 <SIM Setup> .....	26
2.13 <GPIO and SMBUS Interface> .....	27
2.14 <Power Supply and Fan Interface > .....	29
2.14.1 <Power Input> .....	29
2.14.2 <Power Output> .....	29

2.14.3 <Fan connector> .....	29
2.15 <Switch and Indicator> .....	30
<b>Chapter 3 &lt;System Setup&gt; .....</b>	<b>31</b>
3.1 <Audio Configuration> .....	31
3.2 <Display Properties Setting> .....	32
3.3 <SATA configuration> .....	34
<b>Chapter 4 &lt;BIOS Setup&gt; .....</b>	<b>34</b>
<b>Appendix A &lt;I/O Port Pin Assignment&gt; .....</b>	<b>36</b>
A.1 <Serial ATA Port> .....	36
A.2 <LAN Port> .....	36
A.3 <LPC Port> .....	36
<b>Appendix B &lt;Flash BIOS&gt; .....</b>	<b>37</b>
B.1 <Flash Tool> .....	37
B.2 <Flash BIOS Procedure> .....	37
<b>Appendix C &lt;Programming GPIO's&gt; .....</b>	<b>38</b>
<b>Appendix D &lt; Programming Watchdog Timer &gt; .....</b>	<b>39</b>
<b>Contact Information .....</b>	<b>40</b>

# **Chapter 1 <Introduction>**

## **1.1 <Product Overview>**

The LE-37D motherboard is design based on Intel® Celeron® Processor J1900 / N2930 and Intel® Atom Processor E3845, delivering outstanding compute, graphical, and media performance while operating in an extended range of thermal conditions. The SoC bases on the Silvermont microarchitecture, utilizing Intel's industry-leading 22nm process technology with 3-D Tri-Gate transistors, which deliver significant improvements in computational performance and energy efficiency.

### **New features for Intel® Celeron® and Atom Processor**

The Intel® Celeron® Processor J1900 / N2930 and Intel® Atom E3845 Processor supports graphics, media performance, flexibility and more enhanced security that is suitable for a variety of intelligent systems the ideal choice.

### **Outstanding integration of I/O interfaces**

Supports display interfaces with graphics processing, camera interfaces with image processing, audio with digital signal processing, multiple storage types, and legacy embedded I/O. Provides interface expansion capabilities through industry-standard high-bandwidth interfaces such as PCI Express\* Gen 2.0, Hi-speed USB 2.0, and USB 3.0 connectivity.

### **All in One multimedia solution**

Based on Intel® J1900 / N2920 /E3845 SoC, the board provides high performance onboard graphics, CRT, 24-bit dual channel LVDS interface, Display Port, HDMI and 2 channels High Definition Audio, to meet the very requirement of the multimedia application.

### **Flexible Extension Interface**


The board provides two PCIe mini slot and one SIM slot.

## 1.2 <Product Specification>


### General Specification

<b>Form Factor</b>	3.5 inch motherboard
<b>CPU</b>	Intel® Processor J1900/N2930/E3845, package type FCBGA1170
<b>Memory</b>	1 x DDR3L (support <b>1.35V</b> ) 1066/1333 SO-DIMM up to 8GB
<b>Real Time Clock</b>	Chipset integrated RTC with onboard lithium battery
<b>Watchdog Timer</b>	Generates a system reset with internal timer for 1min/s ~ 255min/s
<b>Power Management</b>	Supports ACPI 5.0 compliant
<b>Serial ATA(SATA) Interface</b>	1 x serial ATA interface with 300MB/s(3Gb/s) transfer rate
<b>VGA Interface</b>	Intel® Clear Video integrated HD Graphics Technology
<b>HDMI Interface</b>	Onboard HDMI connector. <b>(HDMI and LVDS1 can't be enabled simultaneously)</b>
<b>Display port Interface</b>	Onboard Display port connector. <b>(Display port and LVDS2 can't be enabled simultaneously)</b>
<b>LVDS Interface</b>	2 x Onboard 24-bit dual channel LVDS connector with +3.3V/+5V/+12V supply
<b>Audio Interface</b>	Realtek ALC262 High Definition Audio Codec
<b>LAN Interface</b>	2 x Intel® I210-AT Gigabit LAN
<b>GPIO Interface</b>	Onboard programmable 8-bit Digital I/O interface.
<b>Extended Interface</b>	2 x PCIE Mini card(1 x mSATA option), 1 x SIM socket, 1x CFast <b>(CFast and mSATA can't be enabled simultaneously)</b>
<b>Internal I/O Port</b>	4 x RS232, 1 x RS232/422/485, 1 x GPIO, 1 x Audio connector, 1 x SMBUS connector, 1 x CRT, 2 x LVDS, 1 x LPC, 4 x USB 2.0(XHCI) and 1 x SATAII
<b>External I/O Port</b>	1 x RS232, 1 x HDMI port, 1 x Display port, 2 x RJ45 LAN ports, 1 x USB 3.0(XHCI)/2.0(EHCI) port, 1 x USB 2.0 ports(EHCI).
<b>Power Requirement</b>	6~24V full range DC Input
<b>Dimension</b>	146mm x 101mm
<b>Temperature</b>	Operating within 0~60 centigrade(forLE-37DJ andLE-37DN serial) Storage within -20~85 centigrade. (forLE-37DJ andLE-37DN serial) Operating within -40~85 centigrade(for LE-37DE serial) Storage within -40~85 centigrade.(for LE-37DE serial)

### 1.3 <Mechanical Drawing>


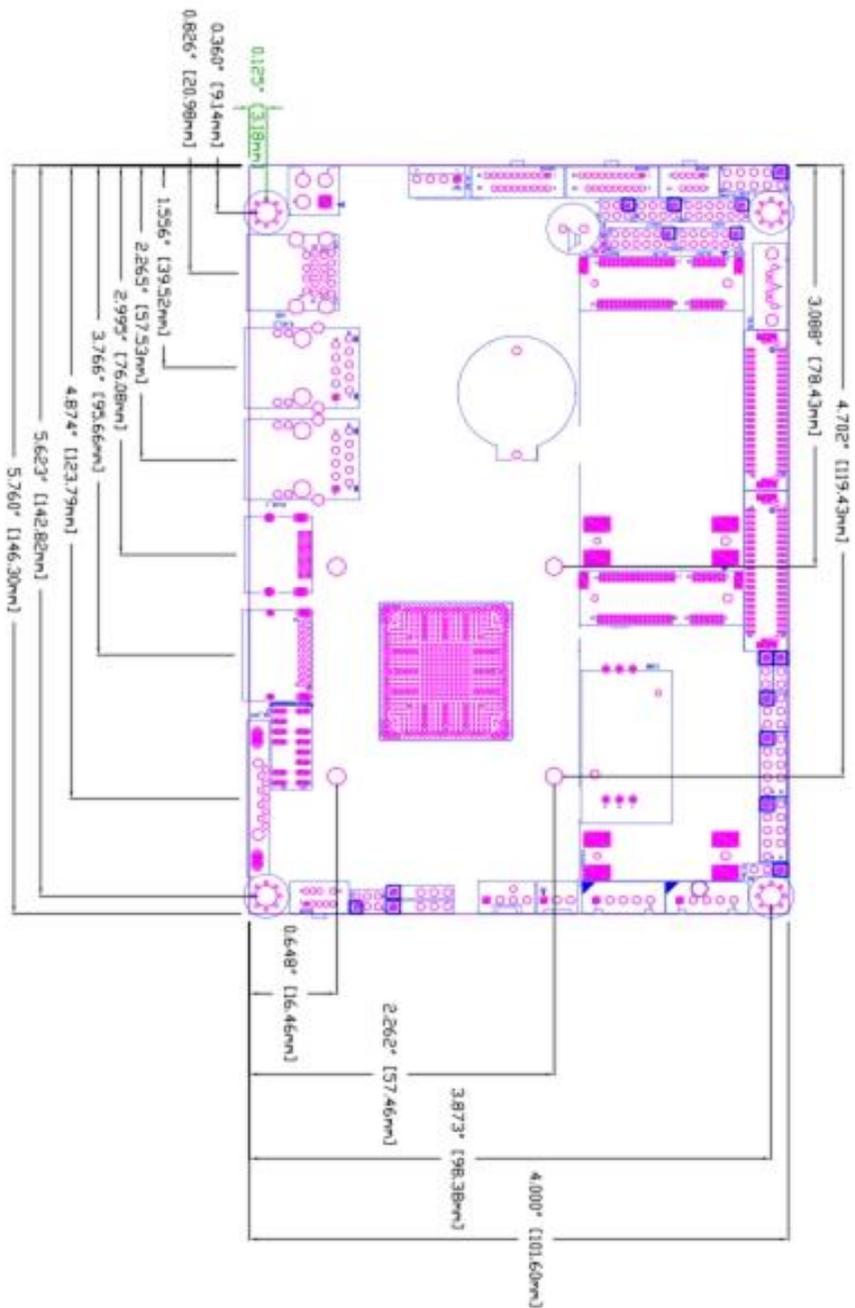


## 1.4 <Block Diagram>

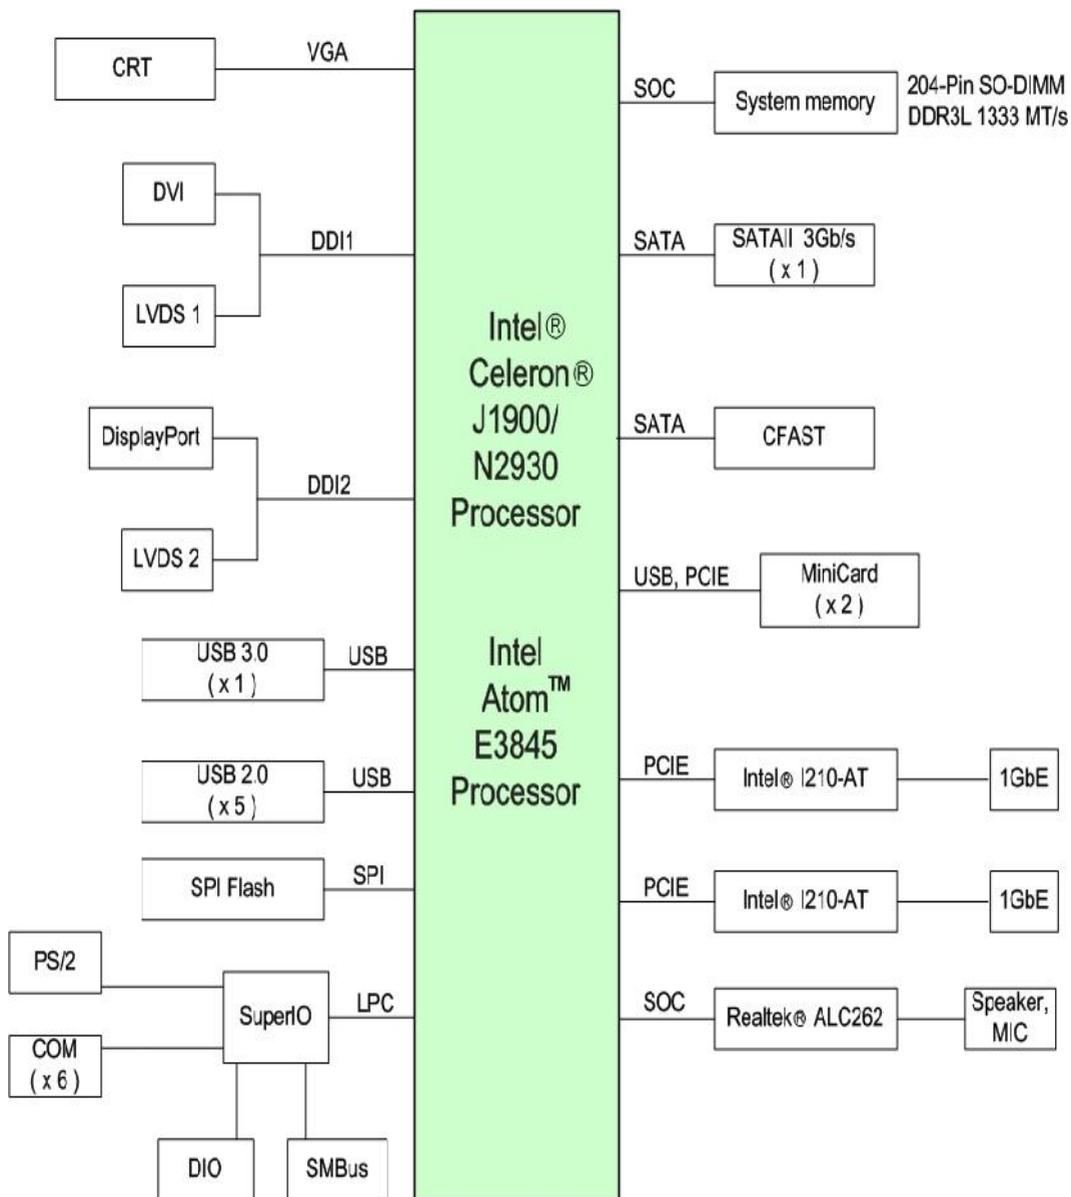

# Chapter 2 <Hardware Setup>

## 2.1 <Connector Location>

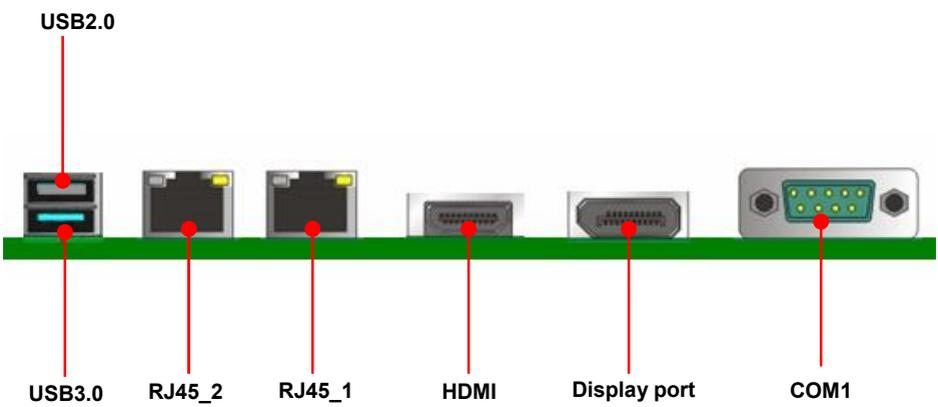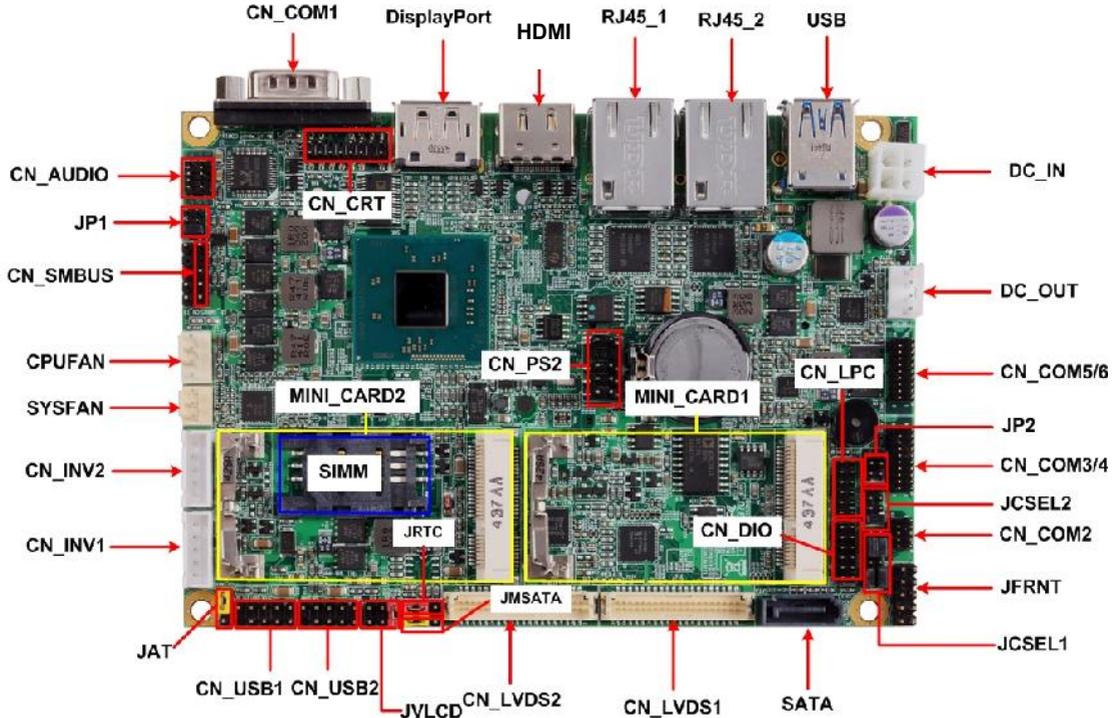

## 2.2 <Jumper Location & Reference>

Jumper	Function
JRTC	CMOS Operating/Clear Setting
JVLCD	Panel Voltage Setting
JAT	Power mode select
JP1	Com1 Voltage Setting (For Pin 9)
JP2	Com2 Voltage Setting (For Pin 9)
JCSEL1	CN_COM2 RS-232 RS422 RS485 Setting
JCSEL2	CN_COM2 RS-232 RS422 RS485 Setting
JVUSB1	USB Voltage Setting
JMSATA	Mini Card1 mSATA Setting (Mini PCIe)

## 2.3 <Connector Reference>

### 2.3.1 <Internal Connectors>

Connector	Function
CPU	FCBGA 1170 CPU
SO-DIMM	204 -pin DDR3L SO-DIMM slot
SATA	7-pin Serial ATA2 connector
DC_IN	DC 6~27V input connector
DC_OUT	4-pin DC output connector
CN_AUDIO	5 x 2-pin audio connector
CN_DIO	6 x 2-pin digital I/O connector
CN_USB 2/3	5 x 2-pin USB2.0 connector
CN_CRT	8 x 2-pin CRT connector
CN_LVDS1/2	20 x 2-pin LVDS connector
CN_INV1/2	5-pin LCD inverter connector
CN_COM2	9-pin RS232/485/422 connector
CN_COM 3/4 5/6	19-pin RS232 connector
CN_LPC	6 x 2-pin LPC connector
CN_PS2	5 x 2-pin PS2 connector
CN_SMBUS	5-pin SMBUS connector
JFRNT	10-pin front panel switch/indicator connector
Mini-Card1/2	52-pin Mini-PCIe slot
SIMM	6-pin slot
CFAST	7+17-pin connector
CPUFAN	4-pin CPU cooler fan connector
SYSFAN	4-pin System cooler fan connector

### 2.3.2 <External Connectors>


Connector	Function
COM1	DB9 Serial port connector
DisplayPort	20-pin DisplayPort connector
HDMI	19-pin HDMI connector
USB	USB 2.0 and USB 3.0 connector
RJ45 1/2	RJ45 LAN connector

## 2.4 <Memory and CFAST Setup>

### 2.4.1 < Memory Setup >

The board provide 204-pin DDR3L SO-DIMM to support 1066/1333MHz up to 8GB.

Support Non-ECC, unbuffered memory only

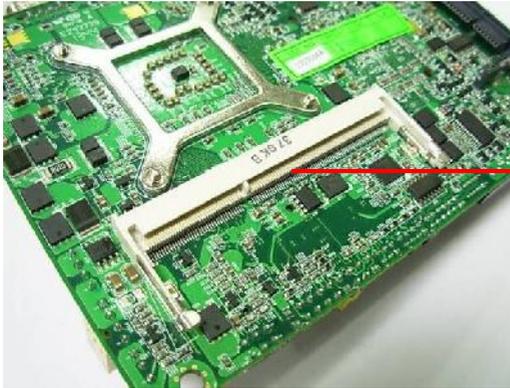

SO-DIMM

### 2.4.2 < CFAST Setup >

The board provide one CFAST slot which supports SATA2 interface.

The CFAST has the same size with CF card, but it shows higher efficiency and stability to transmit SATA signal.



CFAST plug closeup



Installing the CFAST in the back of the board.  
 Note that the slot direction and fool-proofing



Installation is complete

## 2.5 <CMOS & ATX Setup>

The board's data of CMOS can be setting in BIOS. If the board refuses to boot due to inappropriate CMOS settings, here is how to proceed to clear (reset) the CMOS to its default values.

**Jumper: JRTC**

**Type: Onboard 3-pin jumper**

JRTC	Mode
1-2	Clear CMOS
2-3	Normal Operation


Default setting: 2-3

**Jumper: JAT**

**Type: Onboard 3-pin jumper**

JAT	Mode
1-2	AT Mode
2-3	ATX Mode

Default setting: 2-3

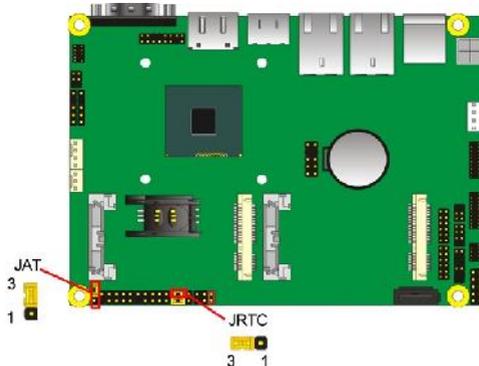

## 2.6 <Serial ATA Interface>

LE-37D has one SATAII interface, the transfer rate of the SATAII can be up to 300MB/s.

## 2.7 <Ethernet Interface>

The board integrates with two Intel® I210-AT controllers, The Intel Gigabit Ethernet supports triple speed of 10/100/1000Base-T, with IEEE802.3 compliance.

## 2.8 <Onboard Display Interface>

Based on Intel CPU with built-in HD Graphic, the board provides one HDMI (onboard) and one DisplayPort, two 40-pin LVDS interface with 5-pin LCD backlight inverter connector and internal 16-pin CRT interface.

The board provides double display function with clone mode and extended desktop mode for HDMI, DisplayPort, CRT and LVDS.


### 2.8.1 <External Display>

Please connect your monitor which supports DisplayPort and HDMI to connect onboard rear I/O Port.

### 2.8.2 <Internal Display>

The board provides two 40-pin LVDS connector for 18/24-bit single/dual channel panels, supports up to 1920 x 1080 resolution, with one LCD backlight inverter connector and two jumper for panel voltage setting.

**Please install LVDS cable before boot up.**

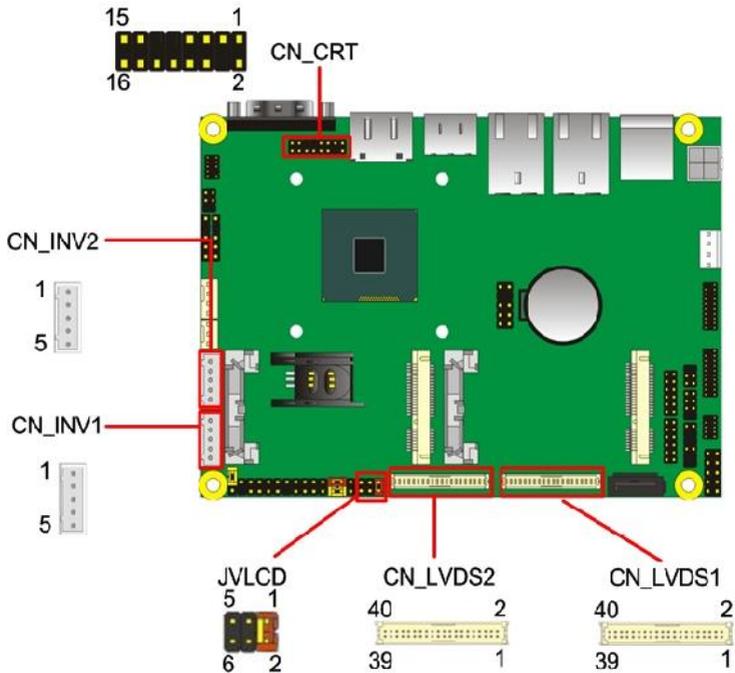

**Effective patterns of connection: 1-2 / 3-4 / 5-6**



**Warning: others cause damages**

Connector: **JVLCD (LVDS1 voltage and LVDS2 voltage must be the same)**  
 Type: 6-pin Power select Header

Pin	Description
1-2	LCDVCC ( <b>3.3V</b> )
3-4	LCDVCC ( <b>5V</b> )
5-6	LCDVCC ( <b>12V</b> )

**Default: 1-2**

Connector: **CN\_INV**

Type: 5-pin LVDS Power Header

Pin	Description
1	+12V
2	PWM
3	GND
4	GND
5	ENABKL

Connector: **CN\_LVDS**

Type: onboard 40-pin connector for LVDS connector

Connector model: **HIROSE DF13-40DP-1.25V or compatible**

Pin	Signal	Pin	Signal
2	LCDVCC	1	LCDVCC
4	LVDS Detect (Note)	3	GND
6	ATX0-	5	BTX0-
8	ATX0+	7	BTX0+
10	GND	9	GND
12	ATX1-	11	BTX1-
14	ATX1+	13	BTX1+
16	GND	15	GND
18	ATX2-	17	BTX2-
20	ATX2+	19	BTX2+
22	GND	21	GND
24	ACLK-	23	BTX3-
26	ACLK+	25	BTX3+
28	GND	27	GND
30	ATX3-	29	BCLK-
32	ATX3+	31	BCLK+
34	GND	33	GND
36	DDCPCLK	35	N/C
38	DDCPDATA	37	N/C
40	N/C	39	N/C

**Note: The LVDS Detect Pin please contact to the Panel GND.**

To setup the LCD, you need the component below:

1. A panel with LVDS interfaces.
2. An inverter for panel's backlight power.
3. A LCD cable and an inverter cable.

**For the cables, please follow the pin assignment of the connector to make a cable, because every panel has its own pin assignment, so we do not provide a standard cable; please find**

a local cable manufacture to make cables.

## LCD Installation Guide:


1. Preparing the **LE-37D**, **LCD panel** and the **backlight inverter**.



2. Please check the datasheet of the panel to see the voltage of the panel, and set the jumper **JVLCD** to +12V or +5V or +3.3V.
3. You would need a LVDS type cable.



4. To connect all of the devices well.

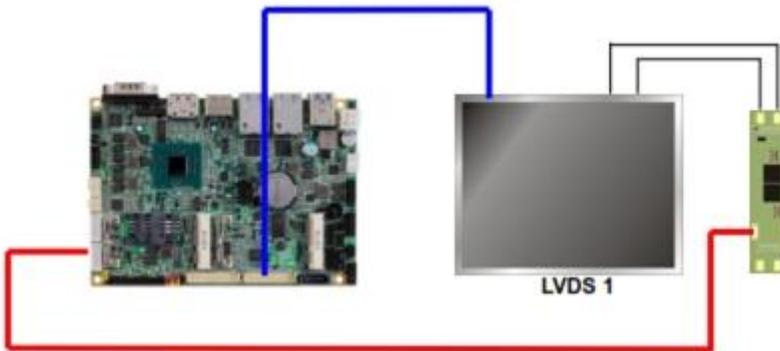

After setup the devices well, you need to select the LCD panel type in the BIOS.

The panel type mapping is list below:

BIOS panel type selection form (BIOS Version:1.0)			
Single / Dual channel		Single / Dual channel	
NO.	Output format	NO.	Output format
1	640 x 480	9	1680 x 1050
2	800 x 600	10	1920 x 1200
3	1024 x 768	11	1440 x 900
4	1280 x 1024	12	1600 x 900
5	1400 x 1050	13	1024 x 768
6	1400 x 1050	14	1280 x 800
7	1680 x 1200	15	1920 x 1080
8	1366 x 768		

Connector: **CN\_CRT**

Connector type: 16-pin header connector (pitch = 2.00mm)

Pin Number	Assignment	Pin Number	Assignment
1	BR	2	BG
3	BB	4	NC
5	-CRTATCH	6	IOGND1
7	IOGND1	8	IOGND1
9	NC	10	-CRTATCH
11	NC	12	5VCDA
13	5HSYNC	14	5VSYNC
15	5VCLK	16	NC


## 2.9 <Integrated Audio Interface>

The board provides the onboard high definition audio with Realtek ALC262

Connector: **CN\_AUDIO**

Type: 10-pin (2 x 5) 1.27mm x 2.54mm-pitch header

Pin	Description	Pin	Description
1	MIC_L	2	Ground
3	MIC_R	4	N/C
5	Speaker_R	6	MIC Detect
7	SENSE	8	N/C
9	Speaker_L	10	Speaker Detect

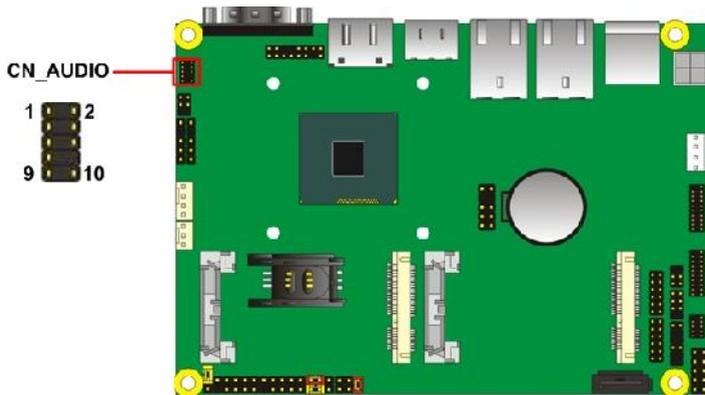

## 2.10 <USB Interface>

LE-37D integrates 5 x USB2.0 and 1 x USB3.0.

The specifications of USB3.0 are listed below:

Interface	USB3.0
Controller	J1900 / N2930 / E3845
Transfer Rate	Up to 5Gb/s
Voltage	5V

The USB3.0 port need to **Install USB 3.0 eXtensible Host Controller Driver** and **enable xHCI Mode**.

### 2.10.1 USB 3.0 eXtensible Host Controller Driver install


**Step1.** Copy the USB 3.0 driver from “Driver CD” to the local hard driver directory.

**( Do not run this driver from a USB storage device)**

**Step2.** Configure default BIOS, click Advanced > South Cluster Configuration > USB Configuration, disable “**EHCI Mode**”.



**Step3.** enable “xHCI Mode” and push “F10” to save configuration. Restart your computer.

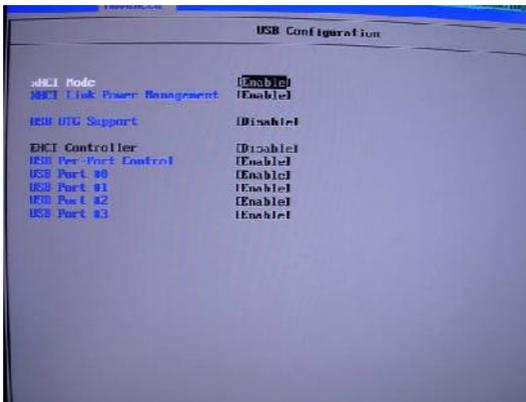

**Step4.** If you enable xHCI Mode , USB 2.0 and USB 3.0 ports can't use without drive. We recommend that you connect PS/2 mouse / keyboard installing USB 3.0 driver.

**Step5.** Double click the “Setup.exe” from the directory. Click “Next” to continue.




**Step6.** Lastly, the “Setup Complete” screen appears so click “Finish” to restart your computer.



The specifications of USB2.0 are list

Interface	USB2.0
Controller	J1900 / N2930 / E3845
Transfer Rate	Up to 480Mb/s
Voltage	5V

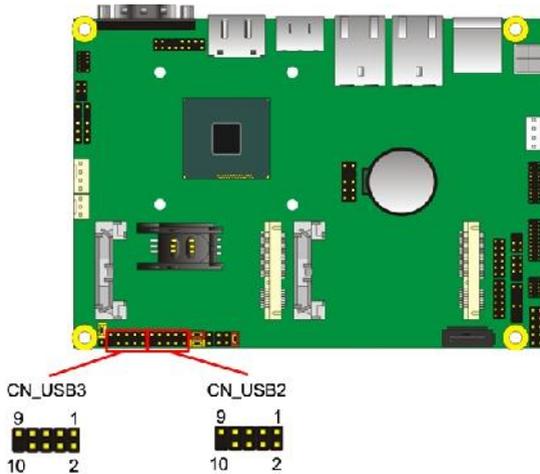

Connector: **CN\_USB 2/3**

Type: 10-pin (2 x 5) header (pitch = 2.54mm)

Pin	Description	Pin	Description
1	VCC	2	VCC
3	Data0-	4	Data1-
5	Data0+	6	Data1+
7	Ground	8	Ground
9	Ground	10	N/C

**CN\_USB2 need to enable xHCI Mode**

## 2.11 <Serial Port>

The board supports one RS232 serial port and one jumper selectable RS232/422/485 serial ports. The jumper JCSEL1 & JCSEL2 can let you configure the communicating modes for COM2.

Connector: **COM1**

Type: 9-pin D-sub male connector on bracket for COM1


Pin	Description	Pin	Description
1	DCD	2	RXD
3	TXD	4	DTR
5	GND	6	DSR
7	RTS	8	CTS
9	RI	10	N/C

Connector: **COM2**

Type: 10-pin (5 x 2) 1.27mm x 2.54mm-pitch header for COM2

Pin	Signal	Pin	Signal
1	DCD/ 422TX-/ 485-	2	RXD/ 422TX+/ 485+
3	TXD/ 422RX+	4	DTR/ 422RX-
5	GND	6	DSR
7	RTS	8	CTS
9	Set by JP1	10	Key

Note: Use JCSEL1 and JCSEL2 to select communication mode

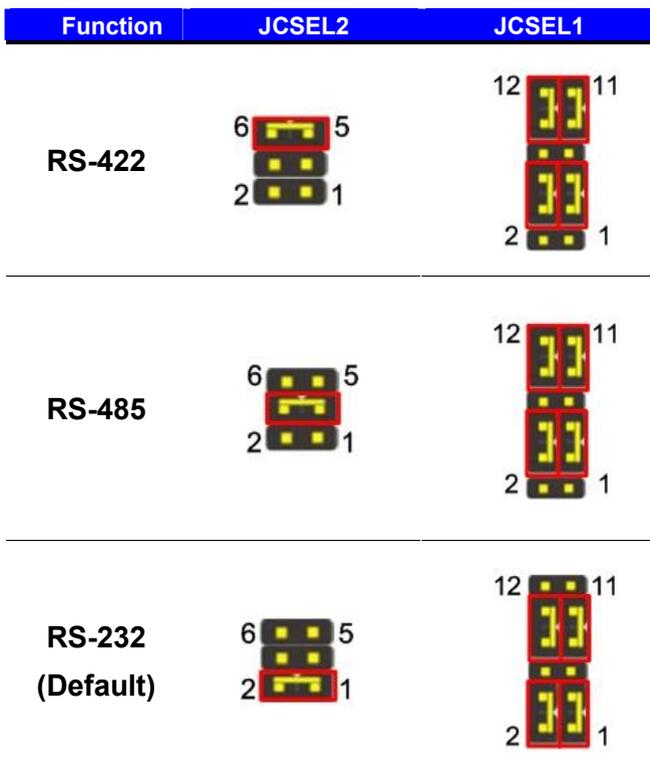


Setting RS-232 & RS-422 & RS-485 for COM2

Connector: **COM3/4 COM5/6**

Type: 19-pin (2 x 10) header pitch = 2.54x1.27mm

Pin	Description	Pin	Description
1	DCD1	2	RXD1
3	TXD1	4	DTR1
5	GND1	6	DSR1
7	RTS1	8	CTS1
9	RI1	10	N/C
11	DCD2	12	RX2
13	TX2	14	DTR2
15	Ground	16	DSR2
17	RTS2	18	CTS2
19	RI2	20	N/C

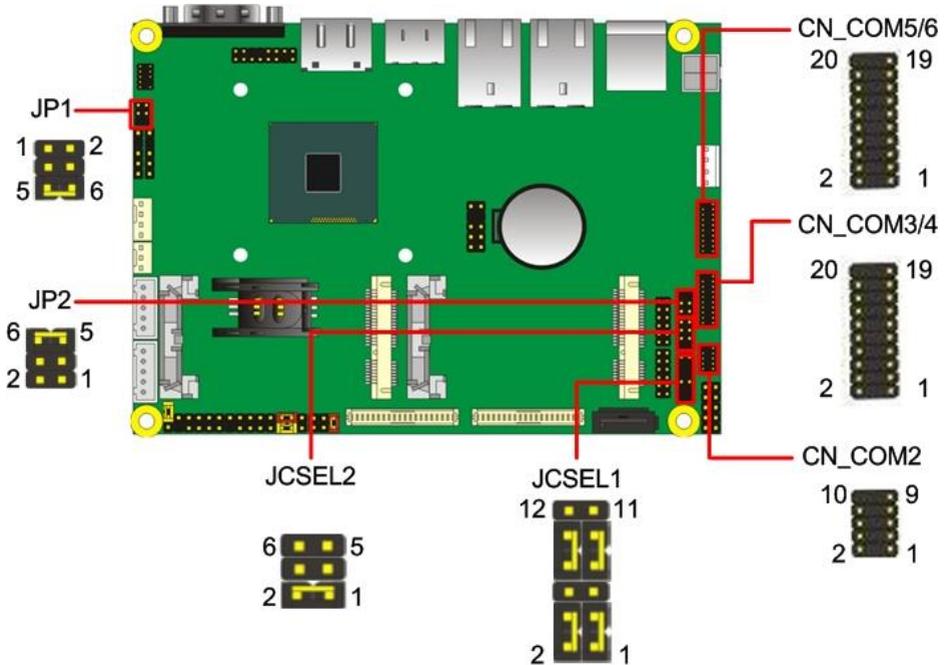

Power Mode	JP1/2
Pin 9 with 5V Power	1-2
Pin 9 with 12V Power	3-4
Standard COM port	5-6
<b>Default setting (5-6)</b>	

## 2.12 <PCIe Mini Card and SIM Interface>

The board provides two PCIe mini card slot and a SIM slot.


MINI\_CARD1 is the first Mini-PCIe slot for long size Mini-PCIe cards.

MINI\_CARD1 can selectively support mSATA.

MINI\_CARD2 is the second Mini-PCIe slot for long size Mini-PCIe cards.

### MINI\_CARD USB Singal need to enable xHCI Mode

However, if you are trying to use 3G Mini-PCIe card with your SIM card, first, put your SIM card into the slot, then put your 3G Mini-PCIe card into the MINI\_CARD2.

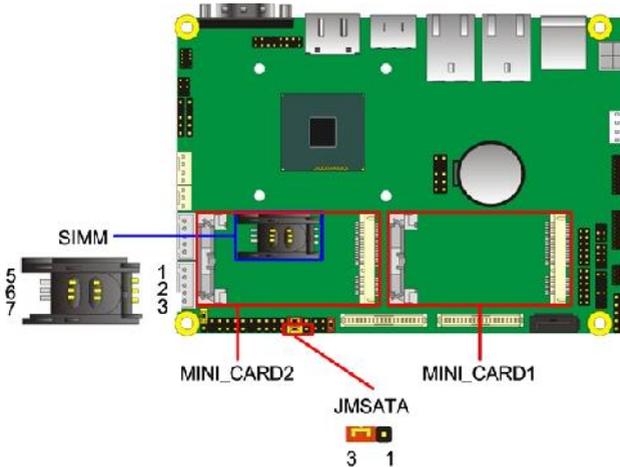

Connector: **SIMM** (3G MiniPcie Mode)

Type: 6-pin SIM slot

Pin	Description	Pin	Description
1	SIMVCC	2	SIMRST
3	SIMCLK	4	NC
5	GND	6	SIMVPP
7	SIMDATA		

Connector: **JMSATA**

Type: onboard 3-pin header

JMSATA	Mode
1-2	Support mSATA for MINI_CARD1
2-3	Support PCIe and USB


Default setting: 2-3

## 2.12.1 <SIM Setup>

### Step1.


SIM card holder is marked by circle.

Slide the cap toward OPEN direction.

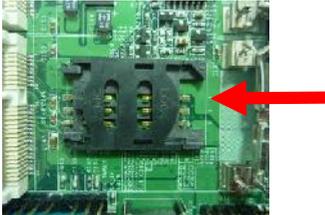

### Step 2.

Make sure that the cap is now at the OPEN position.

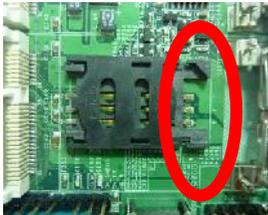

### Step 3.

Flip the cap up for inserting a SIM card into.



### Step 4.

Insert a SIM card as shown in the photo.

Be sure that the corner cut is on top and the golden pads are up.



### Step 5.


Now, flip down the cap as shown in the photo.



### Step 6.

Press down and slide the cap to the CLOSE position.

Be sure that the cap is tightly held with the slot.

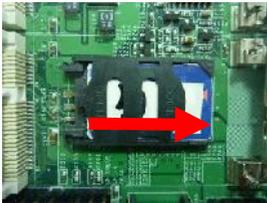

## 2.13 <GPIO and SMBUS Interface>

The board provides a programmable 8-bit digital I/O interface; you can use this general purpose I/O port for system control like POS or KIOSK. The GPIO is an **Open-drain output** and **TTL-level input**.

1. Output : **Open-drain**, Most applications **need use an external pull-up resistor**.
2. Input : **TTL-level**.

DC characteristics:

5V TTL-level Input Pin						
Parameter	Sym	Min	Typ	Max	Unit	Conditions
Input Low Threshold Voltage	$V_{t-}$	0.5	0.8	1.1	V	$V_{CC} = 3.3V$
Input High Threshold Voltage	$V_{t+}$	1.6	2.0	2.4	V	$V_{CC} = 3.3V$
Hysteresis	$V_{TH}$	0.5	1.2		V	$V_{CC} = 3.3V$
Input High Leakage	$I_{LH}$			+10	$\mu A$	$V_{IN} = 3.3V$
Input Low Leakage	$I_{LL}$			-10	$\mu A$	$V_{IN} = 0V$
Open-drain output pin with 12-mA sink capability						
Output Low Voltage	$V_{OL}$			0.4	V	$I_{OL} = 12\text{ mA}$

Connector: **CN\_DIO**


Type: 12-pin (6 x 2) header (pitch = 2.0mm)

Pin	Description	Pin	Description
1	Ground	2	Ground
3	GPIO0	4	GPIO4
5	GPIO1	6	GPIO5
7	GPIO2	8	GPIO6
9	GPIO3	10	GPIO7
11	5V	12	12V

Connector: **CN\_SMBUS**

Type: 5-pin header for SMBUS Ports

Pin	Description
1	VCC
2	N/C
3	SMBDATA
4	SMBCLK
5	Ground

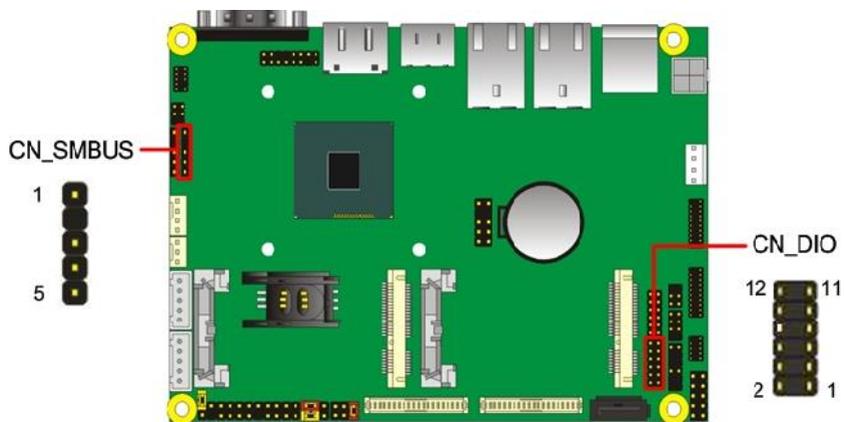

## 2.14 <Power Supply and Fan Interface >

### 2.14.1 <Power Input>

The board requires DC input with 4-pin header, the input voltage range is from 6V to 27V.

Connector: **DC\_IN**

Type: 4-pin DC power connector

Pin	Description	Pin	Description
1	Ground	2	Ground
3	+6V~ +27V	4	+6V~ +27V


### 2.14.2 <Power Output>

Connector: **DC\_OUT**

Type: 4-pin connector for +5V/+12V **output**


Pin	Description	Pin	Description	Pin	Description	Pin	Description
1	+12V	2	Ground	3	Ground	4	+5V

**Note: Maximum output current 12V/3A, 5V/3A**

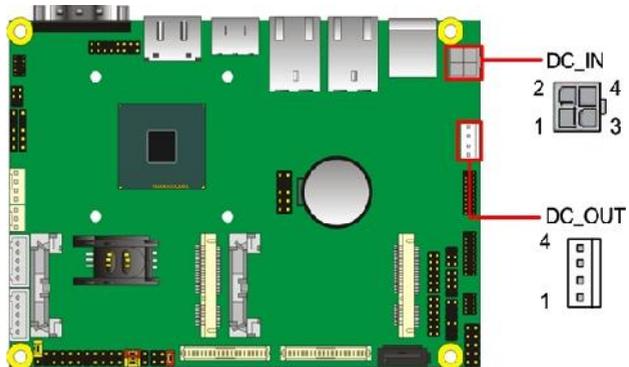

### 2.14.3 <Fan connector>

The board provides one **4-pin** fan connectors supporting smart fan for CPU cooler and system cooler.

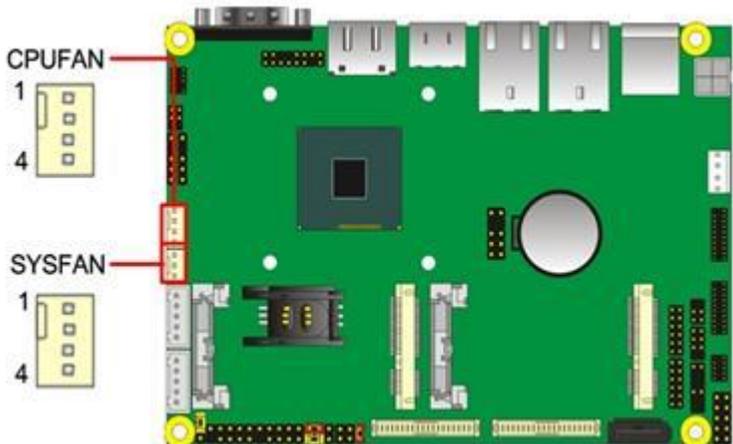

Connector: **CPUFAN**

Type: 4-pin fan wafer connector

Pin	Description	Pin	Description
1	Ground	2	+12V
3	Fan Speed Detection	4	Fan Control

Connector: **SYSFAN**

Type: 4-pin fan wafer connector

Pin	Description	Pin	Description
1	Ground	2	+12V
3	Fan Speed Detection	4	Fan Control


## 2.15 <Switch and Indicator>

The **JFRNT** provides front control panel of the board, such as power button, reset and beeper, etc. Please check well before you connecting the cables on the chassis.

Connector: **JFRNT**

Type: onboard 10-pin (2 x 5) 2.54-pitch header

Function	Signal	PIN		Signal
Reset	Reset-	10	9	Reset+
Power LED	PWRLED+	8	7	PWRLED-
HDD LED	HDLED+	6	5	HDLED-
Speaker	SPK+	4	3	SPK-
Power	PWRBT+	2	1	PWRBT-

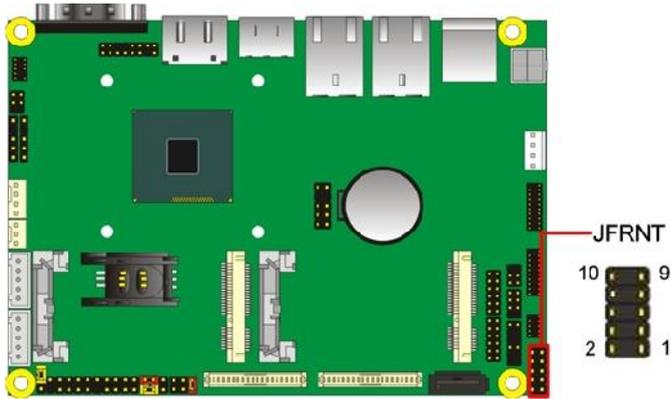


## Chapter 3 <System Setup>


### 3.1 <Audio Configuration>

The board integrates REALTEK® ALC262 code. It can support 2-channel sound under system configuration. Please follow the steps below to setup your sound system.

1. Install REALTEK HD Audio driver.
2. Launch the control panel and Sound Effect Manager.

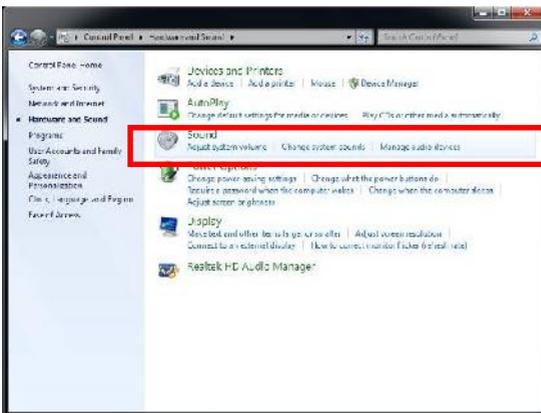

3. Select Speaker Configuration

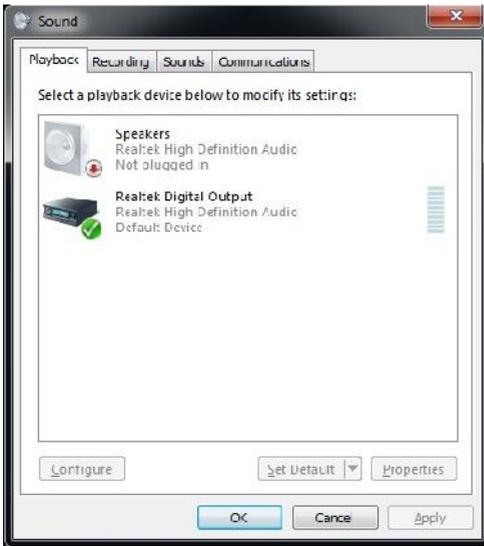


### 3.2 <Display Properties Setting>


Based on Intel **J1900/N2930/E3845** with HD Graphic, the board supports two DACs for display device as different resolution and color bit.

Please install the Intel Graphic Driver before you starting setup display devices.

1. Click right button on the desktop to lunch **Screen resolution > Advanced settings**

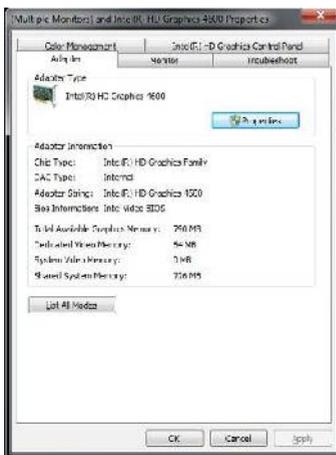


2. Click **Graphics Properties...** button for more specificity setup.

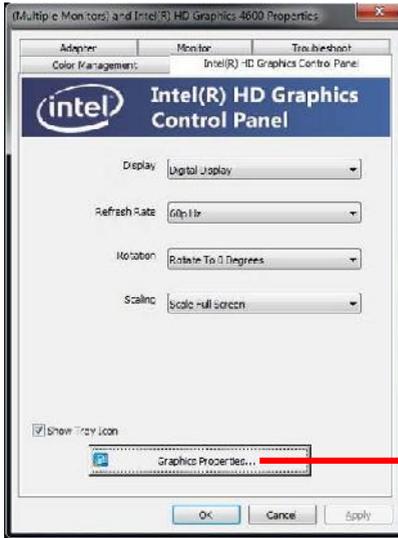

Click **Graphics Properties...** for advanced setup

3. This setup options can let you define each device settings.


Click **Display Settings** to setup the CRT monitor for Resolution and Refresh Rate

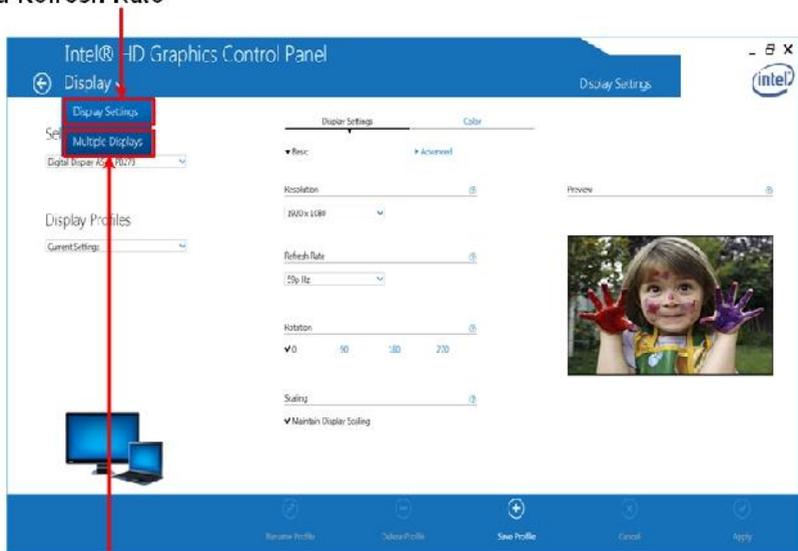

Click **Multiple Displays** to setup the dual display mode as same screen

### 3.3 <SATA configuration>

#### Chipset SATA Mode:

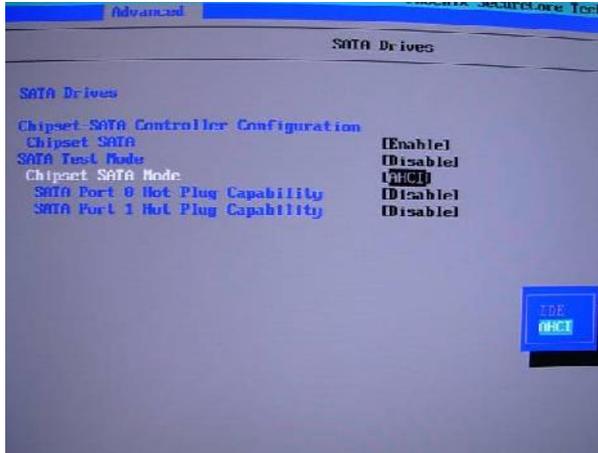

This option can let you select whether the Serial ATA hard drives would work under normal **IDE** mode or **AHCI** mode

## Chapter 4 <BIOS Setup>

The motherboard uses the Phoenix BIOS for the system configuration. The Phoenix BIOS in the single board computer is a customized version of the industrial standard BIOS for IBM PC AT-compatible computers. It supports Intel x86 and compatible CPU architecture based processors and computers. The BIOS provides critical low-level support for the system central processing, memory and I/O sub-systems.


The BIOS setup program of the single board computer let the customers modify the basic configuration setting. The settings are stored in a dedicated battery-backed memory, NVRAM, retains the information when the power is turned off. If the battery runs out of the power, then the settings of BIOS will come back to the default setting.

The BIOS section of the manual is subject to change without notice and is provided here for reference purpose only. The settings and configurations of the BIOS are current at the time of print, and therefore they may not be exactly the same as that displayed on your screen.

To activate CMOS Setup program, press <DEL> key immediately after you turn on the system. The following message "Press DEL to enter SETUP" should appear in the lower left hand corner of your screen. When you enter the CMOS Setup Utility, the Main

Menu will be displayed as **Figure 4-1**. You can use arrow keys to select your function, press <Enter> key to accept the selection and enter the sub-menu.

**Figure 4-1** CMOS Setup Utility Main Screen

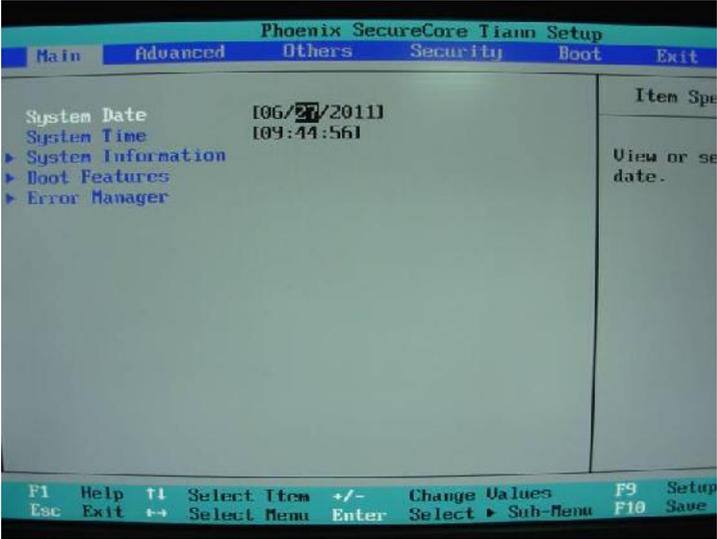


# Appendix A <I/O Port Pin Assignment>

## A.1 <Serial ATA Port>

Connector: **SATAII**

Type: 7-pin wafer connector

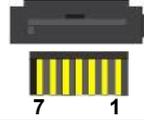


1	2	3	4	5	6	7
GND	RSATA_TXP1	RSATA_TXN1	GND	RSATA_RXN1	RSATA_RXP1	GND

## A.2 <LAN Port>

Connector: **RJ45**

Type: RJ45 connector with LED on bracket

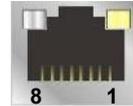


Pin	1	2	3	4	5	6	7	8
Description	MI0+	MI0-	MI1+	MI2+	MI2-	MI1-	MI3+	MI3-

## A.3 <LPC Port>

Connector: **CN\_LPC**

Type: 10-pin header for LPC Port

Pin	Description	Pin	Description
1	LPC_CLK	2	RESET-
3	-LFRAME	4	LAD3
5	LAD2	6	LAD1
7	LAD0	8	+3.3V
9	SERIRQ	10	Ground
11	+3.3V	12	N/C

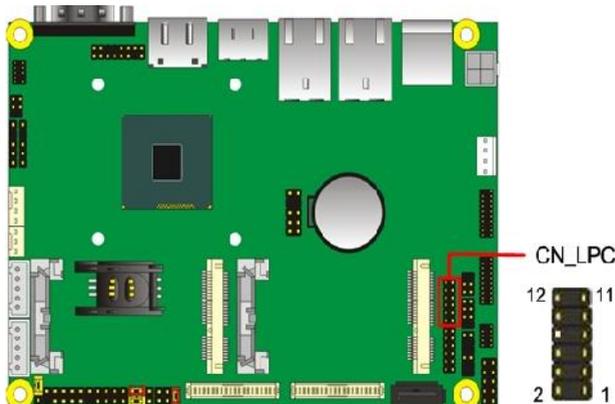

# Appendix B <Flash BIOS>

## B.1 <Flash Tool>


The board is based on Phoenix BIOS and can be updated easily by the BIOS auto flash tool. You can download the tool online at the address below:

<http://www.commell.com.tw/Support/Product%20Technical%20Support/LE-37D.htm>


The utility that can write the data into the BIOS flash ship and update the BIOS.

## B.2 <Flash BIOS Procedure>

- 1.Extract the zip file(re-flash tool and BIOS file) to root of the USB flash drive.
- 2.Insert your USB flash drive in USB port of the board and power on the system.
3. Boot to EFI-Shell mode (**UEFI Boot Enable, Legacy Boot Disable**)

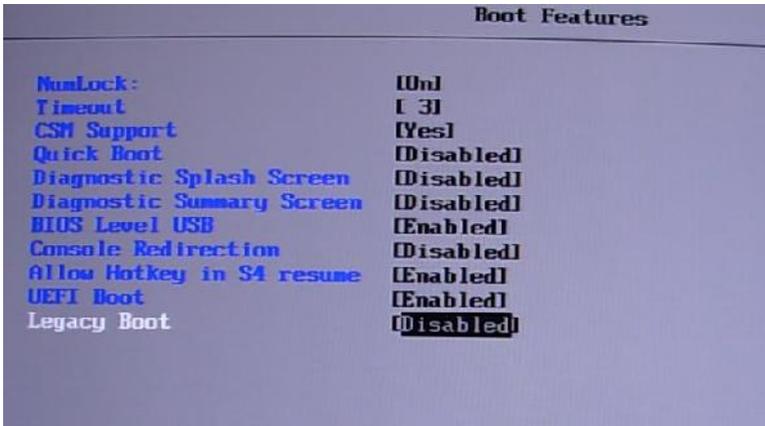

then input the “fs0:” command to switch to the root of the USB flash drive.

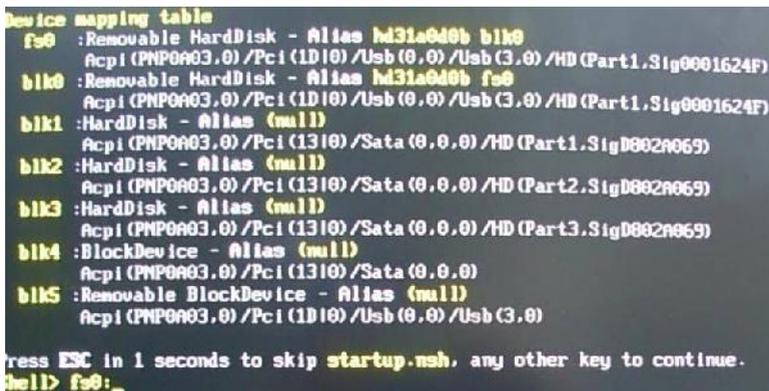

4. Type the " **fpt64.efi -y -f xxx.bin**" command to start flash BIOS processes. ( xxx.bin means the BIOS file that you want to update)
5. When it finished all update processes, restart the system.

Any question about the BIOS re-flash please contact your distributors or visit the web-site at below:

<http://www.commell.com.tw/support/support.htm>

## Appendix C <Programming GPIO's>

The GPIO can be programmed with the MSDOS debug program using simple IN/OUT commands. The following lines show an example how to do this. (The GPIO is open drain)

```
GPIO0.....GPIO7  bit0.....bit7
-o 4E 87           ;enter configuration
-o 4E 87
-o 4E 07
-o 4F 07           ;enale GPIO function
-o 4E 30
-o 4F 10           ;enable GPIO configuration
-o 4E F0
-o 4F xx           ;set GPIO as input/output; set '1' for input,'0'for
output
-o 4E F1
-o 4F xx           ;if set GPIO's as output,in this register its value can
be set
```

Optional :


```
-o 4E F2
-o 4F xx           ; Data inversion register ; '1' inverts the current valus
of the bits , '0' leaves them as they are
-o 4E 30
-o 4F 01           ; active GPIO's
```

For further information, please refer to NCT6106D datasheet.

# Appendix D < Programming Watchdog Timer >

The watchdog timer makes the system auto-reset while it stops to work for a period.

The integrated watchdog timer can be setup as system reset mode by program.

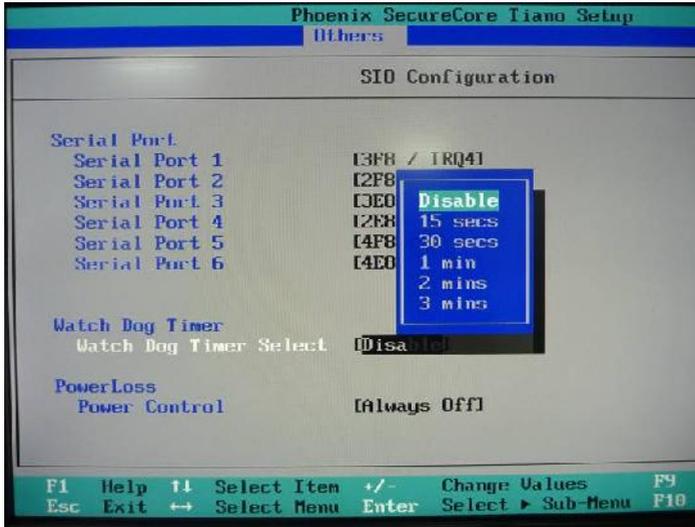

### Timeout Value Range

- 1 to 255
- Second or Minute

### Program Sample

Watchdog timer setup as system reset with 5 second of timeout

---

4E, 87	
4E, 87	
4E, 07	
4F, 08	Logical Device 8
4E, 30	Activate
4F, 01	
4E, F0	
4F, 00	Set as Second* mode
4E, F1	
4F, 05	Set as 5

---

\* Minute: bit 3 = 1; Second: bit 3 = 0

You can select Timer setting in the BIOS, after setting the time options, the system will reset according to the period of your selection.

## Contact Information

Any advice or comment about our products and service, or anything we can help you please don't hesitate to contact with us. We will do our best to support you for your products, projects and business.

### Taiwan Commate Computer Inc.

---

Address	19F., No.94, Sec. 1, Xintai 5th Rd., Xizhi Dist., New Taipei City 22102, Taiwan
TEL	+886-2-26963909
FAX	+886-2-26963911
Website	<a href="http://www.commell.com.tw">http://www.commell.com.tw</a>
E-Mail	<a href="mailto:info@commell.com.tw">info@commell.com.tw</a> (General Information) <a href="mailto:tech@commell.com.tw">tech@commell.com.tw</a> (Technical Support)

---

**Commell is a brand name of Taiwan commate computer Inc.**