

# **IB961**

**13th Generation Intel®  
Core™ i7/i5/i3 Series  
3.5" Disk-Size SBC**

## **User's Manual**

Version 1.0c  
(April 2024)

## **Copyright**

© 2024 IBASE Technology, Inc. All rights reserved.

No part of this publication may be reproduced, copied, stored in a retrieval system, translated into any language or transmitted in any form or by any means, electronic, mechanical, photocopying, or otherwise, without the prior written consent of IBASE Technology, Inc. (hereinafter referred to as "IBASE").

## **Disclaimer**

IBASE reserves the right to make changes and improvements to the products described in this document without prior notice. Every effort has been made to ensure the information in the document is correct; however, IBASE does not guarantee this document is error-free.

IBASE assumes no liability for incidental or consequential damages arising from misapplication or inability to use the product or the information contained herein, nor for any infringements of rights of third parties, which may result from its use.

## **Trademarks**

All the trademarks, registrations and brands mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

## Compliance



This product has passed CE Class B tests for environmental specifications and limits. This product is in accordance with the directives of the European Union (EU). In a domestic environment, this product may cause radio interference in which case users may be required to take adequate measures.



This product has been tested and found to comply with the limits for a Class B device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with manufacturer's instructions, may cause harmful interference to radio communications.

### WEEE



This product must not be disposed of as normal household waste, in accordance with the EU directive of for waste electrical and electronic equipment (WEEE - 2012/19/EU). Instead, it should be disposed of by returning it to a municipal recycling collection point. Check local regulations for disposal of electronic products.

### Green IBASE



This product is compliant with the current RoHS restrictions and prohibits use of the following substances in concentrations exceeding 0.1% by weight (1000 ppm) except for cadmium, limited to 0.01% by weight (100 ppm).

- Lead (Pb)
- Mercury (Hg)
- Cadmium (Cd)
- Hexavalent chromium (Cr6+)
- Polybrominated biphenyls (PBB)
- Polybrominated diphenyl ether (PBDE)

## Important Safety Information

### Environmental conditions:

- Use this product in environments with ambient temperatures between 0°C and 60°C.
- Do not leave this product in an environment where the storage temperature may be below -20° C or above 80° C. To prevent from damages, the product must be used in a controlled environment.

### Care for your iBASE products:

- Before cleaning the PCB, unplug all cables and remove the battery.
- Clean the PCB with a circuit board cleaner or degreaser, or use cotton swabs and alcohol.



### WARNING

### Attention during use:

- Do not use this product near water.
- Do not spill water or any other liquids on this product.
- Do not place heavy objects on the top of this product.

### Anti-static precautions

- Wear an anti-static wrist strap to avoid electrostatic discharge.
- Place the PCB on an anti-static kit or mat.
- Hold the edges of PCB when handling.
- Touch the edges of non-metallic components of the product instead of the surface of the PCB.
- Ground yourself by touching a grounded conductor or a grounded bit of metal frequently to discharge any static.



### CAUTION

There is danger of explosion if the internal lithium-ion battery is replaced by an incorrect type. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions or recycle them at a local recycling facility or battery collection point.

## Warranty Policy

- **IBASE standard products:**

24-month (2-year) warranty from the date of shipment. If the date of shipment cannot be ascertained, the product serial numbers can be used to determine the approximate shipping date.

- **3<sup>rd</sup>-party parts:**

12-month (1-year) warranty from delivery for the 3<sup>rd</sup>-party parts that are not manufactured by IBASE, such as CPU, CPU cooler, memory, storage devices, power adapter, panel and touchscreen.

- \* PRODUCTS, HOWEVER, THAT FAIL DUE TO MISUSE, ACCIDENT, IMPROPER INSTALLATION OR UNAUTHORIZED REPAIR SHALL BE TREATED AS OUT OF WARRANTY AND CUSTOMERS SHALL BE BILLED FOR REPAIR AND SHIPPING CHARGES.

## Technical Support & Services

1. Visit the IBASE website at [www.ibase.com.tw](http://www.ibase.com.tw) to find the latest information about the product.
2. If you need any further assistance from your distributor or sales representative, prepare the following information of your product and elaborate upon the problem.
  - Product model name
  - Product serial number
  - Detailed description of the problem
  - The error messages in text or in screenshots if there is any
  - The arrangement of the peripherals
  - Software in use (such as OS and application software, including the version numbers)

# Table of Contents

---

<b>Chapter 1</b>	<b>General Information .....</b>	<b>1</b>
1.1	Introduction .....	2
1.2	Features .....	2
1.3	Packing List .....	3
1.4	Optional Accessories .....	3
1.5	Specifications .....	4
1.6	Block Diagram .....	6
1.7	Board Pictures .....	7
1.8	Dimensions .....	8
<b>Chapter 2</b>	<b>Hardware Configuration .....</b>	<b>9</b>
2.1	Essential Installations .....	10
2.2	Setting the Jumpers .....	11
2.3	Jumper & Connector Locations .....	12
2.4	Jumpers Quick Reference .....	13
2.5	Connectors Quick Reference .....	18
<b>Chapter 3</b>	<b>Drivers Installation .....</b>	<b>37</b>
3.1	Introduction .....	38
3.2	Intel® Chipset Software Installation Utility .....	38
3.3	VGA Driver Installation .....	40
3.4	HD Audio Driver Installation .....	42
3.5	LAN Driver Installation .....	44
3.6	Intel® Management Engine Components Drivers Installation .....	46
<b>Chapter 4</b>	<b>BIOS Setup .....</b>	<b>48</b>
<b>Appendix</b>	<b>.....</b>	<b>75</b>
A.	I/O Port Address Map .....	76
B.	Interrupt Request Lines (IRQ) .....	77
C.	Watchdog Timer Configuration .....	78
D.	Onboard Connector Reference Types .....	82
E.	USB Power Control Bit .....	82

# Chapter 1

## General Information

The information provided in this chapter includes:

- Features
- Packing List
- Optional Accessories
- Specifications
- Block Diagram
- Board Pictures
- Board Dimensions

## 1.1 Introduction

Powered by the latest 13th Gen Intel® Core™ i7/i5/i3 mobile processors, the IB961 ensures high performance and exceptional efficiency for a wide range of applications. Accompanied by a DDR5 SO-DIMM socket with a 32GB capacity, the motherboard guarantees seamless multitasking and improved system responsiveness. Graphics support is provided by 2x DP++, LVDS, and eDP for independent display outputs. Two Intel® PCI-E 2.5G LAN ensures high-speed networking for seamless data transfer. Equipped with 3x USB 2.0, 3x USB 3.2, 2x COM, and 2x SATA III ports, the IB961 offers exceptional peripheral connectivity, and 3x M.2 slots (M-Key + E-key + B-key) enhances expandability options.



## 1.2 Features

- Onboard 13th Gen Intel® Core™ i7/i5/i3 mobile processors
- 1x DDR5 SO-DIMM, Max. 32GB
- Supports 2x DP++, LVDS and eDP
- 2x Intel® PCI-E 2.5G LAN
- 3x USB 2.0, 3x USB 3.2, 2x COM, 2x SATA III
- 3x M.2 slots (M-Key + E-key + B-key)
- Digital I/O (4-in/4-out), fTPM & watchdog timer



## 1.3 Packing List

Your IB961 package should include the items listed below. If any of the items below is missing, contact the distributor or dealer from whom you purchased the product.

- IB961 SBC

## 1.4 Optional Accessories

IBASE provides the following optional accessories:

- Cable Kit (IB76A-2)
  - Including:

DC-In power cable (PW592)	x1
COM ports cable (PK1H)	x1
SATA & HDD power cable (SATA-53A)	x1
USB 2.0 cable (USB29)	x1
- Audio cable (Audio-18)
- Heat spreader (HSIB961-1)
- Heat sink (HSIB961-A)
- Heatsink for IB961AF-I7PRE (HSIB961-B)




## 1.5 Specifications

Models	
<b>IB961AF-I7P</b>	Intel® Core™ i7-1370PE 3.5" SBC, w/ I226LM + I226V 2.5G LAN, VGA (2x DP + eDP + LVDS), 2x SATA III, 2x COM, 3x M.2 (M2280/ E2230/ B3052), DC in (12V~24V), iAMT, fTPM (RoHS 2)
<b>IB961AF-I5P</b>	Intel® Core™ i5-1340PE 3.5" SBC, w/ I226LM + I226V 2.5G LAN, VGA (2x DP + eDP + LVDS), 2x SATA III, 2x COM, 3x M.2 (M2280/ E2230/ B3052), DC in (12V~24V), iAMT, fTPM (RoHS 2)
<b>IB961F-I3P</b>	Intel® Core™ i3-1320PE 3.5" SBC, w/ I226LM + I226V 2.5G LAN, VGA (2x DP + eDP + LVDS), 2x SATA III, 2x COM, 3x M.2 (M2280/ E2230/ B3052), DC in (12V~24V), fTPM (RoHS 2)
<b>IB961AF-I5U</b>	Intel® Core™ i5-1335UE 3.5" SBC, w/ I226LM + I226V 2.5G LAN, VGA (2x DP + eDP + LVDS), 2x SATA III, 2x COM, 3x M.2 (M2280/ E2230/ B3052), DC in (12V~24V), iAMT, fTPM (RoHS 2)
<b>IB961AF-I7PRE</b>	Intel® Core™ i7-1370PRE 3.5" SBC w/ I226IT 2.5G LAN, VGA (2x DisplayPort(1.2) + eDP + LVDS), 2x SATA III, 2x COM, 3x M.2 (M2280/E2230 & B3052), DC in (12V~24V), iAMT, fTPM (RoHS 2)
Specifications	
<b>CPU</b>	Onboard 13th Gen Intel® Core™ P-Series processors
<b>Form Factor</b>	3.5" disk-size SBC
<b>Memory</b>	1x DDR5 SO-DIMM, Max. 32GB
<b>BIOS</b>	AMI
<b>Graphics</b>	13th Gen Intel® processor integrated graphics
<b>Display Output</b>	2x DisplayPort, eDP & LVDS
<b>LAN</b>	Intel® I226LM/IT as 1st LAN, I226V/IT as 2nd LAN
<b>Super I/O</b>	Fintek F81804U-I
<b>Storage Interface</b>	M.2 (M2280 for NVMe)
<b>Mini Type Slots</b>	3x M.2 slots (M-Key + E-key + B-key)
<b>Audio</b>	Built-in HD audio with Realtek AL888S-VD2-GR
<b>Watchdog Timer</b>	Yes (256 segments, 0, 1, 2...255 sec / min)
<b>H/W Monitor</b>	Yes
<b>Power Requirement</b>	+12V (-10% tolerance) ~ +24V (+10% tolerance) DC-in
<b>fTPM</b>	Yes
<b>iAMT</b>	16.1
<b>Dimensions</b>	102.22 x 147.01 mm (4.02" x 5.8")
<b>RoHS 2</b>	Yes
<b>Certification</b>	CE, FCC Class B

I/O Ports	
<b>Display</b>	<ul style="list-style-type: none"> <li>• 2x DisplayPort</li> <li>• eDP</li> <li>• 24-bit dual-channel LVDS</li> </ul>
<b>LAN</b>	2 x RJ45 for 2.5 Gigabit Ethernet
<b>USB</b>	<ul style="list-style-type: none"> <li>• 3x USB 2.0 (1x Type-A, 2x via pin header)</li> <li>• 3x USB 3.2 (Type-A)</li> </ul>
<b>Serial</b>	<ul style="list-style-type: none"> <li>• 1x RS232/422/485</li> <li>• 1x RS232 (COM2)</li> </ul>
<b>SATA</b>	2 x SATA III
<b>Digital IO</b>	4-In & 4-Out
<b>Expansion Slots</b>	<ul style="list-style-type: none"> <li>• 1x M.2 (M-Key, Type:2280, supports NVMe with PCIe(4x) signal only)</li> <li>• 1x M.2 (E-Key, Type:2230, supports CNVi)</li> <li>• 1x M.2 (B-Key, Type:3052, supports 5G/LTE)</li> </ul>
<b>Operating System</b>	Windows 10 Linux Ubuntu / Fedora
Environmental	
<b>Temperature</b>	<ul style="list-style-type: none"> <li>• Operation: 0~60 °C (32~140 °F) -40~75°C (-40~167°F) for IB961AF-I7PRE</li> <li>• Storage: -40~80 °C (-40~176 °F)</li> </ul>
<b>Relative Humidity</b>	0 ~ 90 %, non-condensing at 60 °C

All specifications are subject to change without prior notice.

## 1.6 Block Diagram

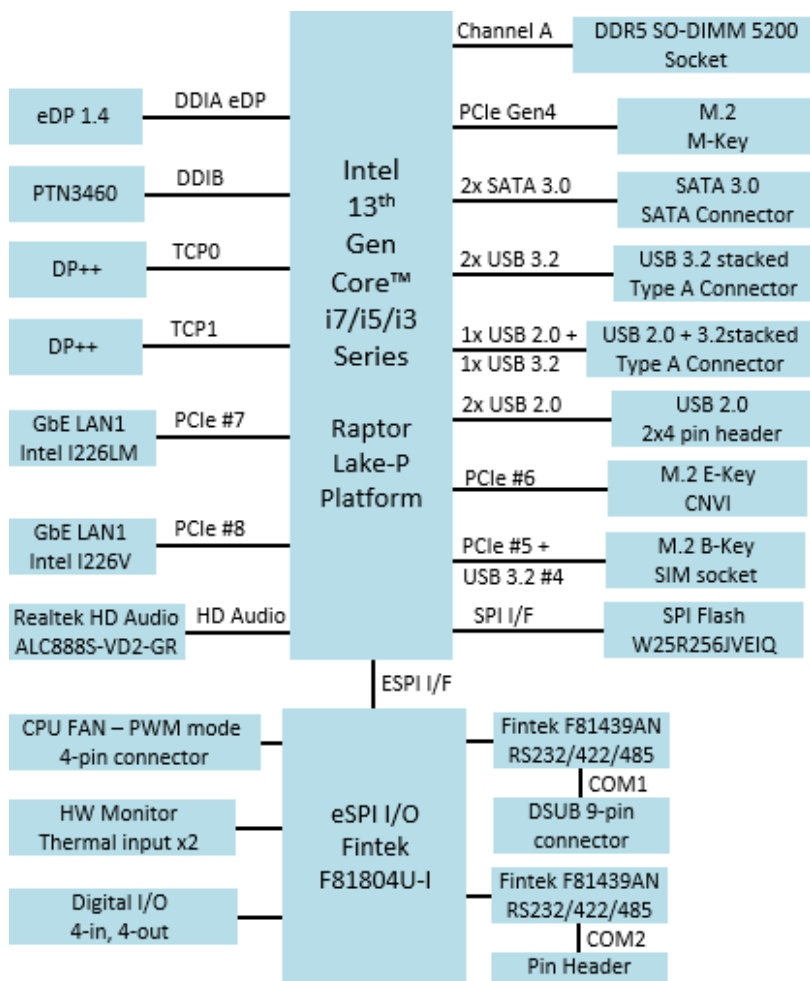


## 1.7 Board Pictures

### Top View




### Bottom View

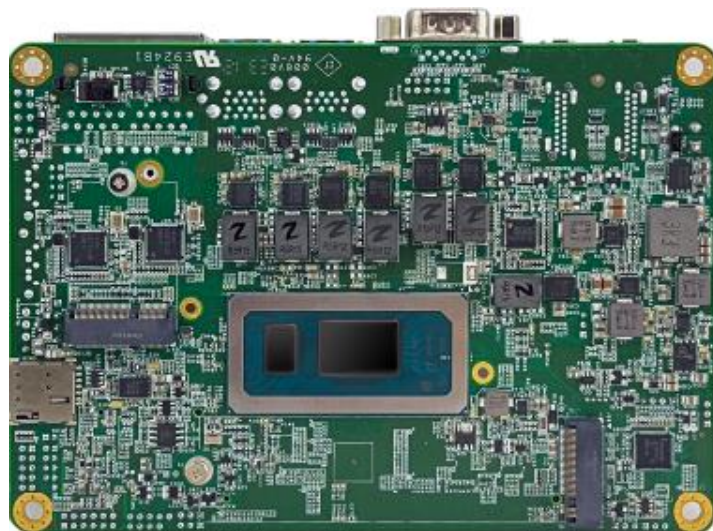



## 1.8 Dimensions

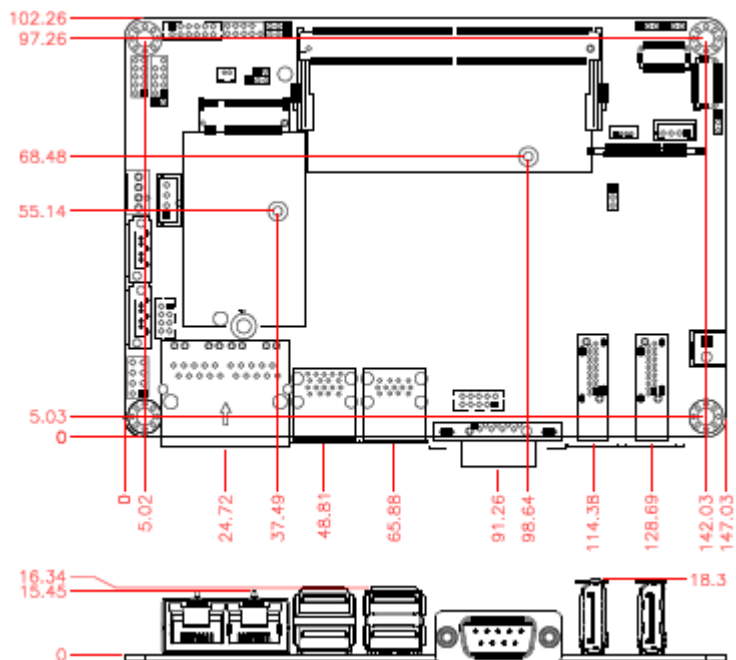

## Chapter 2

# Hardware Configuration


This section provides information on jumper settings and connectors on the IB961 in order to set up a workable system. On top of that, you will also need to install crucial pieces such as the CPU and the memory before using the product. The topics covered are:

- Essential installations
- Jumpers and connectors

## 2.1 Essential Installations

### 2.1.1 Installing the Memory

The IB961 supports one memory socket for DDR5 modules. To install a module, locate the memory slot on the board and perform the following steps:

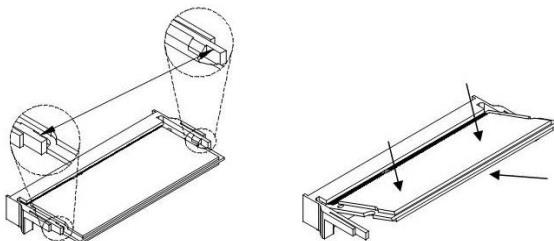

1. Align the key of the memory module with that on the memory slot and insert the module slantwise.
2. Gently push the module in an upright position until the clips of the slot close to hold the module in place when the module touches the bottom of the slot.


To remove the module, press the clips outwards with both hands, and the module will pop-up.




## 2.2 Setting the Jumpers

Set up and configure your IB961 by using jumpers for various settings and features according to your needs and applications. Contact your supplier if you have doubts about the best configuration for your use.

Jumpers are short-length conductors consisting of several metal pins with a non-conductive base mounted on the circuit board. Jumper caps are used to have the functions and features enabled or disabled. If a jumper has 3 pins, you can connect either PIN1 to PIN2 or PIN2 to PIN3 by shorting the respective pins.

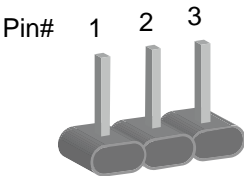

A 3-pin jumper



A jumper cap


Refer to the illustration below to set jumpers.

Pin closed	Jumper	Setting
Open		
1-2		
2-3		

When two pins of a jumper are encased in a jumper cap, this jumper is **closed**, i.e. turned **On**.

When a jumper cap is removed from two jumper pins, this jumper is **open**, i.e. turned **Off**.

## 2.3 Jumper & Connector Locations

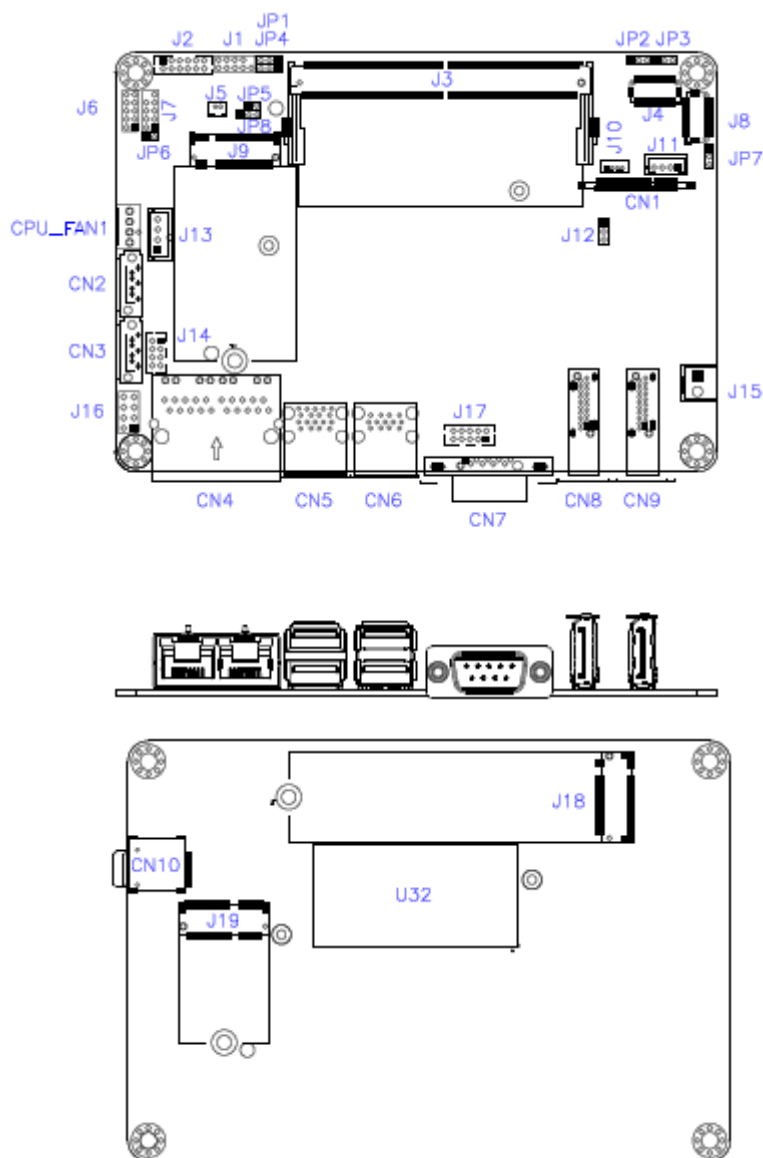


2.4 Jumpers Quick Reference

Jumpers	Function
JP1	Clear RTC Data
JP2	eDP Power Selection
JP3	LVDS Power Selection
JP4	Clear CMOS Data
JP5	Flash Descriptor Security Override
JP6	AT/ATX Selection
JP7	LVDS Brightness Power Selection
JP8	Sierra EM919x 5G card USB/PCIe Select

2.4.1 JP1: Clear RTC Data


Function	Pin closed	Setting
Normal	1-2	1
Clear RTC	2-3	1

2.4.2 JP2: eDP Power Selection

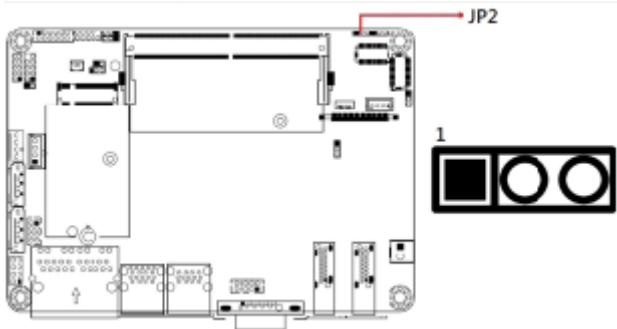


Function	Pin closed	Setting
3.3V (default)	1-2	1
5V	2-3	1

2.4.3 JP3: LVDS Power Selection

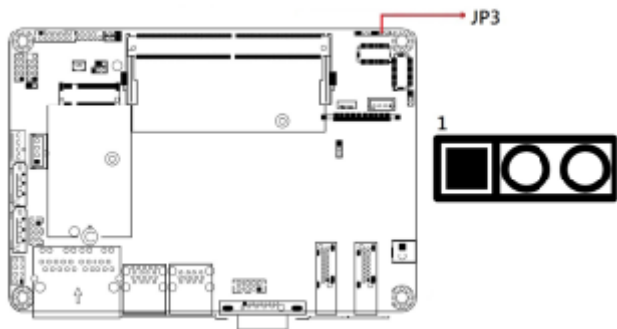


Function	Pin closed	Setting
3.3V (default)	1-2	1
5V	2-3	1

### 2.4.4 JP4: Clear CMOS Data

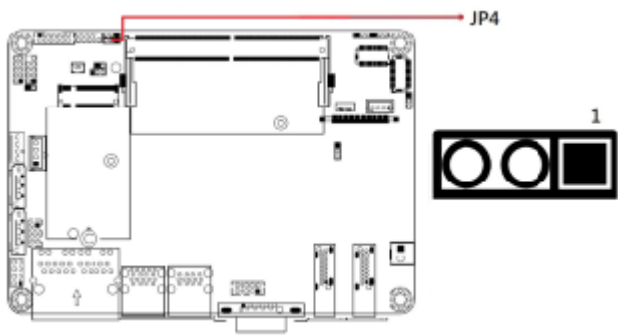


Function	Pin closed	Setting
Normal	1-2	1
Clear CMOS	2-3	1

### 2.4.5 JP5: Flash Descriptor Security Override

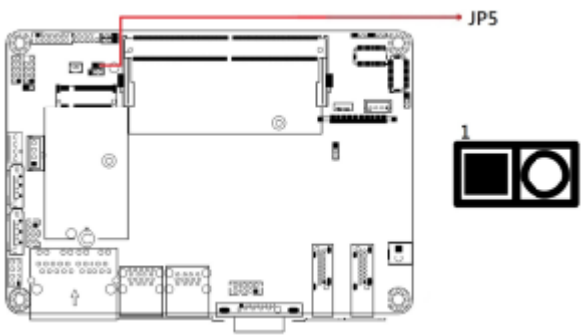


Remarks: Factory use only

## 2.4.6 JP6: AT/ATX Selection

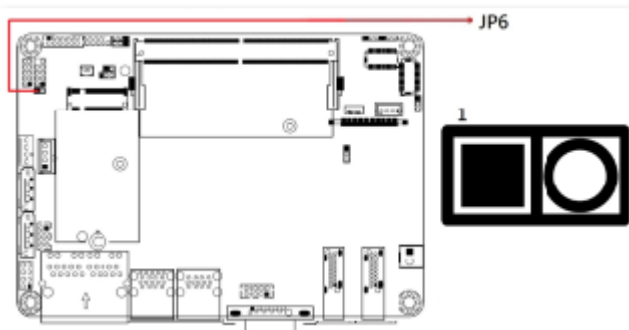


Function	Pin closed	Setting
ATX	Open (default)	
AT	Close	

## 2.4.7 JP7: LVDS Brightness Power Selection

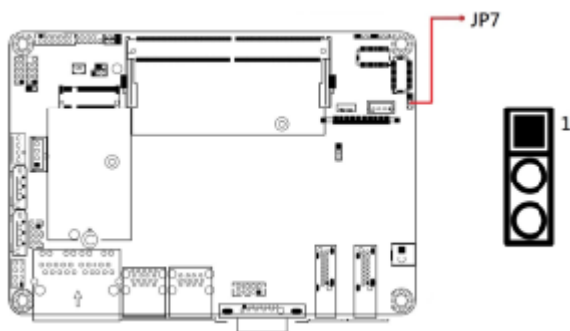

Function	Pin closed	Setting
3.3V (default)	1-2	1
5V	2-3	1

2.4.8 JP8: Sierra EM919x 5G card USB/PCIe Select



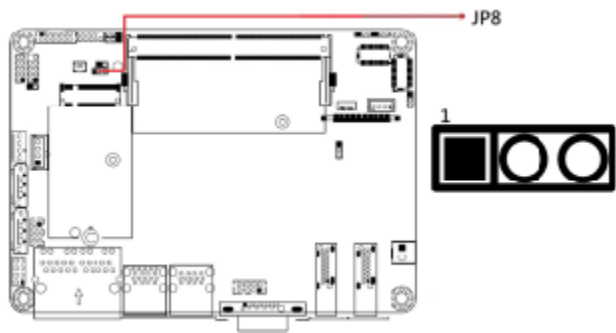


Function	Pin closed	Setting
USB (default)	1-2	1
PCIe	2-3	1

## 2.5 Connectors Quick Reference


Connector	Function
CN1	eDP Connector
CN2, CN3	SATA #0 / #1 Ports
CN4	2.5G LAN i226LM/i226V Ports
CN5	USB3 #1 / #2 Ports
CN6	USB3 #3 / USB2 #4 Ports
CN7	COM1 Serial Port
CN8, CN9	DP++ Ports
CN10	SIM Socket
J1	SPI Flash Connector
J2	Audio Connector
J3	DDR5 SO-DIMM Socket
J4	LVDS CH-B Connector
J5	Battery Connector
J6	Digital I/O (4in, 4out) Connector
J7	eSPI Debug Connector
J8	LVDS CH-A Connector
J9	M.2 B-Key 3052 Socket
J10	SMBUS Connector
J11	LVDS Backlight Connector
J13	SATA Power Connector
J14	USB2 #5/#6 Connectors
J15	DC-In Connector
J16	Front Panel Connector
J17	COM2 Serial Port
J18	M.2 M-Key 2280 Socket
J19	M.2 E-Key 2230 Socket
CPU_FAN1	CPU Fan Power Connector



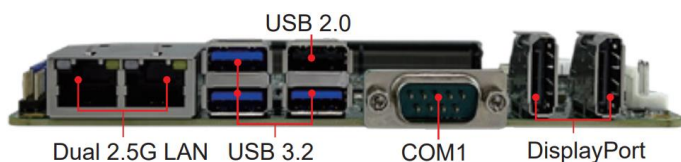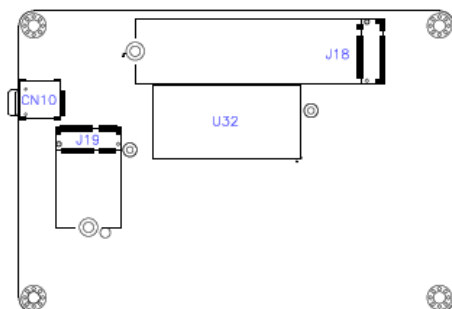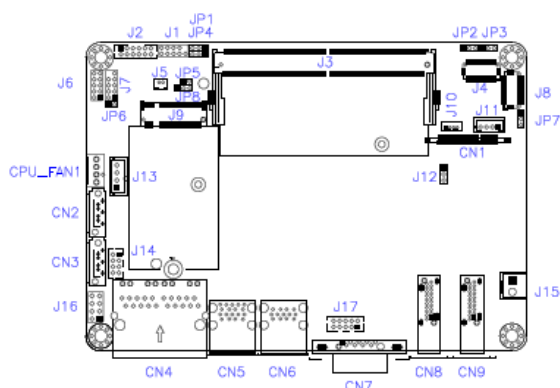

Function	Connector
Dual 2.5 GbE Ports	CN4
USB Ports	CN6, CN5
COM1 Serial Port	CN7
DisplayPort	CN8, CN9


**2.5.1 CN1: eDP Connector**

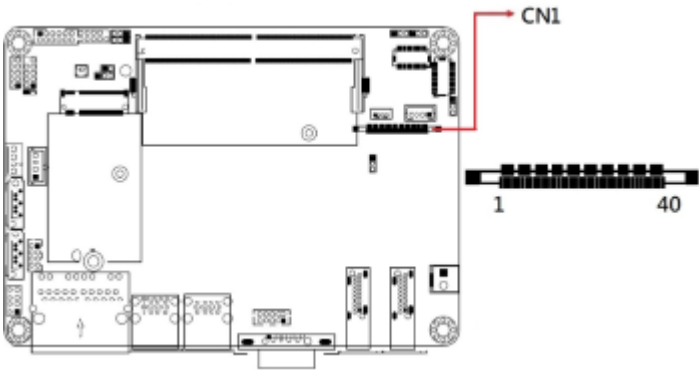

\* KEL\_SSL00-40S


Pin	Assignment	Pin	Assignment
1	eDP Vcc	21	TXN0
2	eDP Vcc	22	TXP1
3	eDP Vcc	23	Ground
4	eDP Vcc	24	AUXP
5	eDP Vcc	25	AUXN
6	Ground	26	NC
7	Ground	27	+3.3V
8	Ground	28	EDP BKLT (+12V)
9	Ground	29	NC
10	Hot Plug detect	30	Ground
11	Ground	31	+5V
12	TXN3	32	NC
13	TXP3	33	Back Light Control
14	Ground	34	Back Light Enable
15	TXN2	35	EDP BKLT (+12V)
16	TXP2	36	+3.3V
17	Ground	37	Ground
18	TXN1	38	NC
19	TXP1	39	NC
20	Ground	40	NC

## 2.5.2 CN2, CN3: SATA #0 / #1 Ports

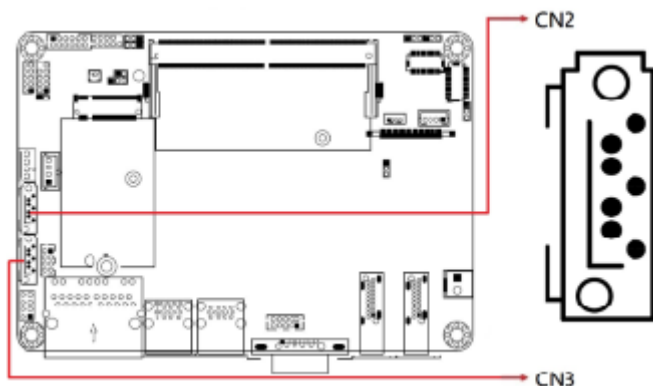


Pin	Assignment	Pin	Assignment
1	Ground	4	Ground
2	TX+	5	RX-
3	TX-	6	RX+
4	Ground	7	Ground


## 2.5.3 CN4: 2.5G LAN i226LM/i226V Ports

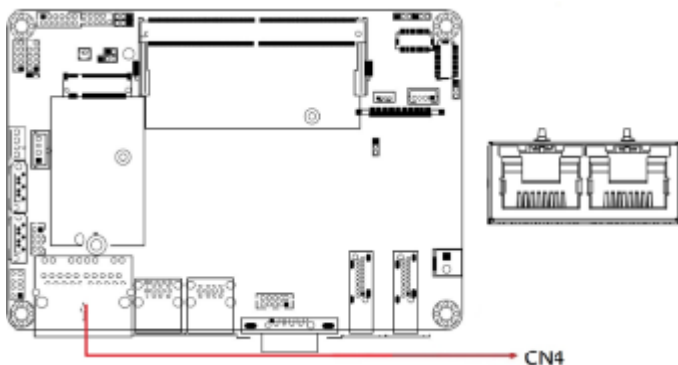


### 2.5.4 CN5: USB3 #1 / #2 Ports

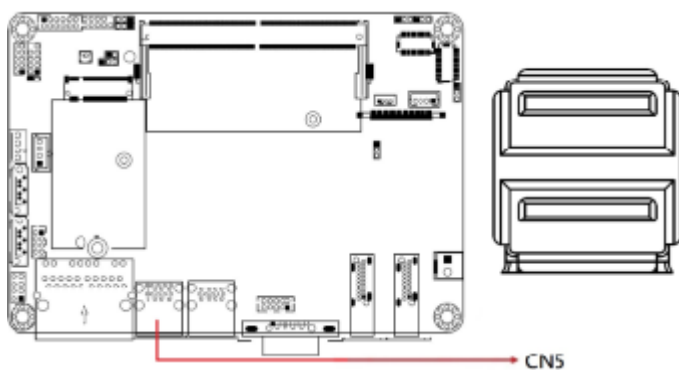


### 2.5.5 CN6: USB3 #3 / USB2 #4 Ports

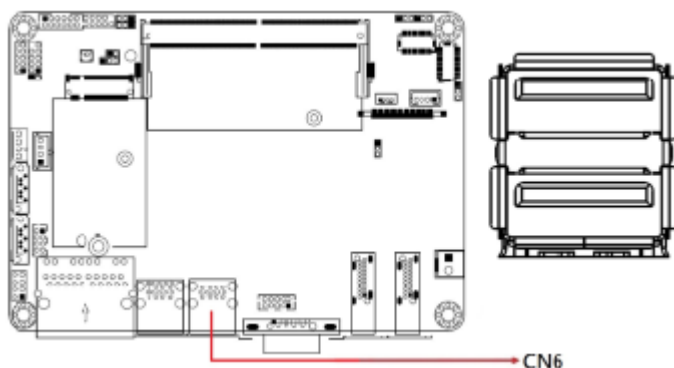

### 2.5.6 CN7: COM1 Serial Port

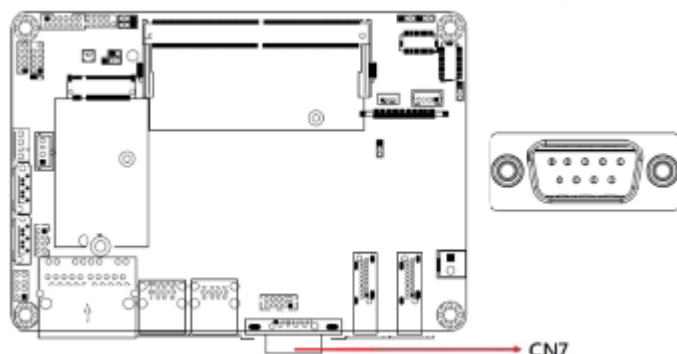


### 2.5.7 CN8, CN9: DP++ Ports

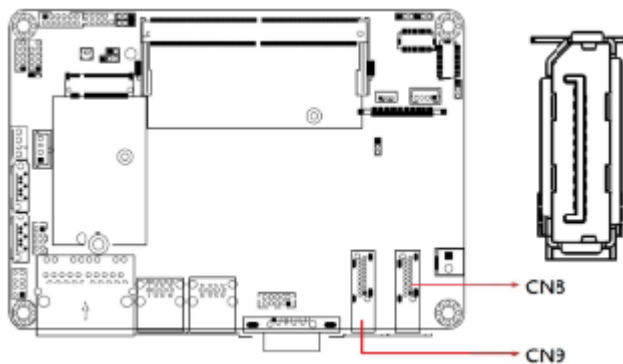


Pin	Assignment	Pin	Assignment
1	LAN0_P	11	GND
2	GND	12	LAN3_N
3	LAN0_N	13	CONFIG
4	LAN1_P	14	GND
5	GND	15	AUXP
6	LAN1_N	16	GND
7	LAN2_P	17	AUXN
8	GND	18	Hot Plug
9	LAN2_N	19	GND
10	LAN3_P	20	+5V

## 2.5.8 CN10: SIM Socket

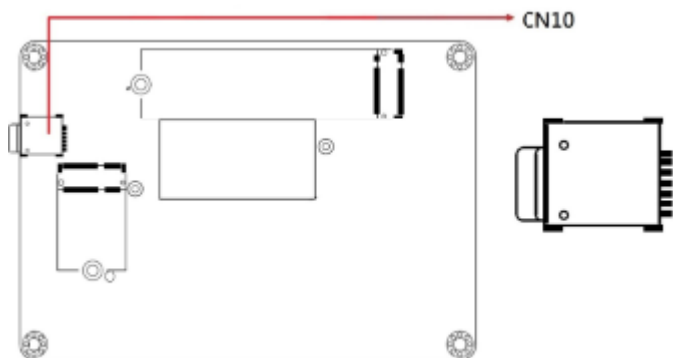


## 2.5.9 J1: SPI Flash Connector

\* Factory use only

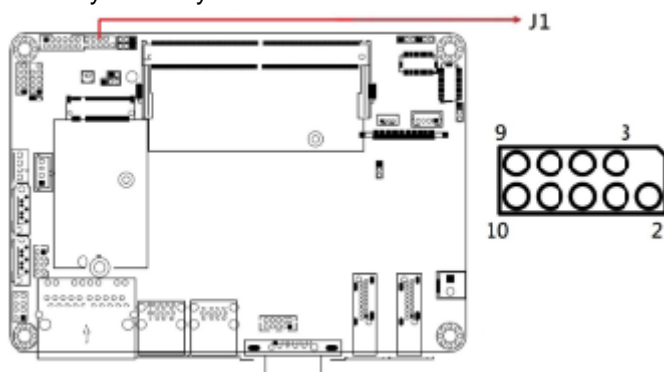


### 2.5.10 J2: Audio Connector

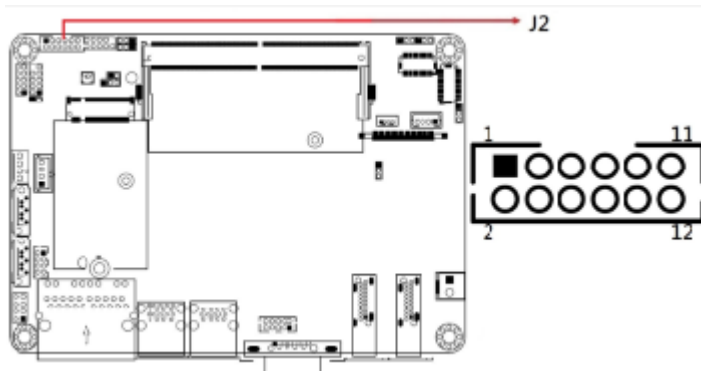


\* HK\_DF11-12S-PA66H

Pin	Assignment	Pin	Assignment
1	LINE OUT_L	2	LINE OUT_R
3	FRONT_JD	4	GND
5	LINE IN_L	6	LINE IN_R
7	LINE_JD	8	GND
9	MIC_L	10	MIC_R
11	MIC_JD	12	GND

### 2.5.11 J3: DDR5 SO-DIMM Socket

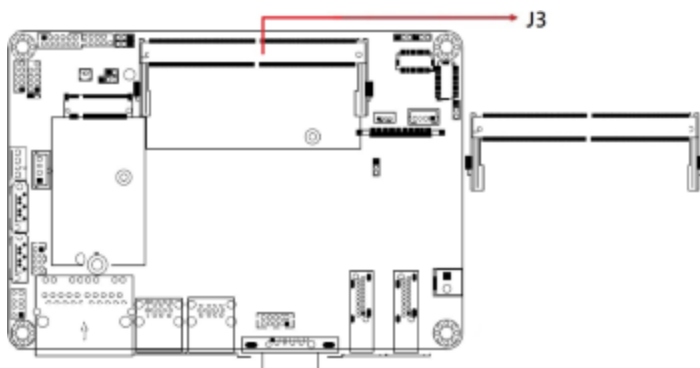

2.5.12 J4: LVDS CH-B Connector

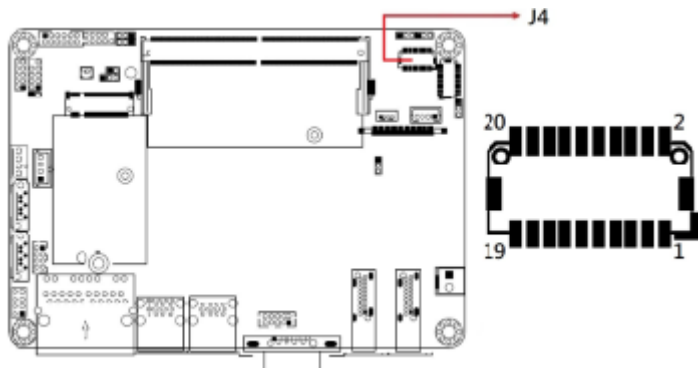


\* Hirose\_DF20G-20DP-1V(56


Pin	Assignment	Pin	Assignment
1	TX0P	2	TX0N
3	GND	4	GND
5	TX1P	6	TX1N
7	GND	8	GND
9	TX2P	10	TX2N
11	GND	12	GND
13	CLKP	14	CLKN
15	GND	16	GND
17	TX3P	18	TX3N
19	+3.3V	20	+3.3V



### 2.5.13 J5: Battery Connector

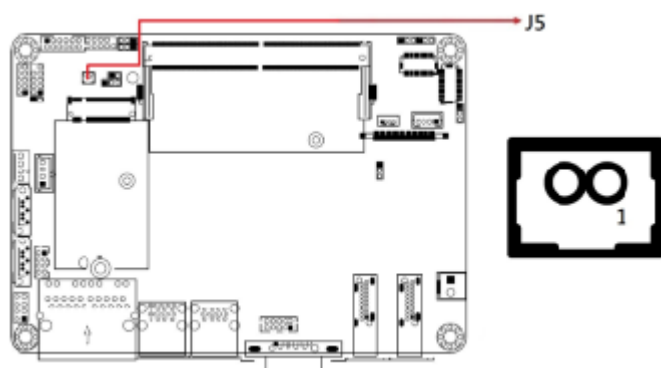

### 2.5.14 J6: Digital I/O (4in, 4out) Connector

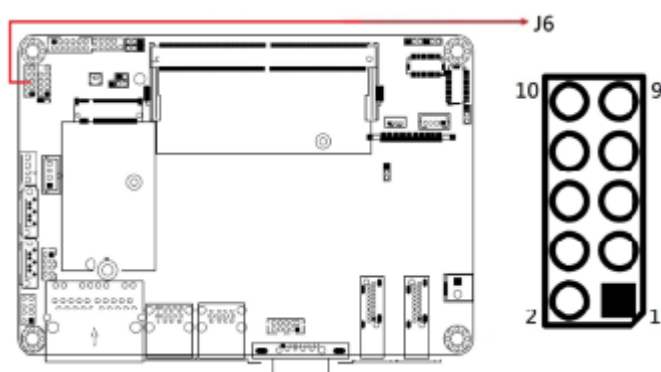


\* E-Call\_0196-01-200-100


Pin	Assignment	Pin	Assignment
1	Ground	2	+5V
3	Out3	4	Out1
5	Out2	6	Out0
7	IN3	8	IN1
9	IN2	10	IN0

**2.5.15 J7: eSPI Debug Connector**

\* Factory use only

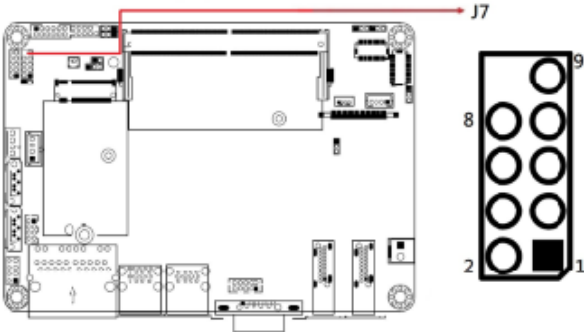


**2.5.16 J8: LVDS CH-A Connector**

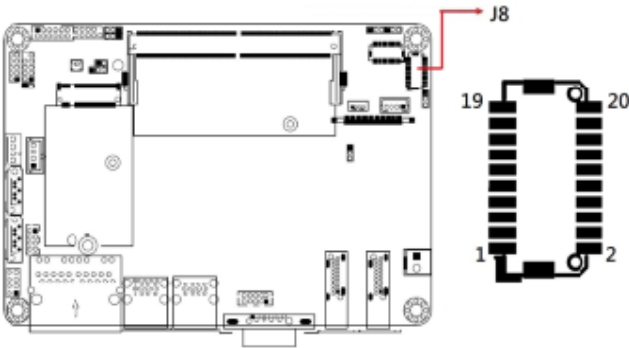


\* Hirose\_DF20G-20DP-1V(56)

Pin	Assignment	Pin	Assignment
1	TX0P	2	TX0N
3	GND	4	GND
5	TX1P	6	TX1N
7	GND	8	GND
9	TX2P	10	TX2N
11	GND	12	GND
13	CLKP	14	CLKN
15	GND	16	GND
17	TX3P	18	TX3N
19	+3.3V	20	+3.3V

### 2.5.17 J9: M.2 B-Key 3052 Socket

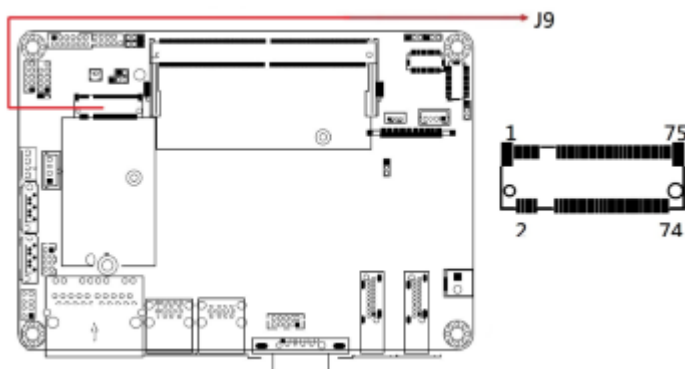


### 2.5.18 J10: SMBUS Connector

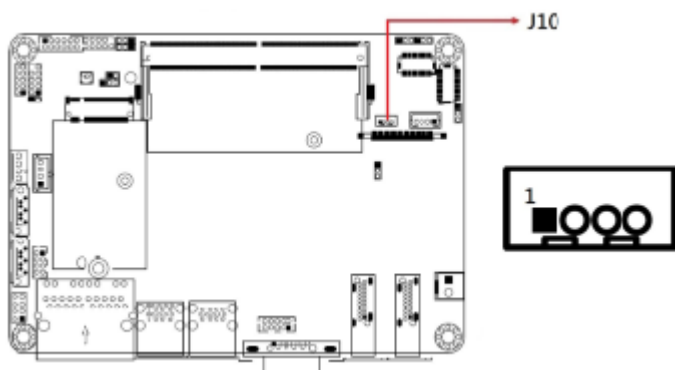

Pin	Assignment
1	VCC3
2	SMB_CLK
3	SMB_Data
4	Ground

**2.5.19 J11: LVDS Backlight Connector**

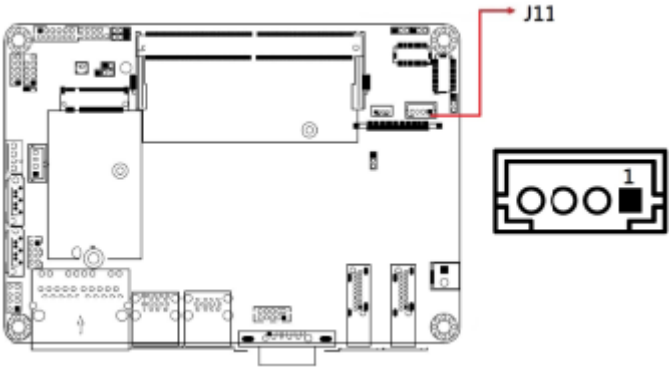

\* E-Call\_0110-161-040

Pin	Assignment
1	+12V
2	Backlight Enable
3	Brightness Control
4	GND


## 2.5.20 J13: SATA Power Connector



\* E-Call\_0110-071-040

Pin	Assignment
1	+5V
2	GND
3	GND
4	+12V


**2.5.21 J14: USB2 #5/#6 Connectors**

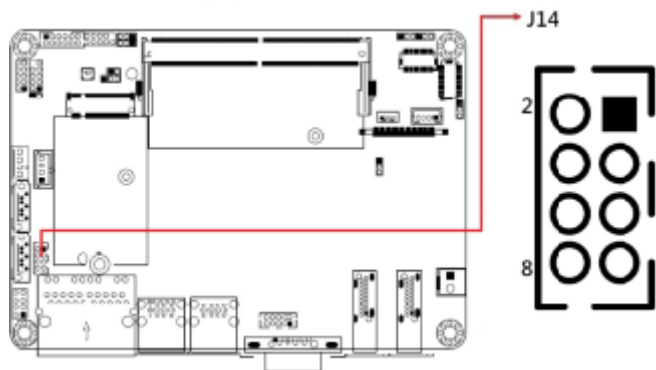

\* HK\_DF11-8S-PA66H

Pin	Assignment	Pin	Assignment
1	+5V	2	GND
3	USB_PN	4	USB_PP
5	USB_PP	6	USB_PN
7	GND	8	+5V


**2.5.22 J15: DC-In Connector**

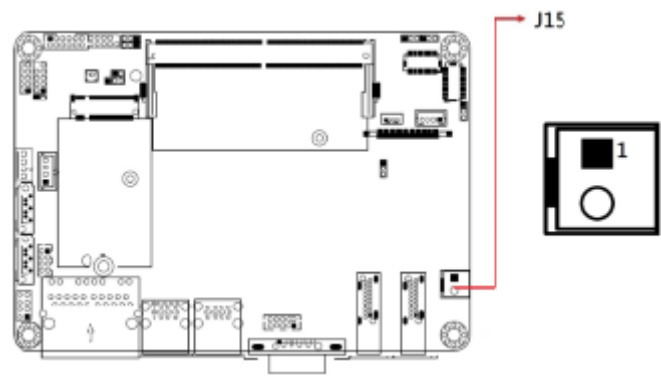

\* HK\_WAFER396-2S-WV

Pin	Assignment
1	DC_IN
2	GND

### 2.5.23 J16: Front Panel Connector

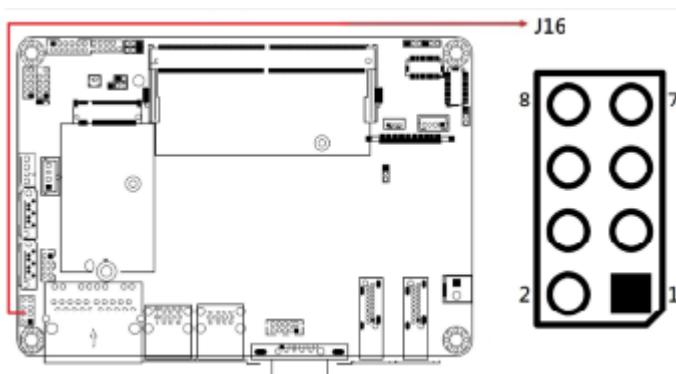


\* E-Call\_0126-01-203-080

Pin	Assignment	Pin	Assignment
1	Power BTN	2	Power BTN
3	HDD LED+	4	HDD LED-
5	Reset BTN	6	Reset BTN
7	Power LED+	8	Power LED-

This connector provides interfaces for the following functions.

- ATX Power ON Switch (Pins 1 and 2)**  
 These pins make an “ATX Power Supply On/Off Switch” for the system, connecting to the power switch on the case. Pressing this switch powers on the system, and pressing it again powers it off.
- Hard Disk Drive LED Connector (Pins 3 and 4)**  
 This connector connects to the hard drive activity LED on control panel. This LED flashes when the HDD is being accessed.
- Reset Switch (Pins 5 and 6)**  
 The reset switch allows you to reset the system without toggling the main power switch. Orientation is not required when making a connection to this header.
- Power LED: Pins 7 and 8**  
 This connector attaches to the system power LED on control panel. This LED illuminates when the system turns on.

## 2.5.24 J17: COM2 Serial Port

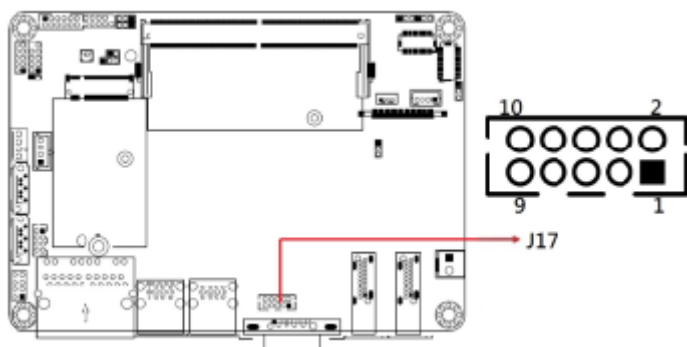


\* HK\_DF11-10S-PA66H

Pin	Assignment		
	RS-232	RS-422	RS-485
1	DCD	TX-	DATA-
2	RX	TX+	DATA+
3	TX	RX+	NC
4	DTR	RX-	NC
5	Ground	Ground	Ground
6	DSR	NC	NC
7	RTS	NC	NC
8	CTS	NC	NC
9	RI	NC	NC
10	NC	NC	NC




### 2.5.25 J18: M.2 M-Key 2280 Socket

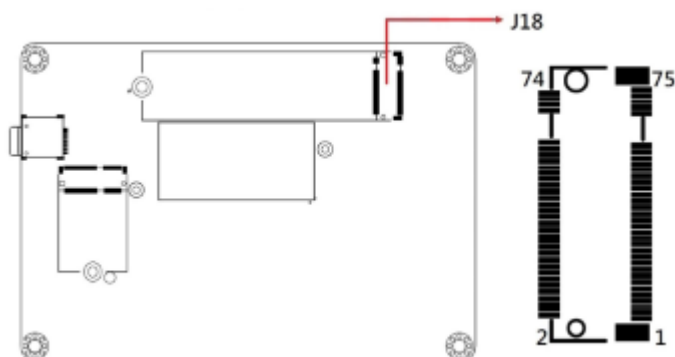

### 2.5.26 J19: M.2 E-Key 2230 Socket

\* With CNVI support

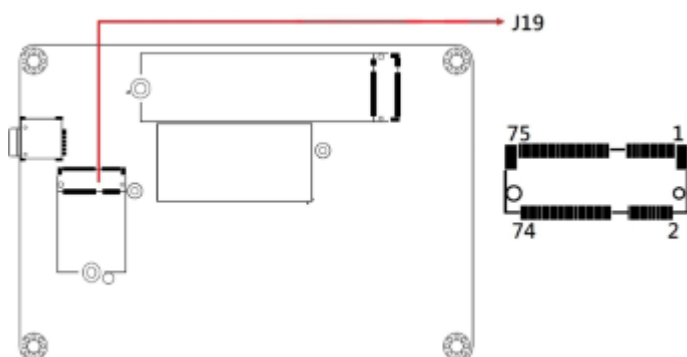

2.5.27 CPU\_FAN1: CPU Fan Power Connector



\* PWM Only

Pin	Assignment
1	Ground
2	+12V
3	Rotation detection
4	Control

## Chapter 3

# Drivers Installation

This chapter introduces installation of the following drivers:

- Intel® Chipset Software Installation Utility
- VGA Driver
- HD Audio Driver
- LAN Driver
- Intel® Management Engine Drivers

### 3.1 Introduction

This section describes the installation procedures for software and drivers. The contents of this section include the following:

---

**Note:** After installing your Windows operating system, you must install the Intel® Chipset Software Installation Utility first before proceeding with the drivers installation.

---

### 3.2 Intel® Chipset Software Installation Utility

The Intel® Chipset drivers should be installed first before the software drivers to install INF files for Plug & Play function for Intel chipset components. Follow the instructions below to complete the installation.


1. Go to the product's download page. Download the compressed drivers file to your computer. Double-click the file to decompress it. After decompression, double-click 'CDGuide' to access the main drivers page, as shown below. Click **Intel** on the left pane and then **Intel(R) RaptorLake-P/PS/U Chipset Drivers** on the right pane.



2. Click **Intel(R) Chipset Software Installation Utility**.



3. When the *Welcome* screen to the Intel® Chipset Device Software appears, click **Next** to continue.
4. Accept the software license agreement.
5. On the *Readme File Information* screen, click **Install**.

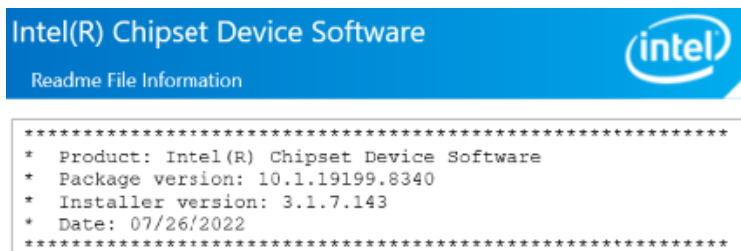

6. After completing the installation, click **Finish** to complete the setup process.

### 3.3 VGA Driver Installation

1. Click **Intel** on the left pane and then **Intel(R) RaptorLake-P/PS/U Chipset Drivers** on the right pane.



2. Click **Intel(R) HD Graphics Driver**.




3. Click **Begin installation**.



4. Click **I agree** in the INTEL SOFTWARE LICENSE AGREEMENT screen.
5. Click **Start** to install the graphics driver.



6. When installation has been completed, click **Finish**.

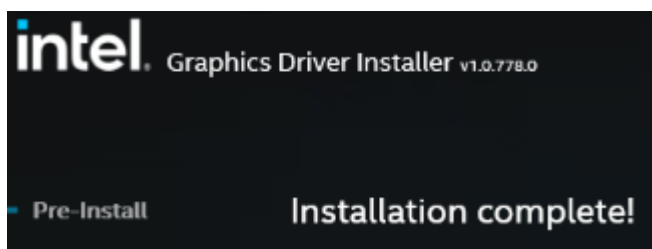


### 3.4 HD Audio Driver Installation

- Before installing the Realtek audio drivers, run the batch file - **Intel\_Sound.bat** in the directory shown in the picture below:

**I-13\_Gen-P\_U-1.0\Intel\AlderLake-P\Sound\Windows 10\_11**

Right-click on Intel\_Sound.bat and **run the batch file as Administrator.**

Name	Date modified	Type	Size
IntcDMic.sys	4/20/2022 11:51 AM	System file	731 KB
intcoed	4/20/2022 11:51 AM	Security Catalog	138 KB
IntcOED	4/20/2022 11:37 AM	Setup Information	58 KB
IntcOED.sys	4/20/2022 11:51 AM	System file	1,146 KB
intcsdw	4/20/2022 11:51 AM	Security Catalog	43 KB
IntcSDW	4/20/2022 11:37 AM	Setup Information	156 KB
IntcSDW.sys	4/20/2022 11:51 AM	System file	901 KB
intcsdwbus	4/20/2022 11:51 AM	Security Catalog	40 KB
IntcSdwBus	4/20/2022 11:37 AM	Setup Information	24 KB
IntcSdwBus.sys	4/20/2022 11:51 AM	System file	498 KB
intcsst	4/20/2022 11:51 AM	Security Catalog	42 KB
IntcSST	4/20/2022 11:37 AM	Setup Information	147 KB
IntcSST.sys	4/20/2022 11:51 AM	System file	807 KB
intcusb	4/20/2022 11:51 AM	Security Catalog	43 KB
IntcUSB	4/20/2022 11:37 AM	Setup Information	121 KB
IntcUSB.sys	4/20/2022 11:51 AM	System file	870 KB
<b>Intel_Sound</b>	12/16/2022 5:41 AM	Windows Batch File	1 KB

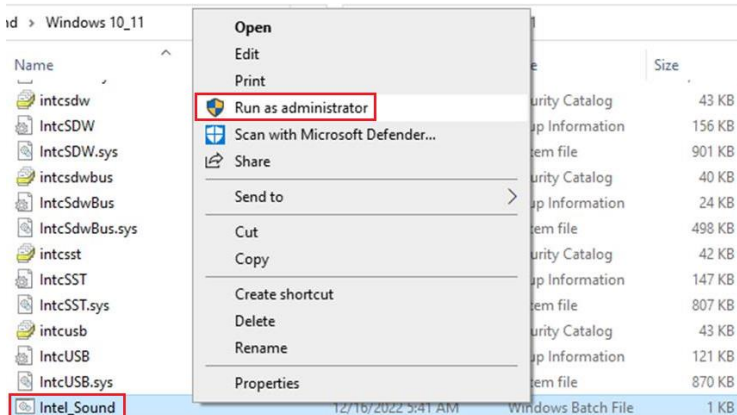




2. After running the batch file, install the audio drivers, click **Intel** on the left pane and then **Intel(R) RaptorLake-P/PS/U Chipset Drivers** on the right.



3. Click **Realtek High Definition Audio Drivers**.



4. On the *Welcome* screen of the InstallShield Wizard, click **Next**.

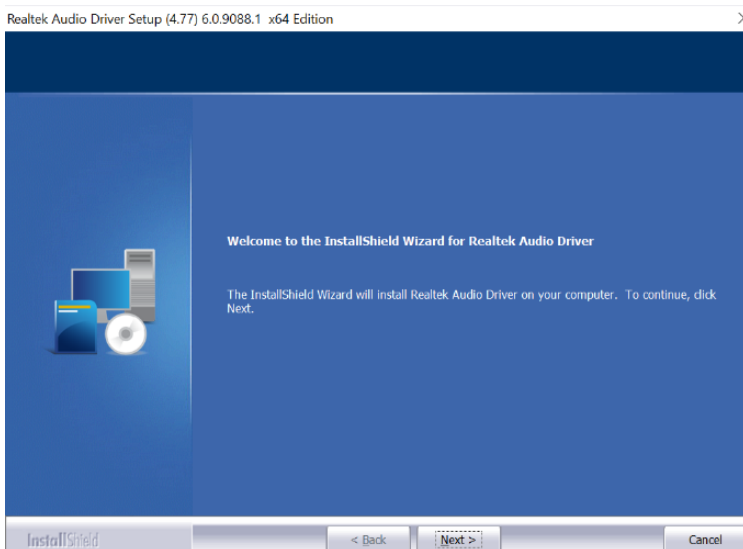

5. Click **Next** to continue the driver installation process.
6. After completing the installation, click **Finish** to restart the computer.

### 3.5 LAN Driver Installation

1. Click **Intel** on the left pane and then **Intel(R) RaptorLake-P/PS/U Chipset Drivers** on the right pane.



2. Click **Intel(R) PRO LAN Network Drivers..**



3. On the *Network Connections* screen, click **Install Drivers and Software**.



Install Drivers and Software


View User Guides

View Release Notes

[Networking at Intel.com](http://Networking.at.Intel.com)

Version: 27.4.0.1

4. When the Welcome to the install wizard for Intel(R) Network Connections screen appears, click **Next**.
5. On the next screen, accept the license agreement and click **Next**.
6. On the *Setup Options* screen, click the checkbox to select the desired driver(s) for installation. Then click **Next** to continue.

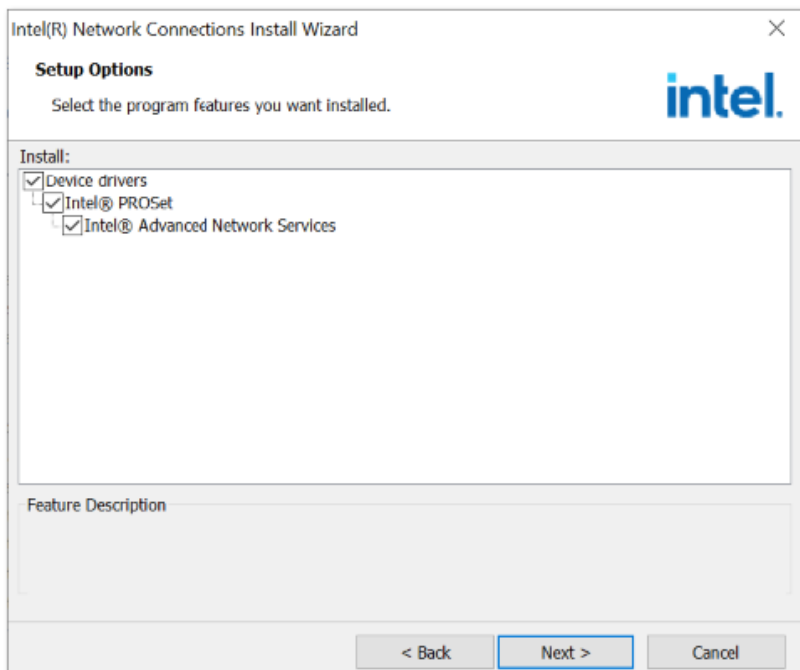

7. On the *Ready to Install the Program* screen, click **Install** to begin the installation. When the Install wizard has completed the installation, click **Finish**.

### 3.6 Intel® Management Engine Components Drivers Installation


1. Click **Intel** on the left pane and then **Intel(R) RaptorLake-P/PS/U Chipset Drivers** on the right pane.



2. Click **Intel(R) ME Drivers**.



3. When the Welcome screen appears, click **Next**.

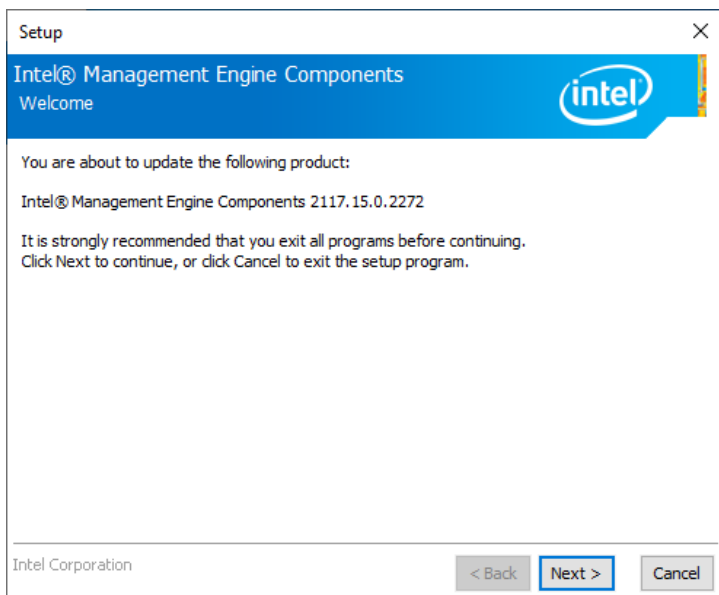

4. Accept the license agreement and click **Next**.
5. After Intel Management Engine Components have been successfully installed, click **Finish**.

# Chapter 4

## BIOS Setup

This chapter describes the different settings available in the AMI BIOS that comes with the board. The topics covered in this chapter are as follows:

- Main Settings
- Advanced Settings
- Chipset Settings
- Security Settings
- Boot Settings
- Save & Exit
- MEBx

## 4.1 Introduction

The BIOS (Basic Input/Output System) installed in the ROM of your computer system supports Intel® processors. The BIOS provides critical low-level support for standard devices such as disk drives, serial ports and parallel ports. It also provides password protection as well as special support for detailed fine-tuning of the chipset controlling the entire system.

## 4.2 BIOS Setup

The BIOS provides a Setup utility program for specifying the system configurations and settings. The BIOS ROM of the system stores the Setup utility. When you turn on the computer, the BIOS is immediately activated. Press the <Del> key immediately allows you to enter the Setup utility. If you are a little bit late pressing the <Del> key, POST (Power On Self Test) will continue with its test routines, thus preventing you from invoking the Setup.

If you still need to enter Setup, restart the system by pressing the "Reset" button or simultaneously pressing the <Ctrl>, <Alt> and <Delete> keys. You can also restart by turning the system Off and back On again.

The following message will appear on the screen:

```
Press  <DEL>  to  Enter  Setup
```

In general, press the arrow keys to highlight items, <Enter> to select, the <PgUp> and <PgDn> keys to change entries, <F1> for help, and <Esc> to quit.

When you enter the BIOS Setup utility, the *Main Menu* screen will appear on the screen. The Main Menu allows you to select from various setup functions and exit choices.

---

**Warning:** It is strongly recommended that you avoid making any changes to the chipset defaults.

These defaults have been carefully chosen by both AMI and your system manufacturer to provide the absolute maximum performance and reliability. Changing the defaults could make the system unstable and crash in some cases.

---


### 4.3 Main Settings



BIOS Setting	Description
System Date	Sets the date. Use the <Tab> key to switch between the Date elements.
System Time	Set the time. Use the <Tab> key to switch between the Time elements.

### Advanced Settings

This section allows you to configure system features according to your preference.

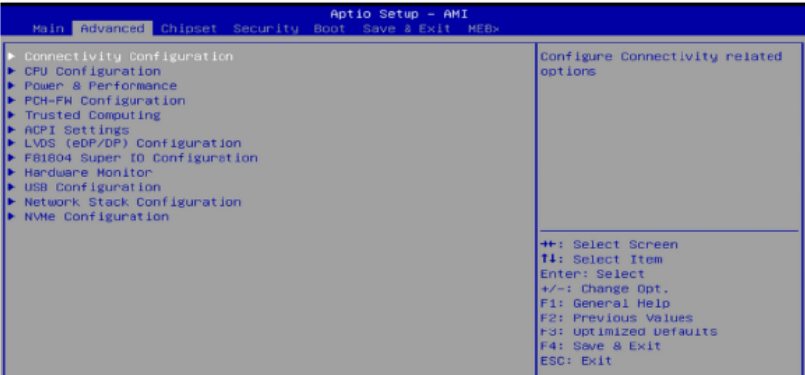



## 4.4.1 Connectivity Configuration




BIOS Setting	Description
CNVi Mode	This option configures Connectivity. <b>Auto Detection</b> – means that if Discrete solution is discovered it will be enabled by default. Otherwise Integrated solution (CNVi) will be enabled; <b>Disable Integrated</b> – disables Integrated Solution.
RFI Mitigation	This is an option intended to enable/disable DDR-RFIM feature for connectivity. This feature may result in temporary slowdown of the DR speed.
Preboot BLE	This will be used to enable Preboot Bluetooth function.
Discrete Bluetooth Module	Serial IO UART0 needs to be enabled to select BT Module. Default: Disabled
Advanced Settings	Configure ACPI objects for wireless devices Default: Disabled
WWAN Configuration	Configure WWAN related options. WWAN Device: enable or disable M.2 WWAN device
WWAN Device	Select the M.2 WWAN device options to enable 4G-7360/7560 (Intel) 5G – M80 (MediaTek) modems.

4.4.2 CPU Configuration



BIOS Setting	Description
Intel (VMX) Virtualization Technology	When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.
Active Performance Cores	Number of P-cores to enable in each processor package. Note: Number of cores and E-cores are looked at together. When both are (0,0), Pcode will enable all cores.
Active Processor Cores	Number of E-cores to enable in each processor package. Note: Number of cores and E-cores are looked at together. When both are (0,0), Pcode will enable all cores.
Hyper-Threading	Options; Enabled or Disabled

### 4.4.3 Power & Performance

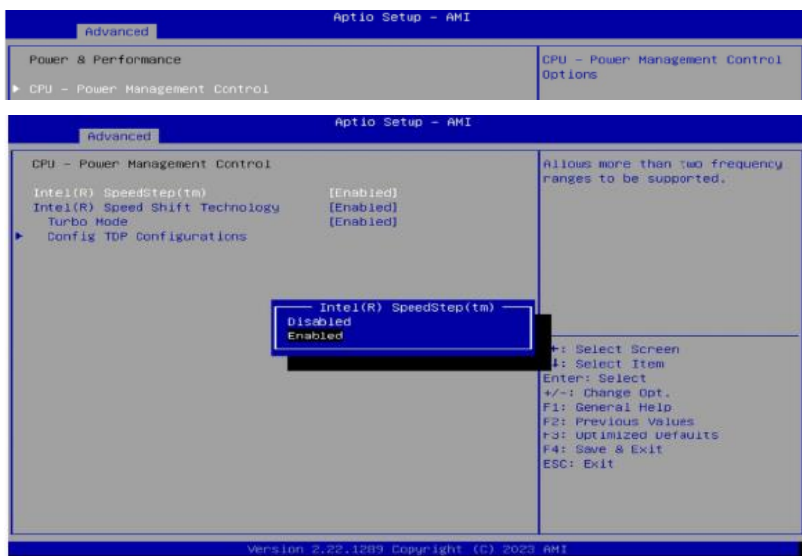

BIOS Setting	Description
Intel Speedstep	Allows more than two frequency ranges to be supported
Intel Speed Shift Technology	Enable/Disable Intel Speed Shift Technology support. Enabling will expose the CPPC v2 interface to allow for hardware controlled P-states.
Turbo Mode	Enable/disable processor turbo mode (requires EMTTM enabled too. AUTO means enabled.
Config TDP Configuration	Configurable processor base power (cTDP) configurations.

## Advanced

## Config TDP Configurations

Enable Configurable TDP [Applies to cTDP]  
 Configurable TDP Boot Mode [Nominal]  
 Configurable TDP Lock [Disabled]  
 CTD P BIOS control [Disabled]  
 ConfigTDP Levels 3  
 ConfigTDP Turbo Activation Ratio 17 (Unlocked)  
 Power Limit 1 28.0W (MSR:28.0)  
 Power Limit 2 64.0W (MSR:64.0)

## Custom Settings Nominal

ConfigTDP Nominal Ratio:18 TAR:17 PL1:2...  
 Power Limit 1 0  
 Power Limit 2 0  
 Power Limit 1 Time Window [0]  
 ConfigTDP Turbo Activation Ratio 0

## Custom Settings Level1

ConfigTDP Level1 Ratio:12 TAR:11 PL1:2...  
 Power Limit 1 0  
 Power Limit 2 0  
 Power Limit 1 Time Window [0]  
 ConfigTDP Turbo Activation Ratio 0

Applies Configurable Processor Base Power (cTDP) initialization settings based on non-cTDP or cTDP. Default is 1: Applies to cTDP; if 0 then applies non-cTDP and BIOS will bypass cTDP initialization flow

↑↓: Select Screen  
 ↑: Select Item  
 Enter: Select  
 +/-: Change Opt.  
 F1: General Help  
 F2: Previous Values  
 F3: Optimized Defaults  
 F4: Save & Exit  
 ESC: Exit

Version 2.22.1209 Copyright (C) 2023 AMI

## Config TDP Configurations

Enable Configurable TDP [Applies to cTDP]  
 Configurable TDP Boot Mode [Nominal]  
 Configurable TDP Lock [Disabled]  
 CTD P BIOS control [Disabled]  
 ConfigTDP Levels 3

Configurable Processor Base Power (cTDP) Mode as Nominal/Level1/Level2/Deactivate TDP selection. Deactivate option will set MSR to Nominal and MMIO to Zero.

## Config TDP Configurations

Enable Configurable TDP [Applies to cTDP]  
 Configurable TDP Boot Mode [Nominal]  
 Configurable TDP Lock [Disabled]  
 CTD P BIOS control [Disabled]  
 ConfigTDP Levels 3  
 ConfigTDP Turbo Activation Ratio 17 (Unlocked)  
 Power Limit 1 28.0W (MSR:28.0)  
 Power Limit 2 64.0W (MSR:64.0)

Configurable Processor Base Power (cTDP) Mode Lock sets the Lock bits on TURBO\_ACTIVATION\_RATIO and CONFIG\_TDP\_CONTROL. Note: When CTD P Lock is enabled Custom ConfigTDP Count will be forced to 1 and Custom ConfigTDP Boot Index will be forced to 0.

## Config TDP Configurations

Enable Configurable TDP [Applies to cTDP]  
 Configurable TDP Boot Mode [Nominal]  
 Configurable TDP Lock [Disabled]  
 CTD P BIOS control [Disabled]  
 ConfigTDP Levels 3

Enables Configurable Processor Base Power (cTDP) control via runtime ACPI BIOS methods. This "BIOS only" feature does not require EC or driver support.

## Config TDP Configurations

Enable Configurable TDP [Applies to cTDP]  
 Configurable TDP Boot Mode [Nominal]  
 Configurable TDP Lock [Disabled]  
 CTD P BIOS control [Disabled]  
 ConfigTDP Levels 3  
 ConfigTDP Turbo Activation Ratio 17 (Unlocked)  
 Power Limit 1 28.0W (MSR:28.0)  
 Power Limit 2 64.0W (MSR:64.0)

Power Limit 1 in Milli Watts. BIOS will round to the nearest 1/10W when programming. 0 = no custom override. For 12.50W, enter 12500. Overclocking SKU: Value must be between Max and Min Power Limits (specified by PACKAGE\_POWER\_SKU\_MSR). Other SKUs: This value must be between Min Power Limit and Processor Base Power (TDP)

## Custom Settings Nominal

ConfigTDP Nominal Ratio:18 TAR:17 PL1:2...  
 Power Limit 1 0

↑↓: Select Screen

Config TDP Configurations		
Enable Configurable TDP	[Applies to cTDP]	
Configurable TDP Boot Mode	[Nominal]	
Configurable TDP Lock	[Disabled]	
CTDP BIOS control	[Disabled]	
ConfigTDP Levels	3	
ConfigTDP Turbo Activation Ratio	17 (Unlocked)	
Power Limit 1	28.0W (MSR:28.0)	
Power Limit 2	64.0W (MSR:64.0)	
Custom Settings Nominal		
ConfigTDP Nominal	Ratio:18 TAR:17 PL1:2...	
Power Limit 1	0	
Power Limit 2	0	
Power Limit 1 Time Window	0	
ConfigTDP Turbo Activation Ratio	0	

Power Limit 2 value in Milliwatts. BIOS will round to the nearest 1/10W when programming. 0 = no custom override. For 12.50W, enter 12500. Processor applies control policies such that the package power does not exceed this limit.

++: Select Screen  
 T1: Select Item  
 Enter: Select  
 +/-: Change Opt.  
 F1: General Help  
 F2: Previous Values  
 F3: Optimized Defaults  
 F4: Save & Exit  
 ESC: Exit

Config TDP Configurations		
Enable Configurable TDP	[Applies to cTDP]	
Configurable TDP Boot Mode	[Nominal]	
Configurable TDP Lock	[Disabled]	
CTDP BIOS control	[Disabled]	
ConfigTDP Levels	3	
ConfigTDP Turbo Activation Ratio	17 (Unlocked)	
Power Limit 1	28.0W (MSR:28.0)	
Power Limit 2	64.0W (MSR:64.0)	
Custom Settings Nominal		
ConfigTDP Nominal	Ratio:18 TAR:17 PL1:2...	
Power Limit 1	0	
Power Limit 2	0	
Power Limit 1 Time Window	[0]	
ConfigTDP Turbo Activation Ratio	0	

Custom value for Turbo Activation Ratio. Needs to be configured with valid values from LFM to Max Turbo. 0 means don't use custom value.

++: Select Screen  
 T1: Select Item  
 Enter: Select  
 +/-: Change Opt.  
 F1: General Help  
 F2: Previous Values  
 F3: Optimized Defaults  
 F4: Save & Exit  
 ESC: Exit




Advanced		Aprio Setup - AMI	
ConfigTDP Levels	3		
ConfigTDP Turbo Activation Ratio	17 (Unlocked)		
Power Limit 1	28.0W (MSR:28.0)		
Power Limit 2	64.0W (MSR:64.0)		
Custom Settings Nominal			
ConfigTDP Nominal	Ratio:18 TAR:17 PL1:2...		
Power Limit 1	0		
Power Limit 2	0		
Power Limit 1 Time Window	[0]		
ConfigTDP Turbo Activation Ratio	0		
Custom Settings Level1			
ConfigTDP Level1	Ratio:12 TAR:11 PL1:2...		
Power Limit 1	0		
Power Limit 2	0		
Power Limit 1 Time Window	[0]		
ConfigTDP Turbo Activation Ratio	0		
Custom Settings Level2			
ConfigTDP Level2	Ratio:22 TAR:21 PL1:3...		
Power Limit 1	0		
Power Limit 2	0		
Power Limit 1 Time Window	[0]		
ConfigTDP Turbo Activation Ratio	0		

Custom value for Turbo Activation Ratio. Needs to be configured with valid values from LFM to Max Turbo. 0 means don't use custom value.

++: Select Screen  
 T1: Select Item  
 Enter: Select  
 +/-: Change Opt.  
 F1: General Help  
 F2: Previous Values  
 F3: Optimized Defaults  
 F4: Save & Exit  
 ESC: Exit

Version 2.22.1209 Copyright (C) 2023 AMI

### 4.4.4 PCH-FW Configuration

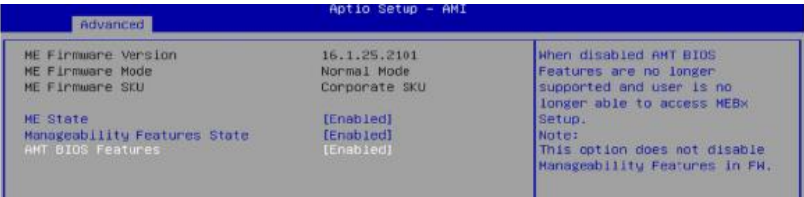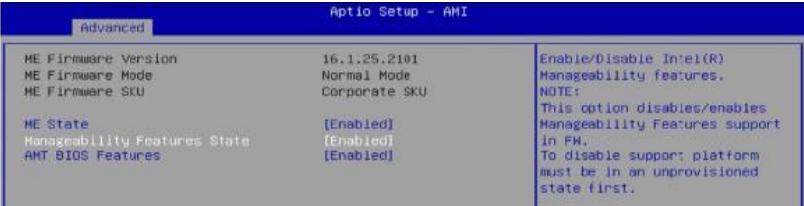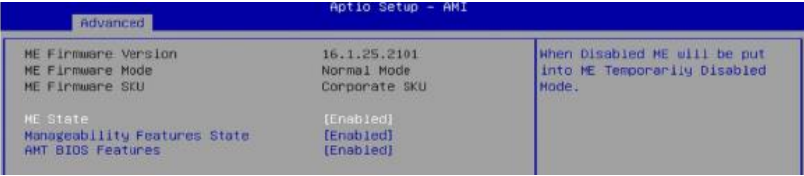


## 4.4.5 Trusted Computing



BIOS Setting	Description
Security Device Support	Enables / Disables BIOS support for security device. OS will not show security device. TCG EFI protocol and INT1A interface will not be available.
SHA256/384, SMA384 PCR Bank	Enables / Disables PCR Bank.
Pending operation	Schedule an operation for the security device. Note: Your computer will reboot during restart in order to change state of security device.
Platform Hierarchy	Enables / Disables platform hierarchy.
Storage Hierarchy	Enables / Disables storage hierarchy.
Endorsement Hierarchy	Enables / Disables endorsement hierarchy.
Physical Presence Spec Version	Select to tell O.S. to support PPI Spec Version 1.2 or 1.3. Note some HCK tests might not support 1.3.
Device Select	TPM 1.2 will restrict support to TPM 1.2 devices. TPM 2.0 will restrict support to TPM 2.0 devices. Auto will support both with the default set to TPM 2.0 devices if not found, TPM 1.2 devices will be enumerated.


## 4.4.6 ACPI Settings

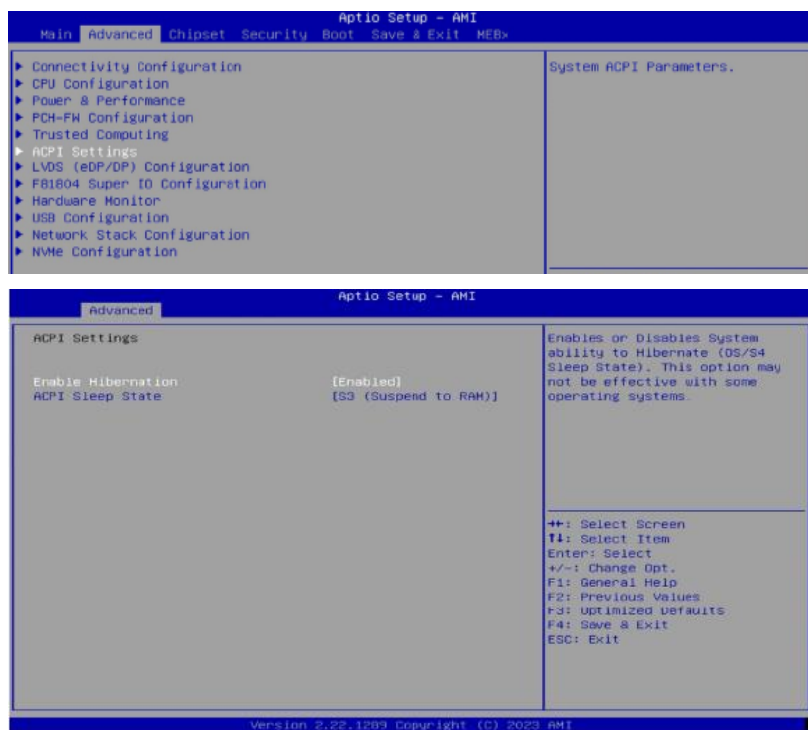

BIOS Setting	Description
Enable Hibernation	Enables / Disables the system ability to hibernate (OS/S4 Sleep State). This option may be not effective with some OS.
ACPI Sleep State	Select the highest ACPI sleep state the system will enter when SUSPEND button is pressed.



### 4.4.7 LVDS (eDP/DP) Configuration

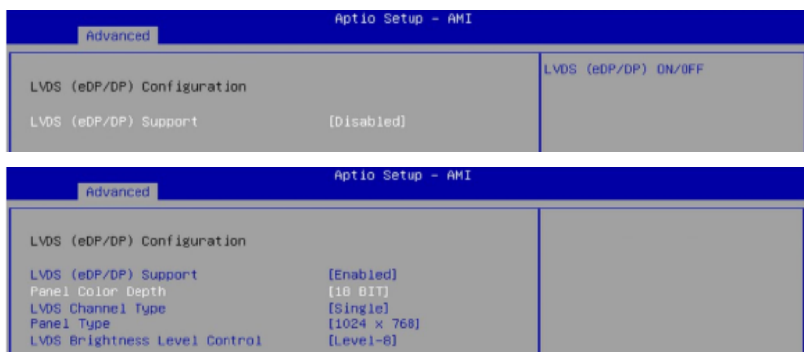

BIOS Setting	Description
LVDS (eDP/DP) Support	<i>LVDS (eDP/DP) ON/OFF</i>
Panel Color Depth	Selects the panel color depth. Options: 18 bit, 24bit (VESA/JEIDA)
LVDS Channel Type	Chooses the LVDS as single or dual channel.
Panel Type	Panel Type (Resolution) Options: 800 x 480, 800 x 600, 1024 x 768, 1280 x 768, 1280 x 800, 1280 x 960, 1280 x 1024, 1366 x 768, 1440 x 900, 1600 x 900, 1600 x 1200, 1680 x 1050, 1920 x 1080, 1920 x 1200
LVDS Brightness Level Control	Options: Level-1 to Level-8

4.4.8 F81804 Super IO Configuration

Aptio Setup - AMI	
Advanced	
F81804 Super IO Configuration	Set Parameters of Serial Port 1 (COMA)
Super IO Chip F81804	
Serial Port 1 Configuration	
Serial Port 2 Configuration	

BIOS Setting	Description
Serial Ports Configuration	Sets parameters of serial ports.  Enables / Disables the serial port and select an optimal setting for the Super IO device.




Serial Port 1 Configuration

Serial Port 1 Configuration	Enable or Disable Serial Port (COM)
Serial Port [Enabled]	
Device Settings IO=3F8h; IRQ=4;	
Change Settings [Auto]	
Device Mode [RS232]	


Serial Port 1 Configuration	Select an optimal settings for Super IO Device
Serial Port [Enabled]	
Device Settings IO=3F8h; IRQ=4;	
Change Settings [Auto]	
Device Mode [RS232]	
<div>Change Settings</div> <div>Auto IO=3F8h; IRQ=4; IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12; IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12; IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12; IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;</div>	
	Select Screen Select Item Enter: Select

Serial Port 1 Configuration	Change the Serial Port mode.
Serial Port [Enabled]	
Device Settings IO=3F8h; IRQ=4;	
Change Settings [Auto]	
Device Mode [RS232]	
<div>Device Mode</div> <div>RS232 RS485 TX Low Active RS485 with Termination TX Low Active RS422 RS422 with Termination</div>	
	Select Screen Select Item Enter: Select

## Serial Port 2 Configuration

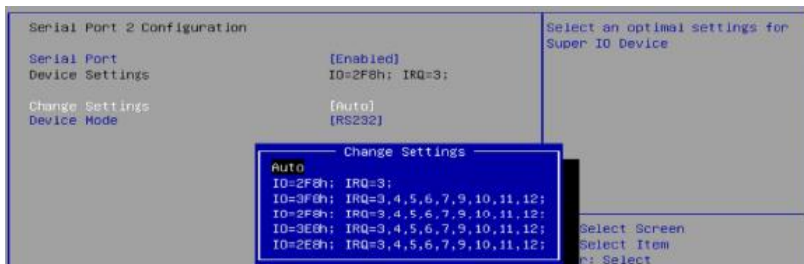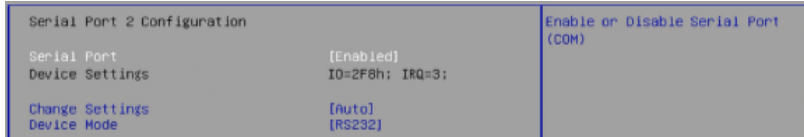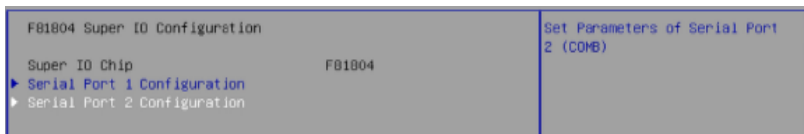

4.4.9 Hardware Monitor

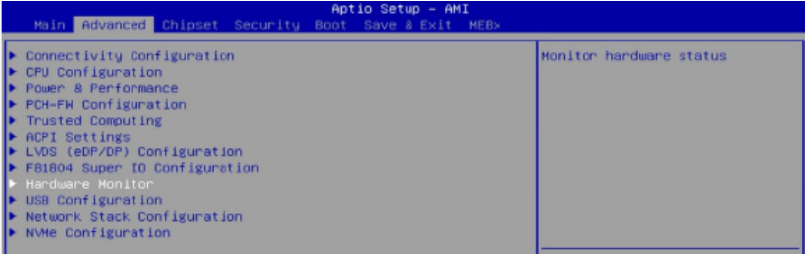

BIOS Setting	Description
CPU Fan Smart Fan Control	Enables / Disables smart fan control.
Temperatures / Voltages	These fields are the parameters of the hardware monitoring function feature of the motherboard. The values are read-only values as monitored by the system and show the PC health status.

## 4.4.10 USB Configuration



BIOS Setting	Description
Legacy USB Support	<ul style="list-style-type: none"> <li>• <b>Enabled</b> enables Legacy USB support.</li> <li>• <b>Auto</b> disables legacy support if there is no USB device connected.</li> <li>• <b>Disabled</b> keeps USB devices available only for EFI applications.</li> </ul>
XHCI Hand-off	This is a workaround for OSeS without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.
USB Mass Storage Driver Support	Enables / Disables the support for USB mass storage driver.
USB Transfer time-out	The time-out value (1 / 5 10 / 20 secs) for Control, Bulk, and Interrupt transfers.
Device reset time-out	Gives seconds (10 / 20 / 30 / 40 secs) to delay execution of Start Unit command to USB mass storage device.
Device power-up delay	Max.time the device will take before it properly reports itself to the Host Controller. ' <b>Auto</b> ' uses default value: for a Root port it is 100ms, for a Hub port the delay is taken from Hub descriptor.

4.4.11 Network Stack Configuration



BIOS Setting	Description
Network Stack	Enable/Disable UEFI Network Stack
IPv4 PXE Support	If disabled, IPv4 PXE boot support will not be available.
IPv4 HTTP Support	If disabled, IPv4 HTTP boot support will not be available.
Ipv6 PXE Support	If disabled, IPv6 PXE boot support will not be available.
Ipv6 HTTP Support	If disabled, IPv6 HTTP boot support will not be available.
PXE boot wait time	Wait time in seconds to press ESC key to abort the PXE boot. Use either +/- or numeric keys to set the value
Media detect count	Number of times the presence of media will be checked. Use either +/- nurmeric keys to set the value.

### 4.4.12 NVMe Configuration



## 4.5 Chipset Settings

### 4.5.1 System Agent (SA) Configuration

Aptio Setup - AMI		
Main	Advanced	Chipset
▶ System Agent (SA) Configuration ▶ PCH-IO Configuration		System Agent (SA) Parameters
System Agent (SA) Configuration VT-d Supported ▶ Memory Configuration ▶ Graphics Configuration ▶ VMD setup menu VT-d [Enabled] Control Iommu Pre-boot Behavior [Disable IOHMMU]		Memory Configuration Parameters
In-Band ECC Support [Enabled] In-Band ECC Operation Mode [2] IB ECC Error Injection Control [No Error Injection]		Enable/Disable In-Band ECC. Will be enabled if memory has symmetric configuration
In-Band ECC Support [Enabled] In-Band ECC Operation Mode [2] IB ECC Error Injection Control [No Error Injection]		0: Functional Mode protects requests based on the address range, 1: Makes all requests non protected and ignore range checks, 2: Makes all requests protected and ignore range checks
In-Band ECC Support [Enabled] In-Band ECC Operation Mode [2] IB ECC Error Injection Control [No Error Injection]		Enables IB ECC Error Injection
IB ECC Error Injection Control No Error Injection Inject Correctable Error Address match Inject Correctable Error on Insertion counter Inject Uncorrectable Error Address match Inject Uncorrectable Error on Insertion counter		Screen Item Select



## 4.5.1.1. Graphics Configuration and VMD Setup

System Agent (SA) Configuration		Graphics Configuration
VT-d	Supported	
▶ Memory Configuration ▶ Graphics Configuration ▶ VMD setup menu		
VT-d	[Enabled]	
Control Iommu Pre-boot Behavior	[Disable IOHMMU]	

Graphics Configuration		Select the Aperture Size Note : Above 4GB MMIO BIOS assignment is automatically enabled when selecting > 2048MB aperture. To use this feature, please disable CSM Support.
Aperture Size	[256MB]	
DVMT Pre-Allocated	[60M]	
DVMT Total Gfx Mem	[256M]	
Aperture Size 128MB 256MB 512MB 1024MB		++: Select Screen F1: Select Item

Graphics Configuration		Select DVMT 5.0 Pre-Allocated (Fixed) Graphics Memory size used by the Internal Graphics Device.
Aperture Size	[256MB]	
DVMT Pre-Allocated	[60M]	
DVMT Total Gfx Mem	[256M]	
DVMT Pre-Allocated 64M 96M 128M 160M 4M 8M 12M 16M 20M 24M 28M 32M/F7 36M 40M 44M 48M 52M 56M 60M		++: Select Screen F4: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized defaults F4: Save & Exit ESC: Exit

Graphics Configuration		Select DVMT5.0 Total Graphic Memory size used by the Internal Graphics Device.
Aperture Size	[256MB]	
DVMT Pre-Allocated	[60M]	
DVMT Total Gfx Mem	[256M]	
DVMT Total Gfx Mem 128M 256M MAX		++: Select Screen

System Agent (SA) Configuration		VMD Configuration settings
VT-d	Supported	
▶ Memory Configuration ▶ Graphics Configuration ▶ VMD setup menu		
VT-d	[Enabled]	
Control Iommu Pre-boot Behavior	[Disable IOHMMU]	

VMD Configuration		Enable/Disable to VMD controller
Enable VMD controller	[Disabled]	

VMD Configuration	
Enable VMD controller	[Enabled]
Enable VMD Global Mapping	[Enabled]
Map this Root Port under VMD	[Disabled]
Root Port BDF details	SATA Controller
RAID0	[Enabled]
RAID1	[Enabled]
RAID5	[Enabled]
RAID10	[Enabled]
Intel Rapid Recovery Technology	[Enabled]
RRT volumes can span internal and	[Enabled]
Intel(R) Optane(TM) Memory	[Enabled]
ZPODD	[Disabled]

VMD Configuration		Enable/Disable RRT volumes can span internal and eSATA drives.
Enable VMD controller	[Enabled]	
Enable VMD Global Mapping	[Enabled]	
Map this Root Port under VMD	[Disabled]	
Root Port BDF details	SATA Controller	
RAID0	[Enabled]	
RAID1	[Enabled]	
RAID5	[Enabled]	
RAID10	[Enabled]	
Intel Rapid Recovery Technology	[Enabled]	
RRT volumes can span internal and	[Enabled]	
Intel(R) Optane(TM) Memory	[Enabled]	
ZPODD	[Disabled]	
		++: Select Screen T1: Select Item Enter: Select

VMD Configuration		Enable/Disable System Acceleration with Intel(R) Optane(TM) Memory feature.
Enable VMD controller	[Enabled]	
Enable VMD Global Mapping	[Enabled]	
Map this Root Port under VMD	[Disabled]	
Root Port BDF details	SATA Controller	
RAID0	[Enabled]	
RAID1	[Enabled]	
RAID5	[Enabled]	
RAID10	[Enabled]	
Intel Rapid Recovery Technology	[Enabled]	
RRT volumes can span internal and	[Enabled]	
Intel(R) Optane(TM) Memory	[Enabled]	
ZPODD	[Disabled]	
		++: Select Screen T1: Select Item Enter: Select

VMD Configuration		Enable/Disable ZPODD. The option is only needed to be enabled when ZPODD is connected in VMD mode
Enable VMD controller	[Enabled]	
Enable VMD Global Mapping	[Enabled]	
Map this Root Port under VMD	[Disabled]	
Root Port BDF details	SATA Controller	
RAID0	[Enabled]	
RAID1	[Enabled]	
RAID5	[Enabled]	
RAID10	[Enabled]	
Intel Rapid Recovery Technology	[Enabled]	
RRT volumes can span internal and	[Enabled]	
Intel(R) Optane(TM) Memory	[Enabled]	
ZPODD	[Disabled]	
		++: Select Screen T1: Select Item Enter: Select

System Agent (SA) Configuration	VT-d capability
VT-d Supported	
▶ Memory Configuration	
▶ Graphics Configuration	
▶ VMD setup menu	
VT-d [Enabled]	
Control Iommu Pre-boot Behavior [Disable IOMMU]	

System Agent (SA) Configuration	Enable IOMMU in Pre-boot environment (If DMAR table is installed in DXE and If VTD_INFO_PPI is installed in PEI.)
VT-d Supported	
▶ Memory Configuration	
▶ Graphics Configuration	
▶ VMD setup menu	
VT-d [Enabled]	
Control Iommu Pre-boot Behavior [Disable IOMMU]	

## 4.5.2 PCH-IO Configuration

▶ System Agent (SA) Configuration	PCH Parameters
▶ PCH-IO Configuration	

PCH-IO Configuration	SATA Device Options Settings
▶ SATA Configuration	
▶ USB Configuration	
Power Failure [Always off]	

### 4.5.2.1 SATA and RST Configuration:

SATA Configuration	Enable or Disable SATA Port
Serial ATA Port 0 Empty	
Software Preserve Unknown	
Port 0 [Enabled]	
Hot Plug [Disabled]	
Serial ATA Port 1 Empty	
Software Preserve Unknown	
Port 1 [Enabled]	
Hot Plug [Disabled]	

SATA Configuration	Designates this port as Hot Pluggable.
Serial ATA Port 0 Empty	
Software Preserve Unknown	
Port 0 [Enabled]	
Hot Plug [Disabled]	
Serial ATA Port 1 Empty	
Software Preserve Unknown	
Port 1 [Enabled]	
Hot Plug <input checked="" type="checkbox"/>	

PCH-IO Configuration	USB Configuration settings
▶ SATA Configuration	
▶ USB Configuration	
Power Failure [Always off]	

USB Configuration M.2 Key B (J9) USB3 Port [Enabled]	Enable/Disable this USB Physical Connector (physical port). Once disabled, any USB devices plug into the connector will not be detected by BIOS or OS.
PCH-IO Configuration ▶ SATA Configuration ▶ USB Configuration Power Failure [Always off]	Specify what state to go to when power is re-applied after a power failure (G3 state).

BIOS Setting	Description
SATA and RST Configuration	SATA device options and settings
SATA Controller(s)	Enables / Disables the Serial ATA.
Power-On after Power failure	Specify what state to go to when power is re-applied after a power failure (G3 state).

## 4.6 Security Settings



BIOS Setting	Description
Setup Administrator Password	Sets an administrator password for the setup utility.
User Password	Sets a user password.
Secure Boot	Secure Boot feature is Active if Secure Boot is enabled. Platform Key(PK) is enrolled and the system is in user mode. The mode change requires platform reset.
Secure Boot Mode	Secure Boot mode options: Standard or Custom. In Custom mode, Secure Boot Policy variables can be configured by a physically present user without full authentication.
Restore Factory Keys	Forces system to user mode. Install factory default Secure Boot key databases.
Reset to Setup Mode	Delete all Secure Boot key databases from NVRAM
Key Management	Enables expert users to modify Secure Boot Policy variables without full authentication.

## 4.7 Boot Settings




BIOS Setting	Description
Setup Prompt Timeout	Number of seconds to wait for setup activation key. 65535 (0xFFFF) means indefinite waiting.
Bootup NumLock State	Selects the keyboard NumLock state.
Quiet Boot	Enables / Disables Quiet Boot option.
FIXED BOOT ORDER Priorities	Sets the system boot order.

## 4.8 Save & Exit Settings



BIOS Setting	Description
Save Changes and Exit	Exits system setup after saving the changes.
Discard Changes and Exit	Exits system setup without saving any changes.
Save Changes and Reset	Resets the system after saving the changes.
Discard Changes and Reset	Resets system setup without saving any changes.
Save Changes	Saves changes done so far to any of the setup options.
Discard Changes	Discards changes done so far to any of the setup options.
Restore Defaults	Restores / Loads defaults values for all the setup options.
Save as User Defaults	Saves the changes done so far as User Defaults.
Restore User Defaults	Restores the user defaults to all the setup options.
Launch EFI Shell from filesystem device	Attempts to launch EFI shell application (Shell.efi) from one of the available filesystem devices.

## 4.9 MEBx

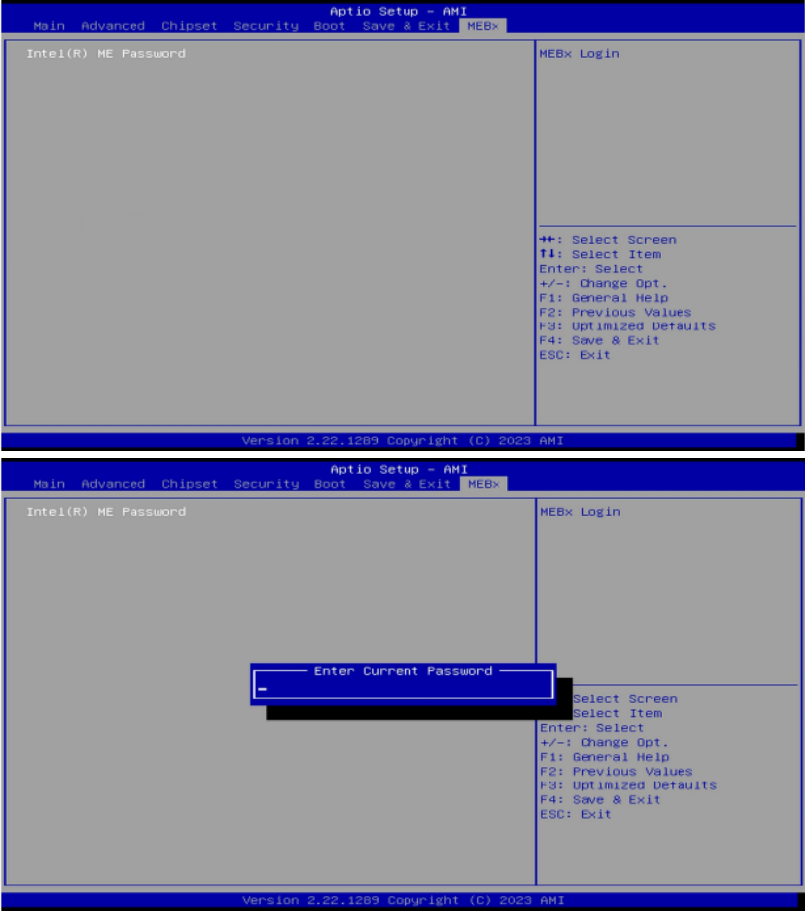



# Appendix

This section provides the mapping addresses of peripheral devices and the sample code of watchdog timer configuration.

## A. I/O Port Address Map

Each peripheral device in the system is assigned a set of I/O port addresses which also becomes the identity of the device. The following table lists the I/O port addresses used.

Address	Device Description
0x00000A00-0x00000A0F	Motherboard resources
0x00000A10-0x00000A1F	Motherboard resources
0x00000A20-0x00000A2F	Motherboard resources
0x0000002E-0x0000002F	Motherboard resources
0x0000004E-0x0000004F	Motherboard resources
0x00000061-0x00000061	Motherboard resources
0x00000063-0x00000063	Motherboard resources
0x00000065-0x00000065	Motherboard resources
0x00000067-0x00000067	Motherboard resources
0x00000070-0x00000070	Motherboard resources
0x00000080-0x00000080	Motherboard resources
0x00000092-0x00000092	Motherboard resources
0x000000B2-0x000000B3	Motherboard resources
0x000000680-0x00000069F	Motherboard resources
0x0000164E-0x0000164F	Motherboard resources
0x0000FFF8-0x0000FFFF	Intel(R) Active Management Technology - SOL (COM7)
0x00000020-0x00000021	Programmable interrupt controller
0x00000024-0x00000025	Programmable interrupt controller
0x00000028-0x00000029	Programmable interrupt controller
0x0000002C-0x0000002D	Programmable interrupt controller
0x00000030-0x00000031	Programmable interrupt controller
0x00000034-0x00000035	Programmable interrupt controller
0x00000038-0x00000039	Programmable interrupt controller
0x0000003C-0x0000003D	Programmable interrupt controller
0x000000A0-0x000000A1	Programmable interrupt controller
0x000000A4-0x000000A5	Programmable interrupt controller
0x000000A8-0x000000A9	Programmable interrupt controller
0x000000AC-0x000000AD	Programmable interrupt controller
0x000000B0-0x000000B1	Programmable interrupt controller
0x000000B4-0x000000B5	Programmable interrupt controller
0x000000B8-0x000000B9	Programmable interrupt controller
0x000000BC-0x000000BD	Programmable interrupt controller
0x000004D0-0x000004D1	Programmable interrupt controller
0x000003F8-0x000003FF	Communications Port (COM1)
0x000002F8-0x000002FF	Communications Port (COM2)

0x00001854-0x00001857	Motherboard resources
0x00000000-0x00000CF7	PCI Express Root Complex
0x00000D00-0x0000FFFF	PCI Express Root Complex
0x0000EFA0-0x0000EFBF	Intel(R) SMBus - 51A3
0x00002000-0x000020FE	Motherboard resources
0x00003090-0x00003097	Standard SATA AHCI Controller
0x00003080-0x00003083	Standard SATA AHCI Controller
0x00003060-0x0000307F	Standard SATA AHCI Controller
0x00000040-0x00000043	System timer
0x00000050-0x00000053	System timer
0x00003000-0x0000303F	Intel(R) UHD Graphics

## B. Interrupt Request Lines (IRQ)

Peripheral devices use interrupt request lines to notify CPU for the service required. The following table shows the IRQ used by the devices on board.

Level	Function
IRQ 16	High Definition Audio Controller
IRQ 19	Intel(R) Active Management Technology - SOL (COM7)
IRQ 4294967278~90	Intel(R) Ethernet Controller I226-LM #3
IRQ 4294967294	Intel(R) PCI Express Root Port #7 - 51BE
IRQ 4294967264	Intel(R) Management Engine Interface #1
IRQ 55-204	Microsoft ACPI-Compliant System
IRQ 256-511	Microsoft ACPI-Compliant System
IRQ 4294967292	Standard SATA AHCI Controller
IRQ 0	System timer
IRQ 4294967262	Intel(R) UHD Graphics
IRQ 4294967291	Intel(R) USB 3.10 eXtensible Host Controller - 1.20 (Microsoft)
IRQ 4294967293	Intel(R) PCI Express Root Port #8 - 51BF
IRQ 4294967265~77	Intel(R) Ethernet Controller I226-V #7

## C. Watchdog Timer Configuration

The Watchdog Timer (WDT) is used to generate a variety of output signals after a user programmable count. The WDT is suitable for use in the prevention of system lock-up, such as when software becomes trapped in a deadlock. Under these sorts of circumstances, the timer will count to zero and the selected outputs will be driven.

Under normal circumstance, you will need to restart the WDT at regular intervals before the timer counts to zero.

### Sample Code:

```
//-----
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----
#include <dos.h>
#include <conio.h>
#include <stdio.h>
#include <stdlib.h>
#include " F81804.H"
//-----
int main (int argc, char*argv[]);
void EnableWDT(int);
void DisableWDT(void);
//-----
int main (int argc, char *argv[])
{
    unsigned char bBuf;
    unsigned char bTime;
    char **endptr;

    char SIO;

    printf("Fintek 81866 watch dog program\n");
    SIO = Init_ F81804();
    if (SIO == 0)
    {
        printf("Can not detect Fintek 81866, program abort.\n");
        return(1);
    }
    if (SIO == 0)

    if (argc != 2)
    {
        printf("Parameter incorrect!!\n");
        return (1);
    }
}
```

```

        bTime = strtol(argv[1], endptr, 10);
        printf("System will reset after %d seconds\n", bTime);

        if (bTime)
        {
            EnableWDT(bTime); }
        else
        {
            DisableWDT();}
        return 0;
    }
//-----
void EnableWDT(int interval)
{
    unsigned char bBuf;

    bBuf = Get_F81804_Reg(0x2B);
    bBuf &= (~0x20);
    Set_F81804_Reg(0x2B, bBuf);           //Enable WDTO

    Set_F81804_LD(0x07);                 //switch to logic device 7
    Set_F81804_Reg(0x30, 0x01);          //enable timer

    bBuf = Get_F81804_Reg(0xF5);
    bBuf &= (~0x0F);
    bBuf |= 0x52;
    Set_F81804_Reg(0xF5, bBuf);          //count mode is second

    Set_F81804_Reg(0xF6, interval);      //set timer

    bBuf = Get_F81804_Reg(0xFA);
    bBuf |= 0x01;
    Set_F81804_Reg(0xFA, bBuf);          //enable WDTO output

    bBuf = Get_F81804_Reg(0xF5);
    bBuf |= 0x20;
    Set_F81804_Reg(0xF5, bBuf);          //start counting
}
//-----
void DisableWDT(void)
{
    unsigned char bBuf;

    Set_F81804_LD(0x07);                 //switch to logic device 7

    bBuf = Get_F81804_Reg(0xFA);
    bBuf &= ~0x01;
    Set_F81804_Reg(0xFA, bBuf);          //disable WDTO output

    bBuf = Get_F81804_Reg(0xF5);
    bBuf &= ~0x20;
    bBuf |= 0x40;
    Set_F81804_Reg(0xF5, bBuf);          //disable WDT
}
//-----

//-----

```

```
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----
#include "F81804.H"
#include <dos.h>
//-----
unsigned int F81804_BASE;
void Unlock_F81804 (void);
void Lock_F81804 (void);
//-----
unsigned int Init_F81804(void)
{
    unsigned int result;
    unsigned char ucDid;

    F81804_BASE = 0x4E;
    result = F81804_BASE;

    ucDid = Get_F81804_Reg(0x20);
    if (ucDid == 0x07)                //Fintek 81866
    {
        goto Init_Finish;
    }

    F81804_BASE = 0x2E;
    result = F81804_BASE;

    ucDid = Get_F81804_Reg(0x20);
    if (ucDid == 0x07)                //Fintek 81866
    {
        goto Init_Finish;
    }

    F81804_BASE = 0x00;
    result = F81804_BASE;

Init_Finish:
    return (result);
}
//-----
void Unlock_F81804 (void)
{
    outportb( F81804_INDEX_PORT, F81804_UNLOCK);
    outportb( F81804_INDEX_PORT, F81804_UNLOCK);
}
//-----
void Lock_F81804 (void)
{
    outportb( F81804_INDEX_PORT, F81804_LOCK);
}
//-----
void Set_F81804_LD( unsigned char LD)
{
    Unlock_F81804();
    outportb( F81804_INDEX_PORT, F81804_REG_LD);
    outportb( F81804_DATA_PORT, LD);
    Lock_F81804();
}
}
```

```

//-----
void Set_F81804_Reg( unsigned char REG, unsigned char DATA)
{
    Unlock_ F81804();
    outputb( F81804_INDEX_PORT, REG);
    outputb( F81804_DATA_PORT, DATA);
    Lock_ F81804();
}
//-----
unsigned char Get_ F81804_Reg(unsigned char REG)
{
    unsigned char Result;
    Unlock_ F81804();
    outputb( F81804_INDEX_PORT, REG);
    Result = inportb( F81804_DATA_PORT);
    Lock_ F81804();
    return Result;
}
//-----

//-----
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----
#ifndef F81804_H
#define F81804_H 1
//-----
#define F81804_INDEX_PORT ( F81804_BASE)
#define F81804_DATA_PORT ( F81804_BASE+1)
//-----
#define F81804_REG_LD 0x07
//-----
#define F81804_UNLOCK 0x87
#define F81804_LOCK 0xAA
//-----
unsigned int Init_ F81804(void);
void Set_ F81804_LD( unsigned char);
void Set_ F81804_Reg( unsigned char,
unsigned char); unsigned char
Get_ F81804_Reg( unsigned char);
//-----
#endif // F81804_H

```

## D. Onboard Connector Reference Types

Function	Connector	Onboard Type	Compatible Mating Type
Audio	J2	Hao Guo Xing Ye DF11-12S-PA66H	Hirose DF11-12DS-2C
SATA HDD Power	J13	E-CALL 0110-071-040	JST XHP-4
Front Panel Setting	J16	E-CALL 2.5 mm-pitch pin header (Male)	Dupont 2.5mm-pitch (Female)
USB 2.0	J14	Hao Guo Xing Ye DF11-8S-PA66H	Hirose DF11-8DS-2C
COM2 Serial Port	J7, J17	Hao Guo Xing Ye DF11-10S-PA66H	Hirose DF11-10DS-2C
DC Power Input	J15	Hao Guo Xing Ye WAFER396-2S-WV	JST VHR-2N
Digital I/O	J6	Dupont 2.00 mm-pitch pin header (Male)	Dupont 2.00 mm-pitch (Female)
LCD Backlight	J11	E-CALL 0110-161-040	JST PHR-4.
LVDS	J4, J8	Hirose DF20G-20DP-1V	Hirose DF20A-20DS-1C

## E. USB Power Control Bit

Function	Connector	Software Mapping
USB 3.1	CN6 (A, B)	Bit_0