



USER MANUAL

RUT955 LTE Router



Legal notice

Copyright © 2015 TELTONIKA Ltd. all rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of TELTONIKA Ltd is prohibited. The manufacturer reserves the right to modify the product and manual for the purpose of technical improvement without prior notice.

Other product and company names mentioned herein may be trademarks or trade names of their respective owners.

Attention



Before using the device we strongly recommend reading this user manual first.



Do not rip open the device. Do not touch the device if the device block is broken.



All wireless devices for data transferring may be susceptible to interference, which could affect performance.



The device is not water-resistant. Keep it dry.



Device is powered by low voltage +9V DC power adapter.

Safety information

The RUT955 router must be used in compliance with any and all applicable national and international laws and with any special restrictions regulating the utilization of the communication module in prescribed applications and environments.

You have to be familiar with the safety requirements before using the device!

Specifications	
Software	RUT955_R_XX.XX.XXX
Frequency bands*	EEE802,11b/g/n 2400 MHz, GSM/3G/4G, UMTS/HSPA+
Max. RF power	20 dBm@WiFi, 33 dBm@GSM/GPRS/EDGE, 24 dBm@LTE/WCDMA
Representative accessories specifications	
Power	AC/DC power adapter 9 V 1 A, 2 pin plug
GSM/WCDMA/LTE antenna	703-960/1710-1990/2110-2170/2500-2690 MHz, 50 Ω , VSWR \leq 2, gain** 1 dBi, omnidirectional, SMA male connector
WiFi antenna	2400-2500 MHz, 50 Ω , gain** 3dBi, VSWR \leq 2, omnidirectional, RP-SMA male connector
GPS antenna	1561-1615 Mhz, DC 3.3 V, VSWR \leq 2, active total gain** 18 dBi (typ.), linear polarization, SMA male connector

* Supported frequency bands are dependent on geographical location and may not be available in all markets.

** If an extension cable is used to attach the antenna, the antenna gain may be higher by the amount of cable attenuation. The user is responsible for the compliance with the legal regulations.



This sign on the package means that it is necessary to read the Users Manual before you start using the device.



This sign on the package means that all used electronic and electric equipment should not be mixed with general household waste.

To avoid burning and voltage caused traumas, of the personnel working with the device, please follow these safety requirements:



The device is intended for supply from a Limited Power Source (LPS) that power consumption should not exceed 15VA and current rating of over current protective device should not exceed 2A.



The highest transient over voltage in the output (secondary circuit) of used PSU shall not exceed 36V peak.



The device can be used with the Personal Computer (first safety class) or Notebook (second safety class). Associated equipment: PSU (power supply unit) (LPS) and personal computer (PC) shall comply with the requirements of standard EN 60950-1.



Do not mount or service the device during a thunderstorm.



To avoid mechanical damages to the device it is recommended to transport it packed in a damage-proof pack.



Protection in primary circuits of associated PC and PSU (LPS) against short circuits and earth faults of associated PC shall be provided as part of the building installation.

To avoid mechanical damage to the device it is recommended to transport it packed in a damage-proof pack. When using the device it should be placed so that its indicating LEDs would be visible as they inform in which working mode the device is in and if it has any working problems.

Protection against over current, short circuiting and earth faults should be provided as a part of the building installation.

Signal level of the device depends on the environment in which it is working in. In case the device starts working insufficiently, please refer to qualified personnel in order to repair this product. We recommend forwarding it to a repair center or the manufacturer. There are no exchangeable parts inside the device.

Introduction


Thank you for purchasing a RUT955 LTE router! RUT955 is part of the RUT9xx series of compact mobile routers with high speed wireless and Ethernet connections.

This router is ideal for people who'd like to share their internet on the go, as it is not restricted by a cumbersome cable connection. Unrestricted, but not forgotten: the router still supports internet distribution via a broadband cable, simply plug it in to the wan port, set the router to a correct mode and you are ready to browse.

For in-depth information on how to use and configure a RUT955 router, visit our wiki page: <http://wiki.teltonika.lt/index.php?title=RUT955>

Hardware installation

1. Remove the back panel and insert your SIM cards. Correct SIM card orientation is shown in the picture below:

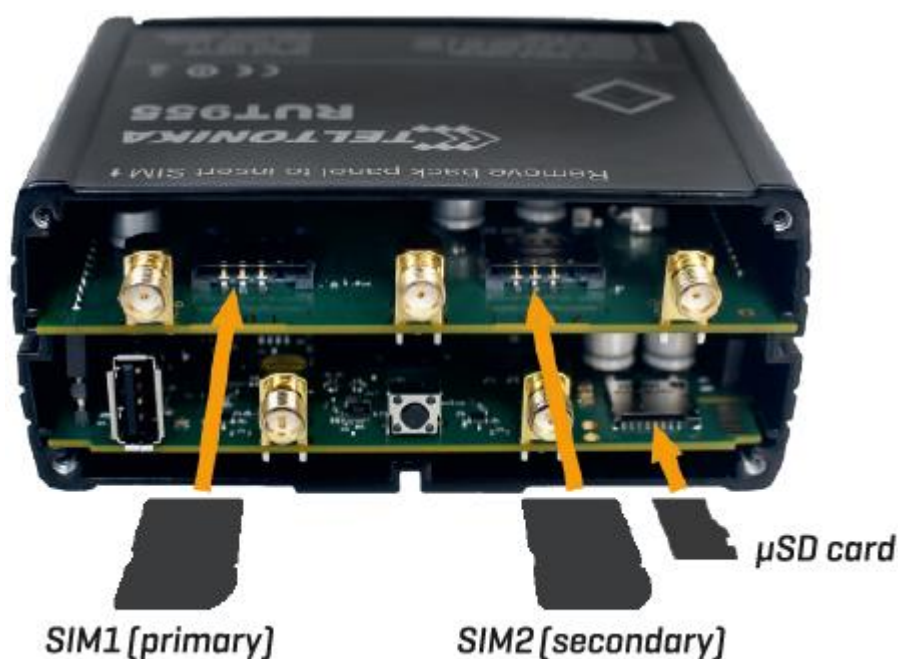

2. Attach LTE, WiFi and GPS antennas.
3. Connect the power adapter to the socket on the front of the device. Then plug the other end of the power adapter into a power socket.
4. Connect to the device wirelessly (SSID: Teltonika_Router) or use an Ethernet cable and plug it into any LAN Ethernet port.

Front and back panels

Front view

- 1 LAN Ethernet ports
- 2 WAN Ethernet port
- 3 LAN LEDs
- 4 WAN LED
- 5 RS485
- 6 Power socket
- 7 RS232 interface
- 8 Input/output connector
- 9 Power LED
- 10 Mobile connection status LED
- 11 Mobile signal strength indication LEDs




Back view

- 1 LTE antenna connectors
- 2 GPS antenna connectors
- 3 USB connector
- 4 WiFi antenna connectors
- 5 Reset button




Configure your computer (Windows)

1. Enable the wireless network connection (go to [Start > Control Panel > Network and Internet > Network and Sharing Center](#). In the left panel click [Change adapter settings](#) link. Right click on [Wireless Network Connection](#) and select [Enable](#)).

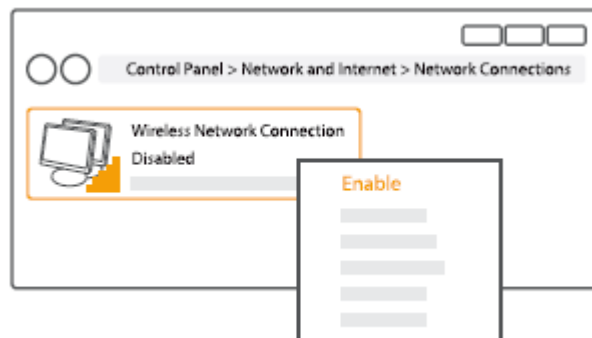


2. Setup the wireless network adapter on your computer (right click on [Wireless Network Connection](#) and select [Properties](#)). After that select [Internet Protocol Version 4 \(TCP/IP\)](#) and click [Properties](#)).

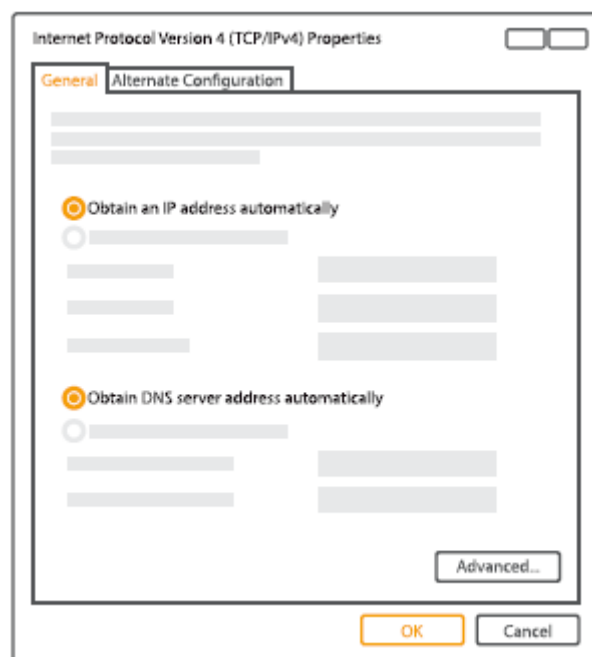


3. Select [Obtain IP address automatically](#) and [Obtain DNS server address automatically](#) if they are not selected. Click [OK](#).

4. Right click on [Wireless Network Connection](#) and click [Connect](#) to see available wireless networks.

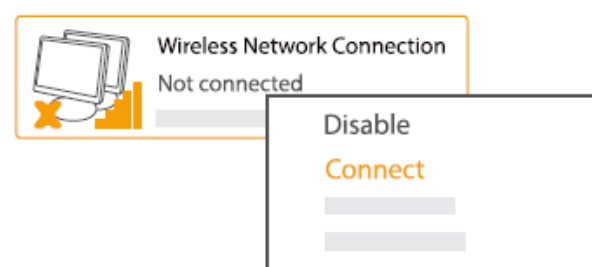


5. Choose the wireless network [Teltonika_Router](#) from the list and click [Connect](#).

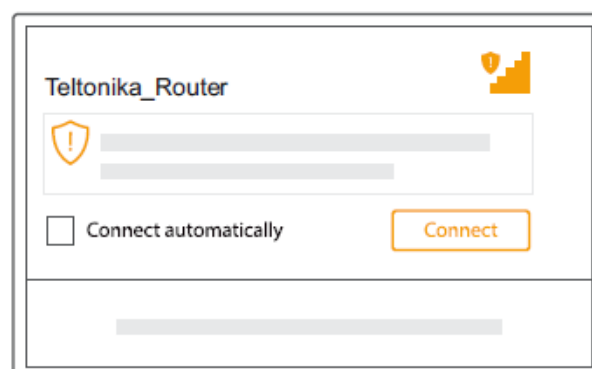

Login to device

1. To enter the routers Web interface type `http://192.168.1.1` into your internet browser's URL field.
2. Use the following parameters when prompted for authentication:

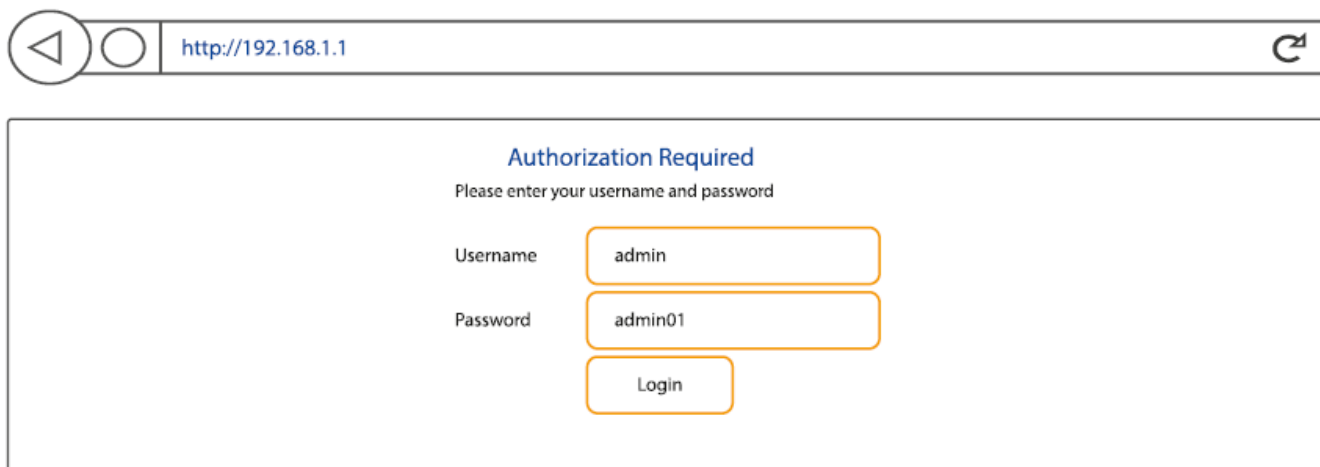


Authorization Required

Please enter your username and password

Username

Password

3. [Configuration Wizard](#) will start after logging in. It is necessary to complete [Configuration Wizard](#) to setup the router to the correct mode. You can leave default settings but it is strongly recommended that you change the default password and enable [Wireless Security](#).
4. Go to [Status > Network information](#) and pay attention to [Signal Strength](#). To maximize the performance try adjusting the antennas or changing the location of your device to achieve the best signal conditions.

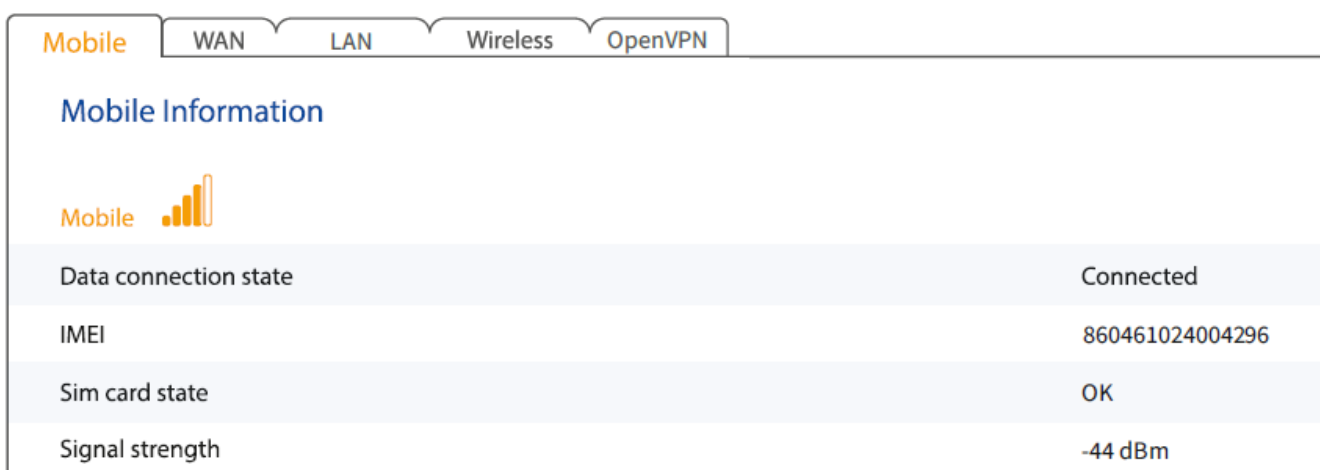

Mobile Information	
Data connection state	Connected
IMEI	860461024004296
Sim card state	OK
Signal strength	-44 dBm

LED indications

- Constant blinking (~ 2Hz) – router is turning on
- LED turned off – no 4G data connection
- LED turned on – 4G data connection

Connection status LED indication

- Green and red blinking alternatively ever 500 ms: no SIM or bad PIN
- Green, red and yellow blinking alternatively every 500 ms: connecting to GSM
- Red blinking every 1 sec: connected 2G, but no data session established
- Yellow blinking every 1 sec: connected 3G, no data session established
- Green blinking every 1 sec: connected 4G, no data session established
- Red lit and blinking rapidly while data is being transferred: connected 2G with data session
- Yellow lit and blinking rapidly while data is being transferred: connected 3G with data session
- Green lit and blinking rapidly while data is being transferred: connected 4G with data session

Signal strength LEDs

No. of lit up LEDs	Signal strength value
0	≤ -111 dBm
1	-110 dBm to -97 dBm
2	-96 dBm to -82 dBm
3	-81 dBm to -67 dBm
4	-66 dBm to -52 dBm
5	≥ -51 dBm

Specifications

Ethernet

- IEEE 802.3, IEEE 802.3u standards
- 3 x LAN 10/100Mbps Ethernet ports
- 1 x WAN 10/100Mbps Ethernet port
- Supports Auto MDI/MDIX

Wi-Fi

- IEEE 802.11b/g/n WiFi standards
- 2x2 MIMO
- AP and STA modes
- 64/128-bit WEP, WPA, WPA2, WPA&WPA2, EAP-PEAP encryption methods
- 2.401 – 2.483 GHz WiFi frequency range*
- 20dBm max WiFi TX power
- SSID stealth mode and access control based on MAC address

Hardware

- High performance 560 MHz CPU with 128 Mbytes of DDR2 memory
- 2 pin industrial DC power socket
- Attachable DIN rail adapter
- 4 pin industrial socket 2/4 wire RS485
- DB9 socket for full-featured RS232
- USB socket for external devices
- Reset/restore to default button
- 2 x SMA for LTE, 2 x RP-SMA for WiFi antenna connectors
- 1 x SMA for GPS antenna connector
- 4 x Ethernet LEDs, 1 x power LED
- 1 x bi-color connection status LED, 5 x connection signal strength LEDs
- 10 pin industrial socket for inputs/outputs:
 - 0 – 3 V digital input
 - 0 – 30 V digital galvanically isolated input
 - 0 – 24 V analog input; 30 V, 250 mA digital open collector output
 - 30 V, 250 mA digital open collector output
 - 40 V, 4 A SPST relay output

Electrical, Mechanical & Environmental

- | | |
|--------------------------|-------------------------------------|
| • Dimensions (H x W x D) | 80mm x 106mm x 46mm |
| • Weight | 265g |
| • Power supply | 100 – 240 VAC -> 9 VDC wall adapter |
| • Input voltage range | 9 – 30VDC |
| • Power consumption | < 7W |
| • Operating temperature | -40° to 75° C |
| • Storage temperature | -45° to 80° C |
| • Operating humidity | 10% to 90% Non-condensing |
| • Storage humidity | 5% to 95% Non-condensing |

**Supported frequency bands are dependent on geographical location and may not be available in all markets*

GPL

Some products of Teltonika partly contain software code developed by third parties, including software code subject to the GNU General Public License (“GPL”) version 2, version 3, GNU Lesser General Public License (“LGPL”) version 2.1 and other open source licenses.

In order to comply with the terms of the GPL, Teltonika, where applicable, offers a mail in service of a machine readable source code of the software subject to the GPL, on an optical media (CD-ROM) upon request by mail or email. Further information is provided with the relevant products or the software. You can download the free copies of the respective machine readable source code of the software which is subject to the GPL and contained in Teltonika products if you follow this internet link: <https://teltonika.lt/gpl/>

The respective programs are distributed WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the respective GNU General Public License for more details.

Please choose the model and version of your Teltonika product from the list found in the provided link in order to download the source code. You can also review and print the respective GPL license terms.

If you have any more questions or suggestions regarding GPL, please contact us at gpl@teltonika.lt

CE Declaration of Conformity



2014/35/EU, 2014/30/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://teltonika.lt/product/RUT955/>

[EN] English	Hereby, Teltonika declares that the radio equipment type RUT955 is in compliance with Directives: 2014/53/EU
[BG] Bulgarian	По този начин Teltonika декларира, че радиоустройството тип RUT955 е в съответствие с директивите: 2014/53/EU
[CZ] Czech	Tím Teltonika prohlašuje, že rádiové zařízení typu RUT955 je v souladu se směrnicemi: 2014/53/EU
[DK] Danish	Hermed erklærer Teltonika, at radioudstyrstypen RUT955 er i overensstemmelse med direktiverne: 2014/53/EU
[DE] German	Teltonika erklärt hiermit, dass das Funkgerät vom Typ RUT955 den Richtlinien 2014/53/EU entspricht
[EE] Estonian	Käesolevaga deklareerib Teltonika, et raadioseadmete tüüp RUT955 vastab direktiividele: 2014/53/EL
[GR] Greek	Με τον τρόπο αυτό, η Teltonika δηλώνει ότι ο τύπος ραδιοεξοπλισμού RUT955 συμμορφώνεται με τις οδηγίες: 2014/53/EE
[ES] Spanish	Por la presente, Teltonika declara que el equipo de radio tipo RUT955 cumple con las Directivas: 2014/53/UE
[IT] Italian	Con la presente, Teltonika dichiara che l'apparecchiatura radio tipo RUT955 è conforme alle direttive 2014/53/UE
[LV] Latvian	Ar šo Teltonika paziņo, ka radioiekārtas RUT955 tips atbilst direktīvām: 2014/53/ES
[LT] Lithuanian	Teltonika pareiškia, kad radijo ryšio įranga RUT955 atitinka direktyvas: 2014/53/ES
[HU] Hungarian	A Teltonika kijelenti, hogy a RUT955 típusú rádióberendezések megfelelnek a 2014/53/EU irányelveknek
[NL] Dutch	Hierbij verklaart Teltonika dat het RUT955-radioapparaat voldoet aan de richtlijnen: 2014/53/EU
[PL] Polish	Niniejszym Teltonika oświadcza, że urządzenie radiowe typu RUT955 jest zgodne z Dyrektywami: 2014/53/EU
[PT] Portuguese	Por este meio, a Teltonika declara que o equipamento de rádio tipo RUT955 está em conformidade com as Diretivas: 2014/53/UE
[RO] Romanian	Astfel, Teltonika declară că echipamentul radio RUT955 este în conformitate cu Directivele 2014/53/UE
[SK] Slovak	Tým Teltonika vyhlasuje, že rádiové zariadenie typu RUT955 je v súlade so smernicami: 2014/53/EÚ
[SI] Slovenian	Teltonika izjavlja, da je radijska oprema tipa RUT955 v skladu z direktivami: 2014/53/EU
[FI] Finish	Täten Teltonika vakuuttaa, että radiolaitteiden tyyppi RUT955 noudattaa direktiivejä: 2014/53/EU
[SE] Swedish	Häri förklarar Teltonika att radioutrustningstypen RUT955 överensstämmer med direktiven: 2014/53/EU
[NO] Norwegian	Hermed erklærer Teltonika at radioutstyrstypen RUT955 er i samsvar med direktivene: 2014/53/EU